

Fisher-Price®

Instructions

Model Number 72961

Silly Willy™ Bubblin' Sprinkler



Please save these instructions for future reference.


Adult assembly is required.

No tools are needed for assembly.

Bubble solution needed (included) for bubblin' fun.




One-Time Assembly

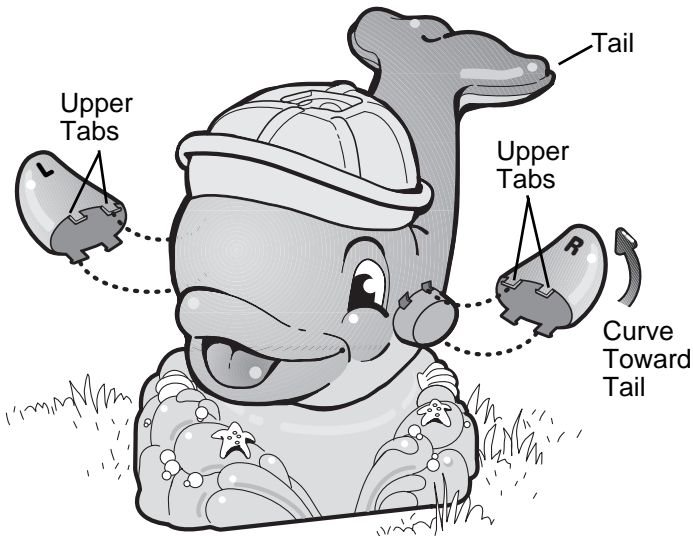

- Locate the left and right fins (marked L and R on the inside).
- Position the right fin so that it curves toward the tail of the toy.
- At an angle, fit the upper tabs on the right fin into the slots in the right side of the sprinkler.
- Insert and snap the lower tabs on the right fin into the slots in the right side of the sprinkler.
- Repeat this procedure to assemble the left fin.



Bubblin' Fun

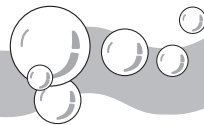


Parents, please note!

- *Not recommended for use on surfaces that can be damaged by water.*
- *Water toys sometimes get messy. Protect play surfaces before use.*
- *When filling or cleaning the sprinkler, try to avoid spilling bubble solution on the floor. It may create slippery floor conditions.*
- *Do not spill bubble solution on detergent-sensitive surfaces.*
- *Make sure your child understands:*
 - *Only bubble solution should be used in the sprinkler.*
 - *Bubble solution is not for drinking and it should be kept away from the eyes.*



Bubblin' Fun

1

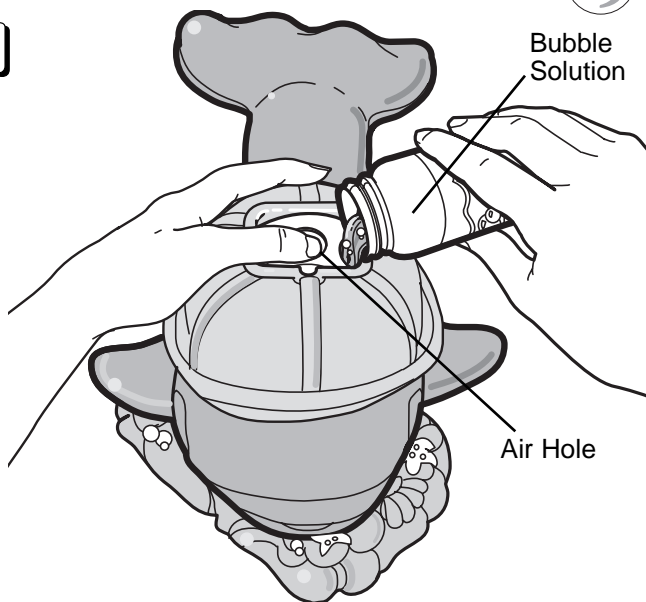

Bubble
Solution

Air Hole

- Cover the air hole (within the “blow hole”) with your finger.
- Pour about two ounces ($\frac{1}{4}$ cup) of bubble solution into the “blow hole”. For refills, use commercial bubble solution.




CAUTION

Water inside your sprinkler or garden hose, if left for an extended period of time outside in direct sunlight, can become very hot and can harm your child. We recommend that you drain the sprinkler and your garden hose after each use and store them in a cool, shaded area.


Bubblin' Fun

2

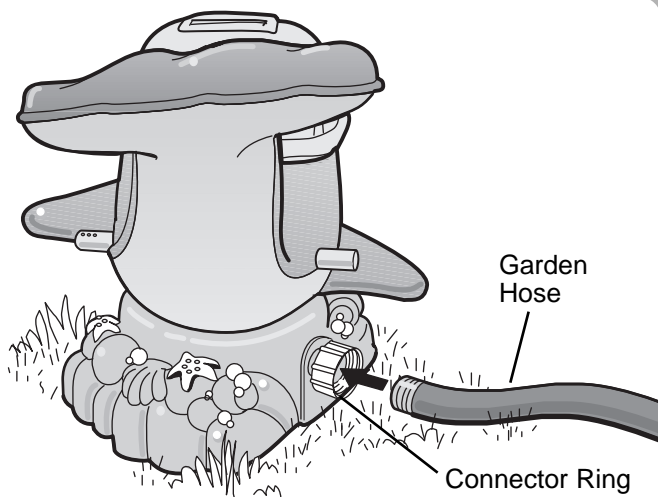

IMPORTANT! Before attaching a garden hose (not included) to the sprinkler, turn water on at the spigot for 30 seconds to clear debris from the garden hose. Turn water off.

- Insert the end of your garden hose into the connector ring at the base of the sprinkler.
- Turn the connector ring until the garden hose is securely attached to the sprinkler.

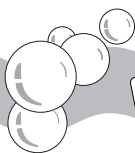

Bubblin' Fun



3



- Slowly turn water on at the spigot until the sprinkler turns, water sprays and bubbles form.
- If the sprinkler does not make bubbles:
 - Check to be sure there is enough bubble solution in the sprinkler.
 - Flush the bubble chamber of the sprinkler by running clean water, from your garden hose, into the "blow hole" for about one - two minutes. Refill the sprinkler with fresh bubble solution.



Note: We do not recommend the use of silicones or oily lubricants on this toy. As with any bubble producing toy, when even a very small amount of silicone or oily lubricants are put into or used near the bubble chamber (inside the "blow hole"), bubbles will not form.

Hint: Turn the water off at the spigot when the sprinkler is not in use.



Care

Parents, please note! Be sure to drain/rinse/clean/dry this toy thoroughly before storing.

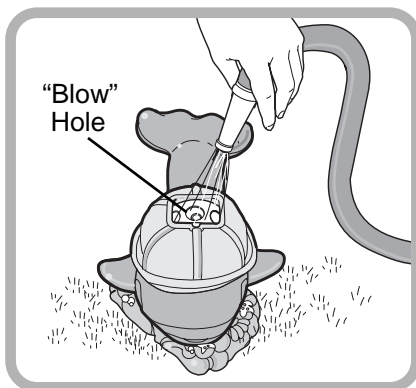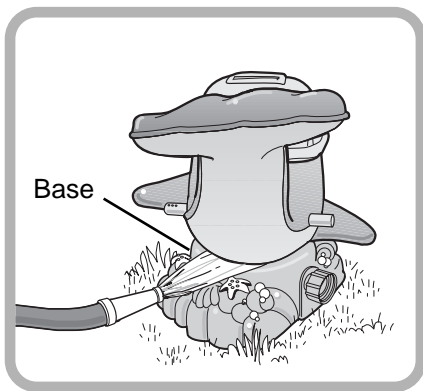

- Flush the bubble chamber (inside the "blow hole") by running clean water, from your garden hose into the "blow hole" for about one - two minutes.
- Flush the area where the whale turns on the base with clean water from you garden hose.
- Surface wash the outside of the sprinkler with a mild soap and water solution. Rinse it clean with water to remove soap residue.
- Store the sprinkler in a cool, dry area out of direct sunlight.
- Store the sprinkler indoors when the outside temperature drops below freezing.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

CANADA, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. Questions? 1-800-567-7724. **GREAT BRITAIN**, Mattel U.K., Ltd., Helpline: 01628 500303. **AUSTRALIA**, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

www.fisher-price.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©1999 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in Mexico

72961pr-0920