

Fisher-Price®

Sparkling Symphony[™] Soother

with Remote Control

Model Number 73431



Please keep this instruction sheet for future reference, as it contains important information.
Requires four "C" (LR14) **alkaline** batteries in soother and two "AA" (LR6) **alkaline** batteries in remote.
(Batteries not included.)

Tool required for battery installation: Phillips screwdriver (not included).

 
Batteries must be installed by an adult.

www.fisher-price.com

! CAUTION


Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.

Soother Features

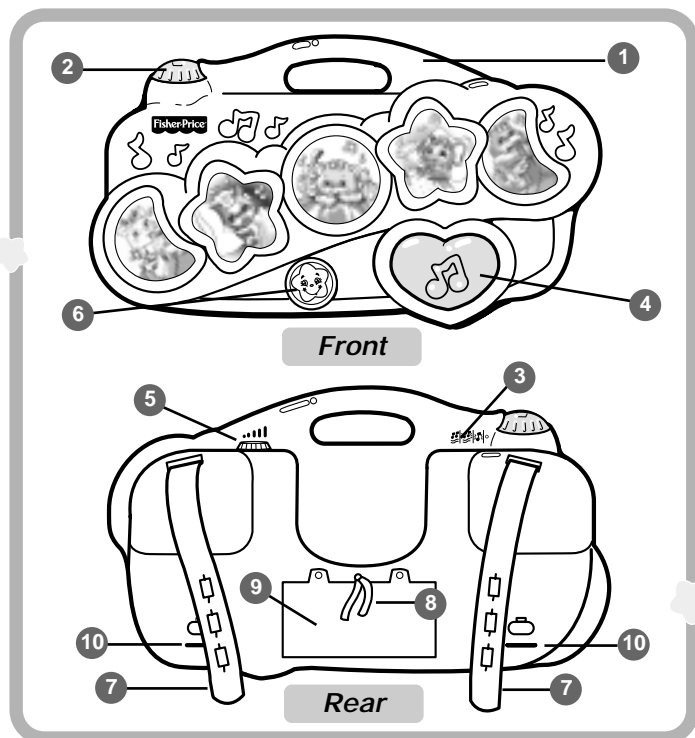


- 1 **Carry Handle** – Sturdy carry handle allows you or your child to take the soother wherever you go!
- 2 **Receiver Dome** – Blinks when it is ready to accept a signal from the remote. Dome rotates to align with the transmitter on the remote.
- 3 **Mode Switch** – Use to turn the soother ON and select any one of three play modes: Short Play, Long Play, or Long Play Without Lights and to turn the soother OFF.
- 4 **Heart Button** – Press to activate the soother when the mode switch is in any of the three play positions.
- 5 **Volume Control** – Adjust volume to a comfortable listening level.
- 6 **Speaker** – Allows baby to hear soothing lullabies or sound effects.
- 7 **Fastener Strap** – To easily attach the soother to a crib.
- 8 **Fastener Cord** – Ties to crib rail to keep the soother in place.
- 9 **Battery Compartment** – Insert four “C” **alkaline** batteries.
- 10 **Fastener Strap Storage Slot** – Slide the ends of the fastener straps into the slots to secure the straps when the soother is not attached to a crib.

 Remote Features

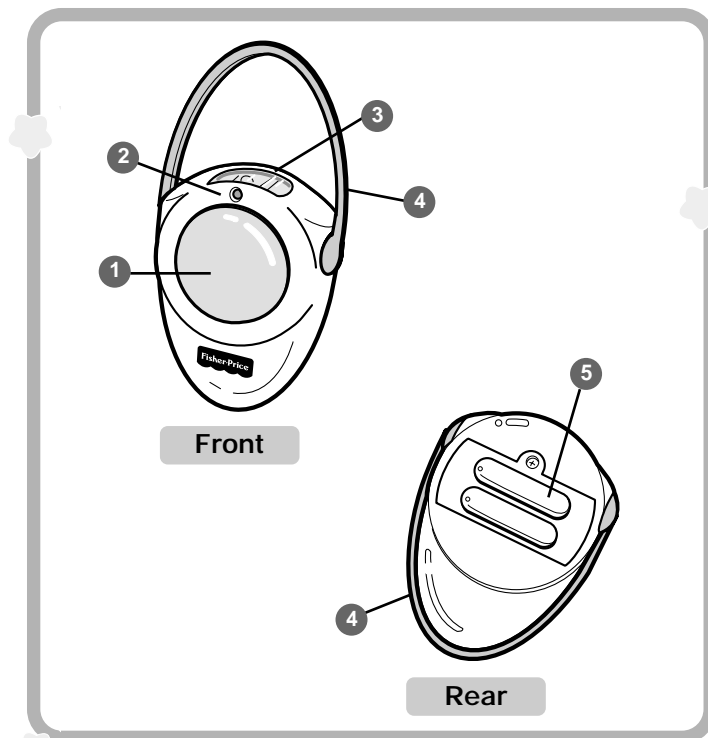

- 1 **Button** – Press to activate when the receiver on the soother is blinking.
Please note: If the receiver on the soother is not blinking, the soother is not ready to accept a signal from the remote.
- 2 **LED Signal Indicator** – Lights when the button is pressed to let you know the remote has transmitted a signal.
- 3 **Transmitter Window** – Sends a signal to the receiver on the soother.
- 4 **Handle** – Flips up so you can hang the remote on a door knob. Snaps around bottom of remote when not in use.
- 5 **Battery Compartment** – Insert two “AA” **alkaline** batteries.

 Battery Installation

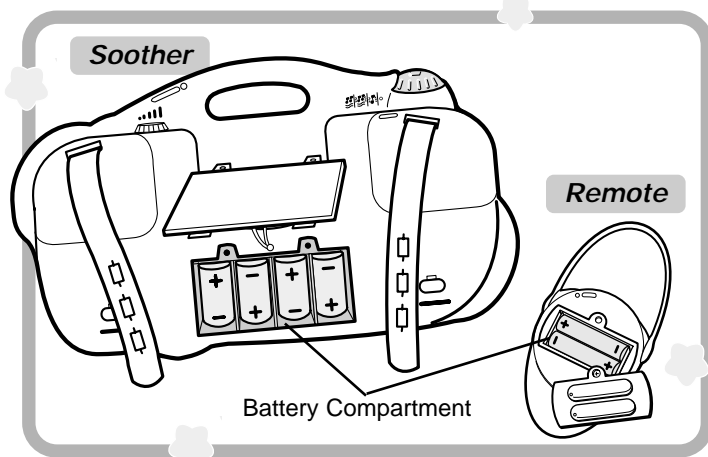

Soother

- Locate the battery compartment door on the back of the soother.
- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Open the battery compartment door and insert four “C” (LR14) **alkaline** batteries, as indicated in the battery compartment.
- Close the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

Note: Under normal use conditions, the batteries in the soother will require replacement more often than the batteries in the remote. When you notice that the sound slows down and is affected by the light display or when the sound or lights become faint, it's time to replace the batteries in the soother.

 
Remote

- Locate the battery compartment door on the back of the remote.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Open the battery compartment door and insert two “AA” (LR6) **alkaline** batteries, as indicated in the battery compartment.
- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! If the soother does not respond to use of the remote it does not necessarily mean that the battery power in the remote is low. Replace the batteries in the remote if the LED signal indicator on the remote is dim when the button is pressed. If the LED signal indicator does not light after installing new batteries in the remote, check the orientation of the batteries in the battery compartment to make sure they are properly installed.


Battery Tips

This product requires four “C” **alkaline** batteries in soother and two size “AA” **alkaline** batteries in remote for operation. For longer battery life, use only **alkaline** batteries.

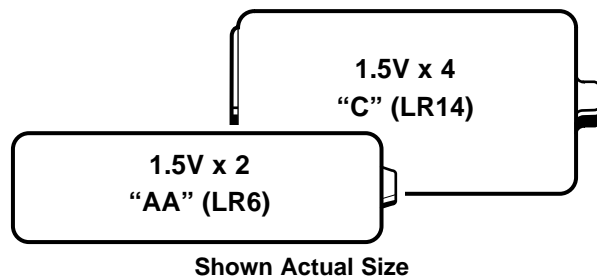


- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product and dispose of them safely. Battery leakage and corrosion can damage the product. Dispose of batteries properly.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the “Battery Installation” instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- Battery chargers used with the toy must be examined regularly for damage to the cord, plug, enclosure and other parts. In the event that such damage is found, the toy must not be used with the battery charger until the damage has been repaired.

 Attaching the Soother to a Crib

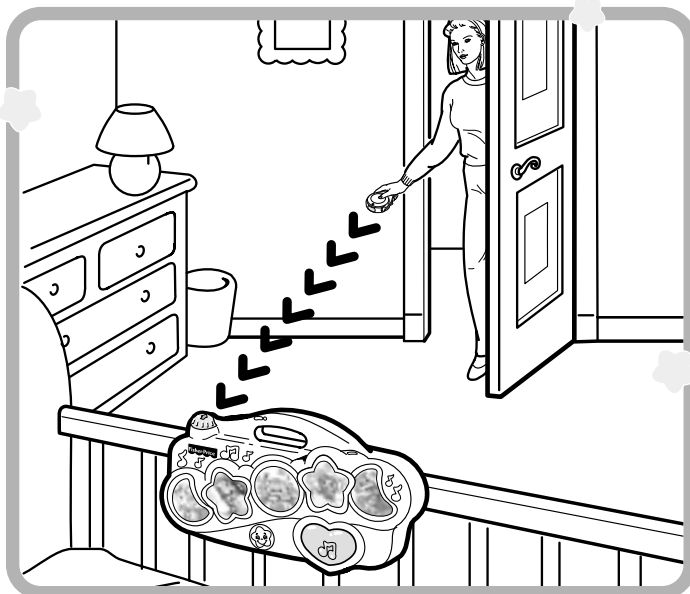

 - The receiver on the soother and the transmitter on the remote must be in a direct line and free of obstructions to function properly. Choose a location along the crib rail to attach the soother that will allow you to easily use the remote.

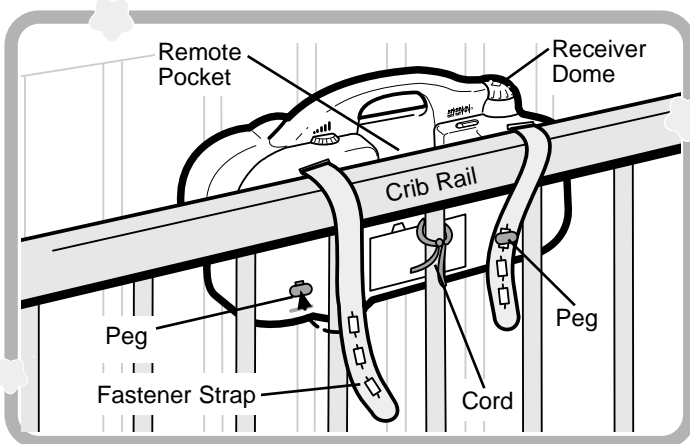


- Position the soother against the crib rail with the front of the soother facing the interior of the crib.
- Wrap the fastener straps over the top of the crib rail.
- Fit a slot in each strap over the peg on the back of the soother. **Make sure the receiver dome on the soother is above the crib rail so that the crib rail will not obstruct the direct line between the remote transmitter and the soother receiver dome.**
- Tie the cord on the back of the soother around the nearest side rail.

Soothing Music!


IMPORTANT!

 - In the unlikely event that use of the remote interferes with normal use of other remote controlled equipment, such as televisions and stereos, or use of other electric or battery powered appliances interfere with operation of this product, do not use both appliances at the same time.
- For best performance between the soother and the remote, avoid using SlumberTime Soother with Remote Control in areas of bright light. In bright natural or artificial light you may notice loss of range when using the remote. Move the soother or otherwise reduce the amount of light to improve performance.

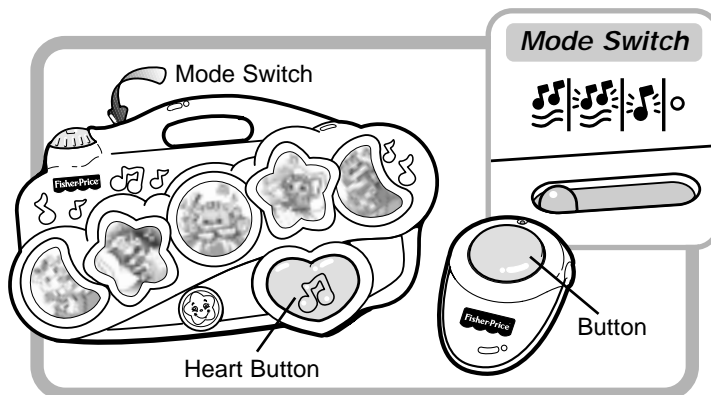

- Use the mode switch (behind the carry handle) to turn the soother ON and select any one of the three play modes: Short Play 🎵, Long Play 🎵, and Long Play without Lights 🎵. The receiver will blink to indicate it's ready to receive a signal from the remote.
- Activate the soother by pressing the heart button on the front of the soother or by pressing the button on the remote. The remote will activate the soother from one foot to as far as 20 feet away.

 Soothing Music!

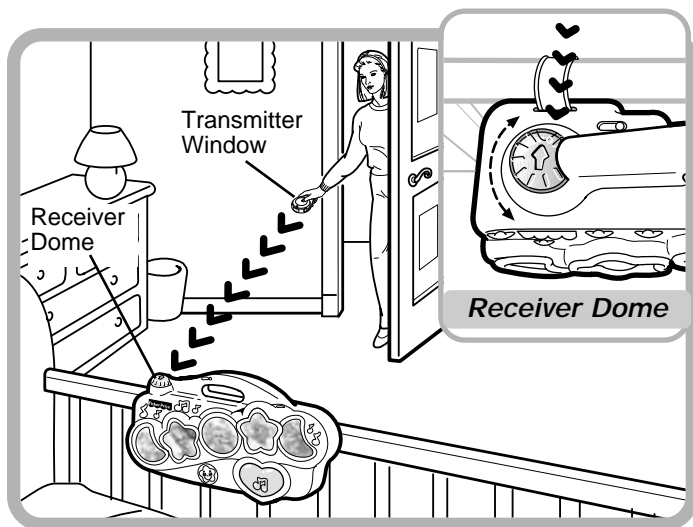

IMPORTANT! When using the remote, make sure that the arrow on the soother's receiver dome is pointing towards the transmitter on the remote. **For best results, make sure the receiver dome is above the crib rail so that the crib rail will not obstruct the direct line between the remote transmitter and the soother receiver dome. Rotate the receiver dome so that the arrow on the dome points to the area from which you're most likely to use the remote.** For example, if you'll most often be using the remote from the doorway of the nursery, make sure that the arrow on the receiver dome is pointing towards the doorway and that the path between the receiver and the doorway is free from obstructions.

Short Play Mode 🎵

Choose any one of 10 calming songs (five lullabies and five classical tunes). The song plays to a gentle light display featuring cute crib friends.

- Press the button on the soother or the remote to play the first song and start the gentle light display. To skip to a different tune, press the button to stop the first song. Press the button again to start the second selection. Keep pressing the button to cycle through all 10 songs.
- When the selected song ends, the receiver remains active and will blink for up to 30 minutes. Press the button on the soother or the remote to start the next tune. After approximately 30 minutes without activation, the receiver times-out and will stop blinking. Press the heart button on the soother to restart the first song and light display and reactivate the remote. Or, to reactivate the remote without restarting the music and light display, move the mode switch.

Long Play Mode 🎵

 
Plays a medley of 10 different relaxing lullabies and classical tunes for approximately 10 minutes to a gentle light display featuring cute crib friends.

- Press the button on the soother or remote at any time during play to stop the music and light display.
- When the medley ends, the receiver remains active and will blink for up to four hours. Press the button on the soother or the remote to restart the medley. After approximately four hours without activation, the receiver times-out and will stop blinking. Press the heart button on the soother to restart the medley and light display and reactivate the remote. Or, to reactivate the remote without restarting the music and light display, move the mode switch.

Long Play Mode without Lights 🎵


Operates the same and plays the same musical medley as the regular long play mode but without lights.

Take-Along Fun

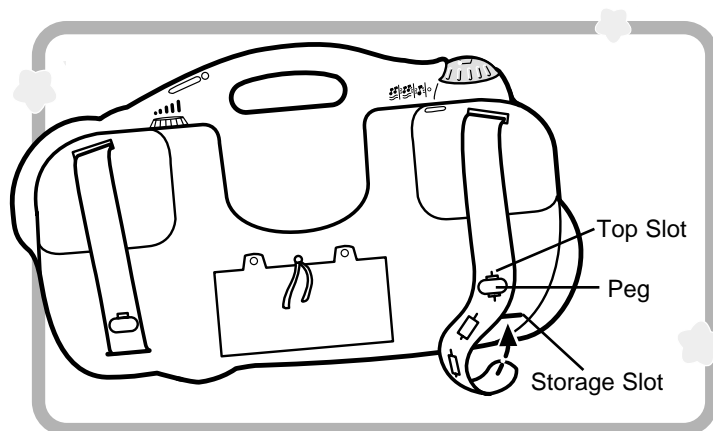

- This toy is portable for take-along fun and can be used long after your child outgrows the crib!
- Fit the top slot in each strap over the peg on the back of the soother.
- Fit the end of each strap into each storage slot in the back of the soother to secure the strap ends.

Care

- Always turn the mode switch to the OFF position  when the soother is not in use.
- Do not leave the remote face down or in a drawer or toy box. Light pressure on the remote button can activate the remote and drain the batteries.
- To clean, wipe the surface of the soother and remote with a damp cloth. Do not immerse the soother or remote.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500303.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.