

Fisher-Price®

LEARNING ▲ PATTERNS™

Changing Sensations Mobile™

Product Number: 73478



**Please keep this instruction sheet for future reference,
as it contains important information.**

Requires four "AA" (LR6) alkaline batteries (not included).

Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).

Discover what's possible™... www.fisher-price.com

 
Parts

CAUTION


- Possible entanglement injury, keep out of baby's reach.
- Remove mobile from crib or playpen when baby begins to push up on hands and knees.

IMPORTANT!


- A crib mobile is intended for visual stimulation and not to be grasped by a child.
- Always attach by all provided fasteners (clamp) tightly to a crib or playpen according to the instructions. Check frequently.
- Do not add additional strings or straps to attach to a crib or playpen.




Clamp

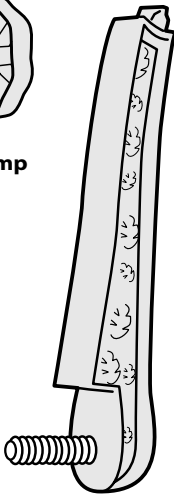

Lower Arm

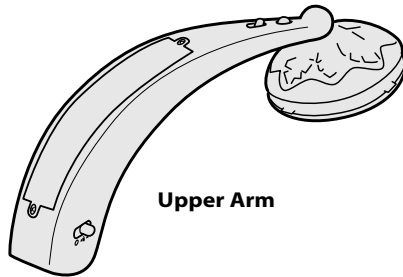

Upper Arm

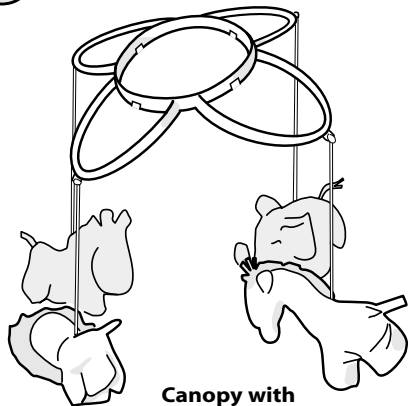


Canopy with
Soft Toys



#6 x 1/2" Screw
Shown Actual Size

Battery Installation and Tips

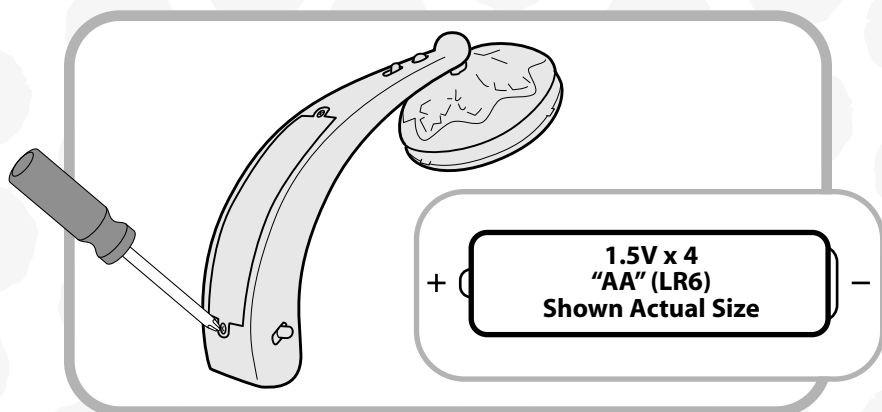

- Locate the battery compartment door on the upper arm of the mobile.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.



Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Tips:


- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Assembly

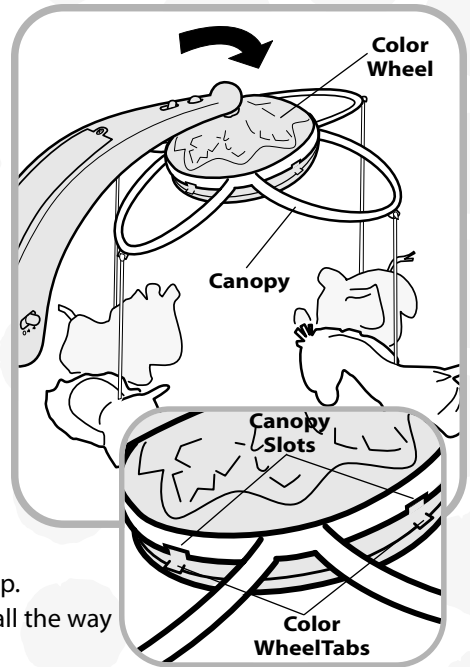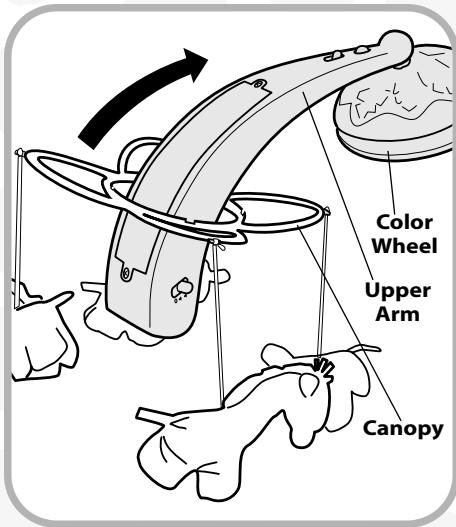


- Position the canopy so that it curves up.
- Slide the canopy onto the upper arm all the way to the color wheel as shown.
- Rotate the canopy down onto the color wheel.
- Align the canopy slots with the color wheel tabs. Press the canopy onto the color wheel to fit into place.

Attaching the Mobile to a Crib

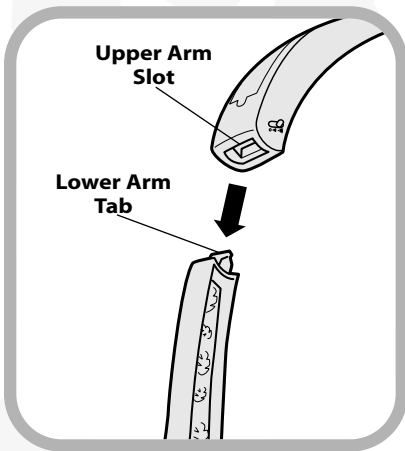


- Fit the slot in the upper arm onto the tab on the lower arm. Press firmly to “snap” and join the two parts.
- To be sure these parts are secure, try to pull the upper and lower arms apart. If the arms separate, repeat this assembly step while being sure to press the parts **firmly** together.

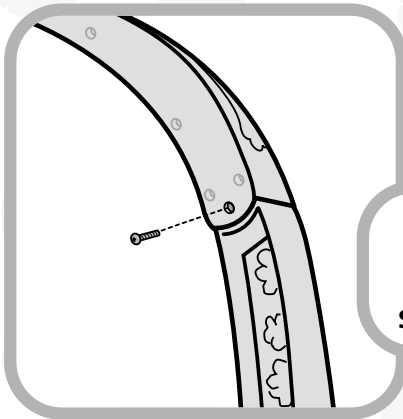

- Insert the #6 x 1/2" screw into the hole in the upper arm as shown. Tighten the screw with a Phillips screwdriver. Do not over-tighten.




#6 x 1/2" Screw
Shown Actual Size

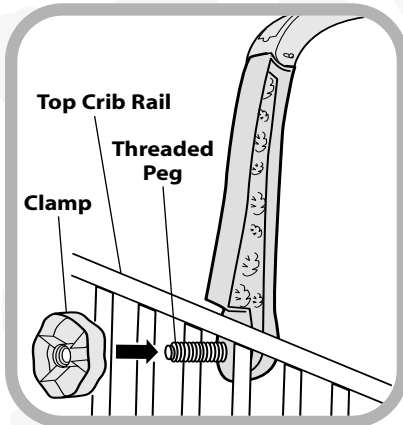


- Fit the mobile against the top crib rail so that the end of the threaded peg extends out of the crib.
- Fit the clamp onto the threaded peg and turn the clamp clockwise to secure the mobile to the crib rail. Do not over-tighten the clamp.


Use

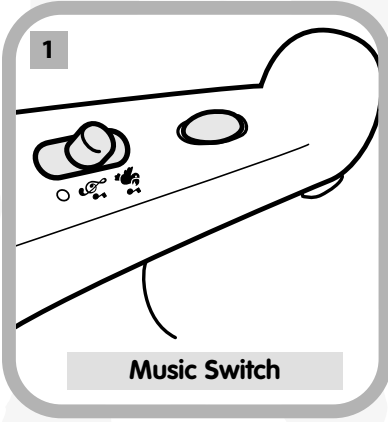

- Locate the music switch on the upper arm.
- Slide the switch to Jungle Style Music 🎵; Traditional Lullabies 🎵 or ○ to turn music off.

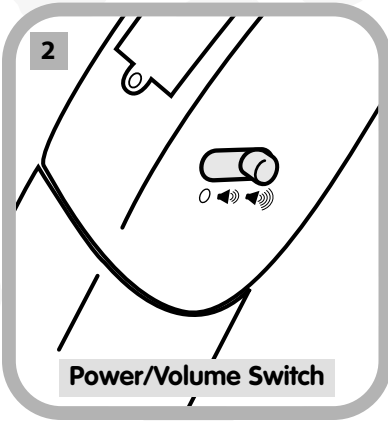

- Locate the power/volume switch on the mobile upper arm.
- The switch has three positions: off ○; on with low volume 🔊 and on with high volume 🔊.
- Slide the power/volume switch to the off position ○ when not in use.

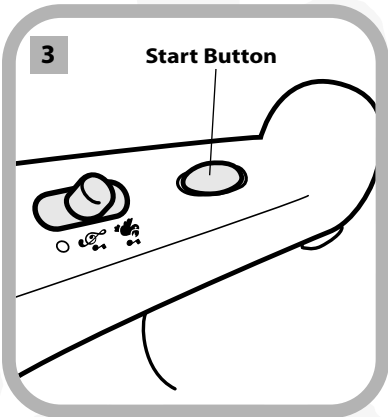

- Locate the start button on the upper arm.
- Press the start button to activate the mobile.
- The soft animal toys slowly spin. The color wheel revolves to display stimulating patterns and music plays (if selected).
- The mobile will play for approximately five minutes.
- To restart the mobile, press the start button again.

Care

- Surface wash only. Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.