

Fisher-Price®

www.fisher-price.com

73478



Please keep this instruction sheet for future reference, as it contains important information.

Requires four "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for battery installation:
Phillips screwdriver (not included).

Consumer Information

WARNING

Possible entanglement injury:

- Keep out of baby's reach.
 - Remove mobile from crib or playpen when baby begins to push up on hands and knees.
 - This product will not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.
-
- Use as a mobile from birth to 5 months.
 - A crib mobile is intended for visual stimulation and not to be grasped by the child.
 - Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303;
www.service.mattel.com/uk.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

 
Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2007 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.


Parts

CAUTION


This product contains small parts in its unassembled state.
Adult assembly is required.




Clamp

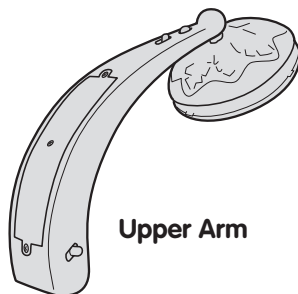

Upper Arm

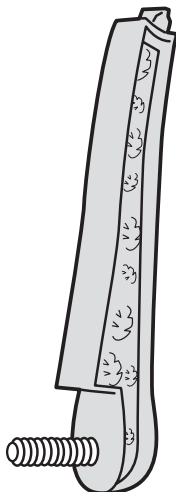

Lower Arm

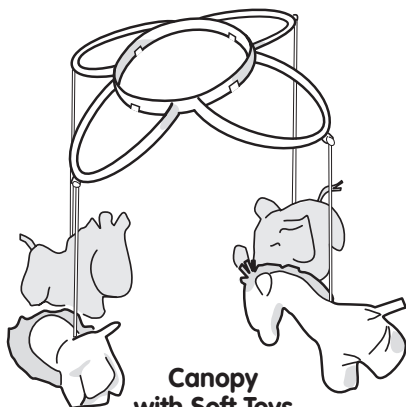


Canopy
with Soft Toys



#6 x 1/2" Screw
Shown Actual Size

Note: Tighten and loosen the screw with a Phillips screwdriver. Do not over-tighten screw.

Battery Installation

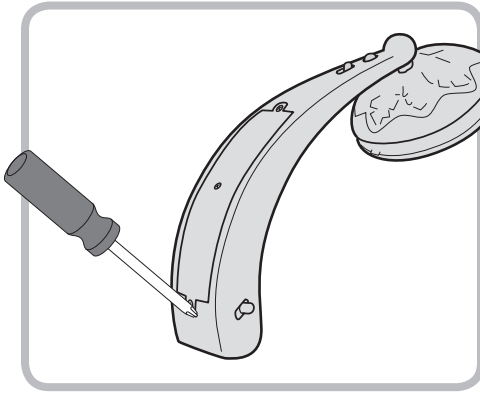

- Locate the battery compartment door on the upper arm of the mobile.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four “AA” (LR6) **alkaline** batteries, as indicated inside the battery compartment.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds from this toy become faint or stop, it’s time for an adult to change the batteries!



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information




In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembly




- Position the canopy so that it curves up.
- Slide the canopy onto the upper arm all the way to the color wheel as shown.

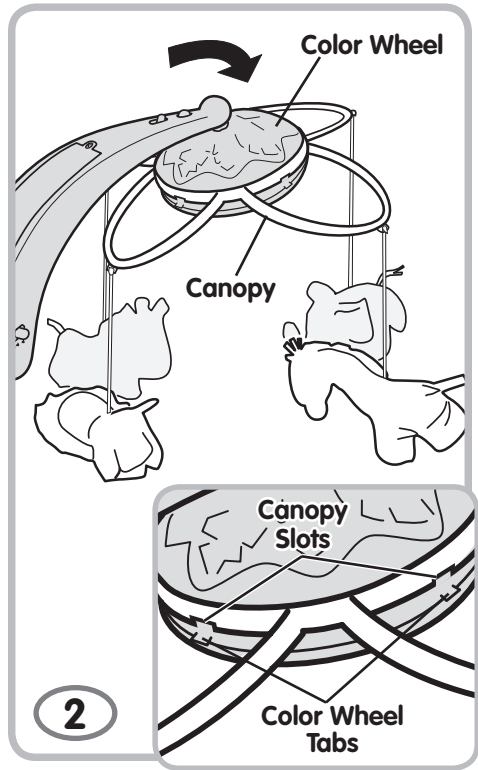


- Rotate the canopy down onto the color wheel.
- Align the canopy slots with the color wheel tabs. Press the canopy onto the color wheel to fit into place.


Attaching the Mobile to a Crib

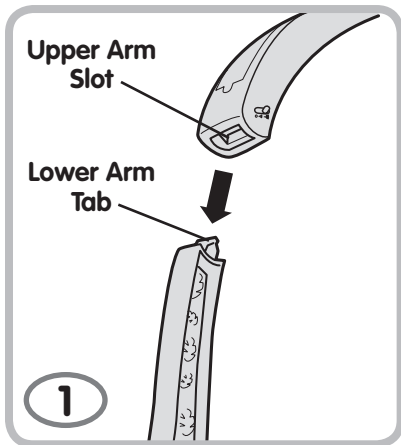

- Fit the slot in the upper arm onto the tab on the lower arm. Press firmly to “snap” and join the two parts.
- To be sure these parts are secure, try to pull the upper and lower arms apart. If the arms separate, repeat this assembly step while being sure to press the parts firmly together.

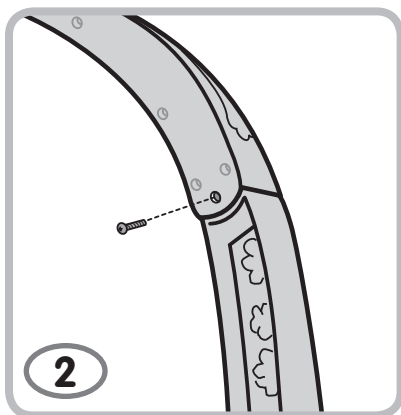


- Insert the #6 x 1/2” screw into the hole in the upper arm as shown. Tighten the screw with a Phillips screwdriver. Do not over-tighten.

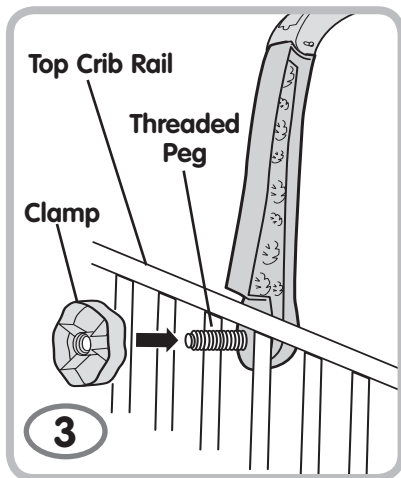


- Fit the mobile against the top crib rail so that the end of the threaded peg extends out of the crib.
- Fit the clamp onto the threaded peg and turn the clamp clockwise to secure the mobile to the crib rail. Do not over-tighten the clamp.


Use

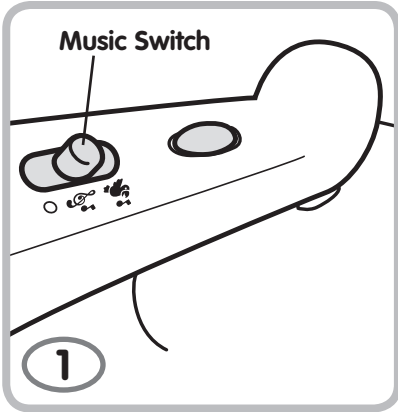

- Locate the music switch on the upper arm.
- Slide the switch to Jungle Style Music 🎵; Traditional Lullabies 🎵 or ○ to turn music off.

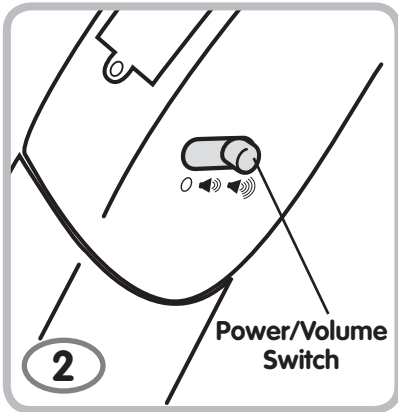

- Locate the power/volume switch on the mobile upper arm.
- The switch has three positions: off ○; on with low volume 🗣️ and on with high volume 🗣️🗣️.
- Slide the power/volume switch to the off position ○ when not in use.

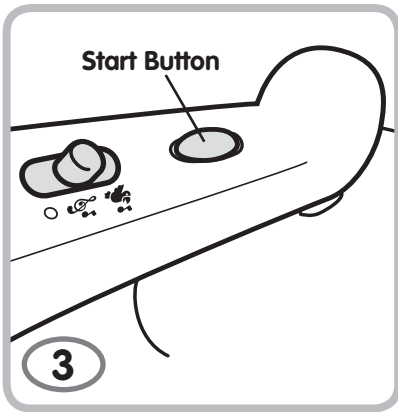

- Locate the start button on the upper arm.
- Press the start button to activate the mobile.
- The soft animal toys slowly spin. The color wheel revolves to display stimulating patterns and music plays (if selected).
- The mobile will play for approximately five minutes.
- To restart the mobile, press the start button again.

Care

- Surface wash only. Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.