

**Fisher-Price®**

**Baby  
Smartronics™**

**Storybook  
Rhymes**



**Model Number 73769**

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "AAA" batteries (included).

 
 
Adult assembly is required for battery replacement.

Tool required for battery replacement:  
Phillips screwdriver (not included).

Discover what's possible™...[www.fisher-price.com](http://www.fisher-price.com)

# Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AAA" (LR03) batteries.

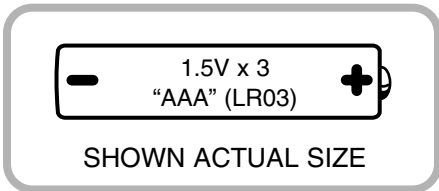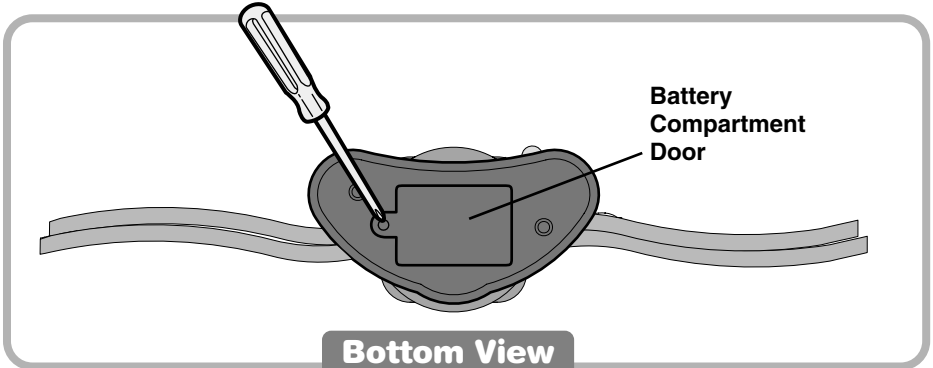

- Locate the battery compartment door on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries, as indicated inside the battery compartment.


***Hint:*** We recommend using **alkaline** batteries for longer life.

- Close the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!

## Power/Volume Switch
 
### Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

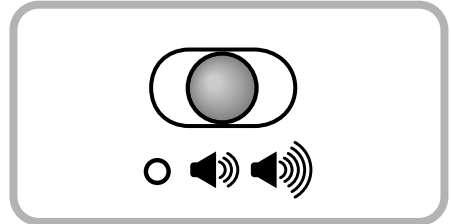

- Locate the power/volume switch on the front of the toy.
  - The switch has three positions: off **O**; on with low volume **◀** and on with high volume **▶**.
- Hint:** *If your child is not actively playing with this toy, it turns off automatically (sleep mode).*
- Slide the power/volume switch to the off position **O** when not in use.

# Let's Learn

 
- Open the book and the friendly bookworm sings a portion of the nursery rhyme on the pages shown. Light-up hands highlight the page being read.
- Press the nose to hear the bookworm sing a portion of the nursery rhyme on the left page followed by music. Press again to hear about the right page.
- When all the pages are closed, press the Numbers, Colors or Letters buttons to hear singing and music or press the nose for a friendly greeting.

## Letters Button

Press to learn about an object on the left page and the letter it begins with.

**“B - Boat”**

Press again to learn about the right page.

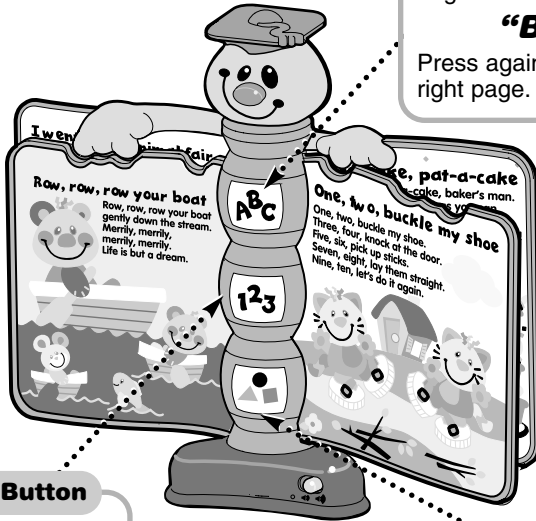

## Numbers Button

Press to learn how many objects are on the left page then a fun sound effect.

**“Three Boats-  
Ding Ding”**

Press again to learn about the right page.

## Colors Button

Press to learn the color of an object on the left page.

**“Red Boats”**

Press again to learn about the right page.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Do not drop this toy on a hard surface.

## FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Consult the dealer or an experienced radio/TV technician for help.
- Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# Consumer Information

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. **Great Britain:** telephone **01628 500302**.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.



Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.  
©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.