



Baby Basketball



Model Number 74069

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver (not included).

Requires three "AA" batteries for operation (included).

Fisher-Price®

Discover what's possible™... www.fisher-price.com


Parts

Note: For best performance, we recommend replacing the batteries that came with this toy, with three, new “AA”(LR6) alkaline batteries.




#8 x 1½" Screw - 2
SHOWN ACTUAL SIZE


Net

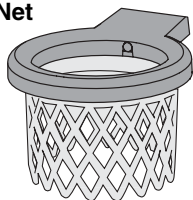


Backboard

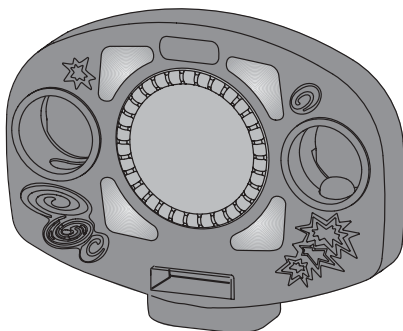


Upper Chute

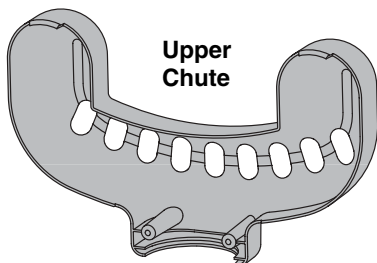


Post

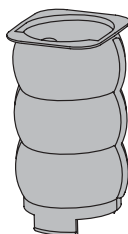

Base

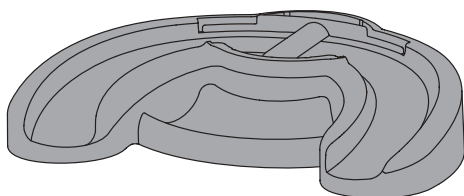

Lower Chute

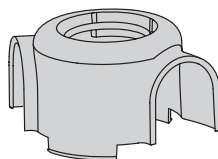


CAUTION

This product contains small parts in its unassembled state.
Adult assembly is required.

Assembly

1

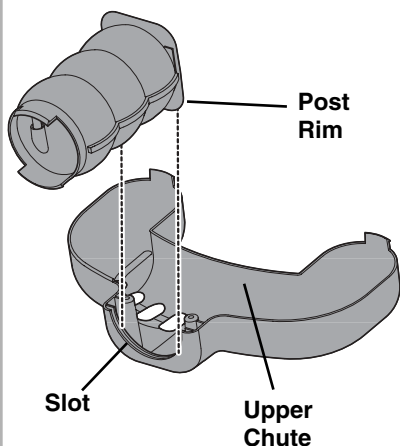


- Position the upper chute so that the open side is up.
- Slide the rim of the post into the slot in the upper chute.

Hint: The post can only be assembled to the upper chute one way. If the post rim will not fit in the upper chute slot, turn the post over and try again.

- Push the post rim down firmly into the slot.


2

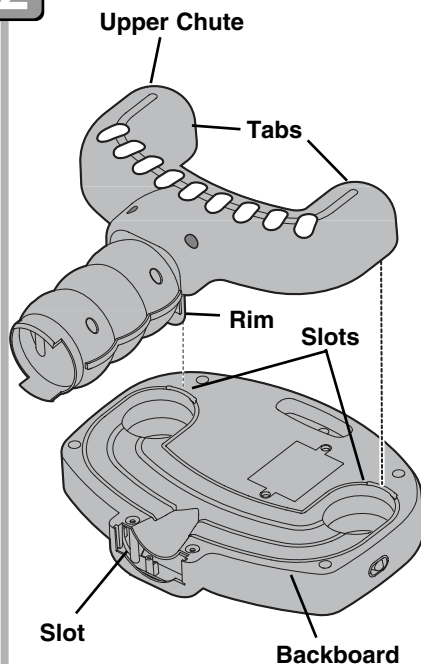

- Place the backboard face down.
- Fit the rim on the post into the slot in the backboard. Make sure the tabs on the upper chute fit into the slots in the backboard.


Assembly

3

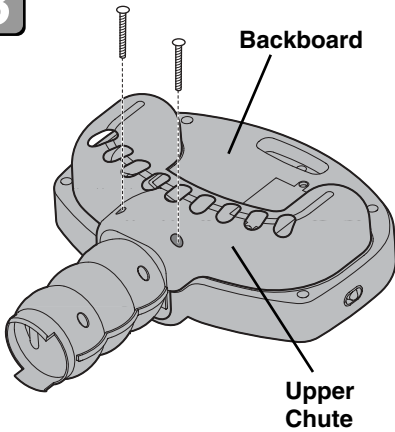

- Insert two screws through the upper chute and into the backboard. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

4

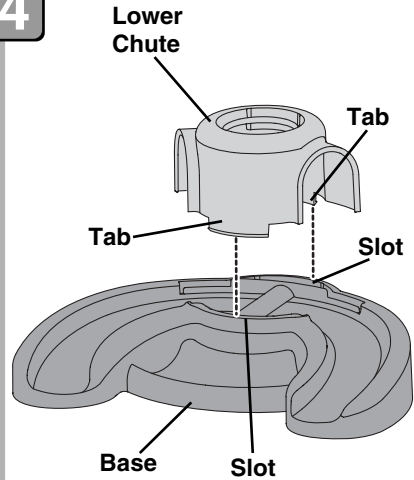


- Position the base on a flat surface.
- Insert and snap the tabs on the lower ball chute into the slots in the base.

Hint: The lower ball chute can only be assembled to the base one way. If the lower ball chute tabs do not fit in the slots in the base, turn the lower ball chute around and try again.

Assembly


5

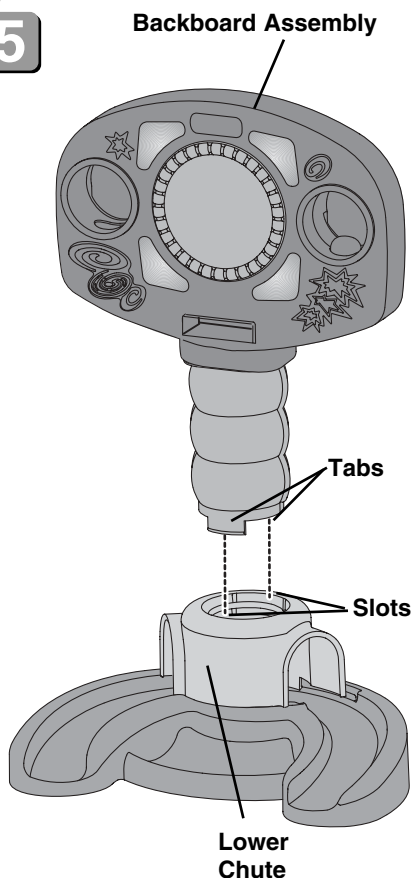

- Insert and snap the tabs on backboard assembly into the slots in the lower chute.

Hint: The backboard assembly can only be assembled to the lower chute one way. If the backboard assembly tabs do not fit in the slots in the lower chute, turn the backboard assembly around and try again.



6

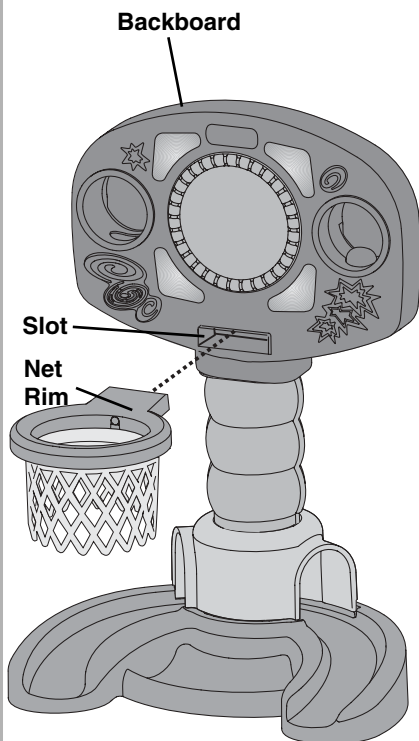

- Insert and snap the net rim into the slot in the backboard.

One-time assembly is now complete.

Battery Replacement

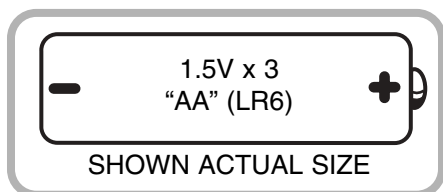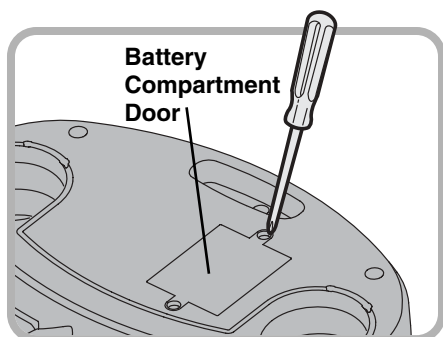

Battery Tips


- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.




- Locate the battery compartment on the backboard. Loosen the screws in the battery compartment door with a Phillips screwdriver. Lift to remove the battery compartment door.
- Remove the dead batteries and throw them away.
- Insert three "AA" (LR6) **alkaline** batteries as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to replace the batteries!

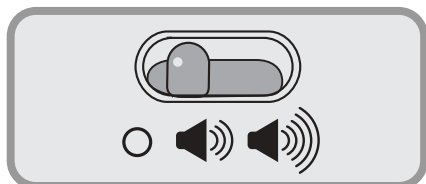Power/Volume Switch




- Locate the power/volume switch on the side of the backboard.
- Slide the power/volume switch to on with low volume ; or on with high volume ; or off .

Let's Play!


Shoot some hoops, fit the ball through the holes in the backboard or push the net down for music, sound effects and a twinkling light display!



When baby makes a basket, listen for cool sound effects and a light display.

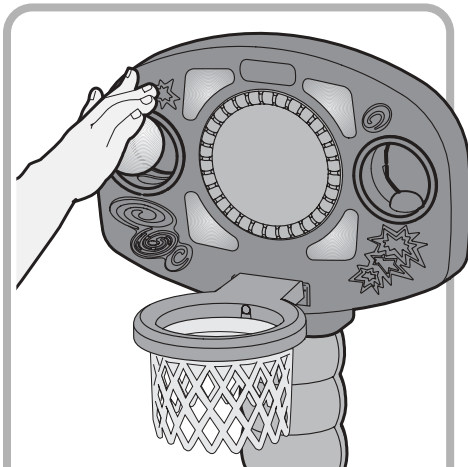

Baby can fit a ball through either hole in the backboard for music, sound effects and lights. Watch which hole the ball comes out in the base!

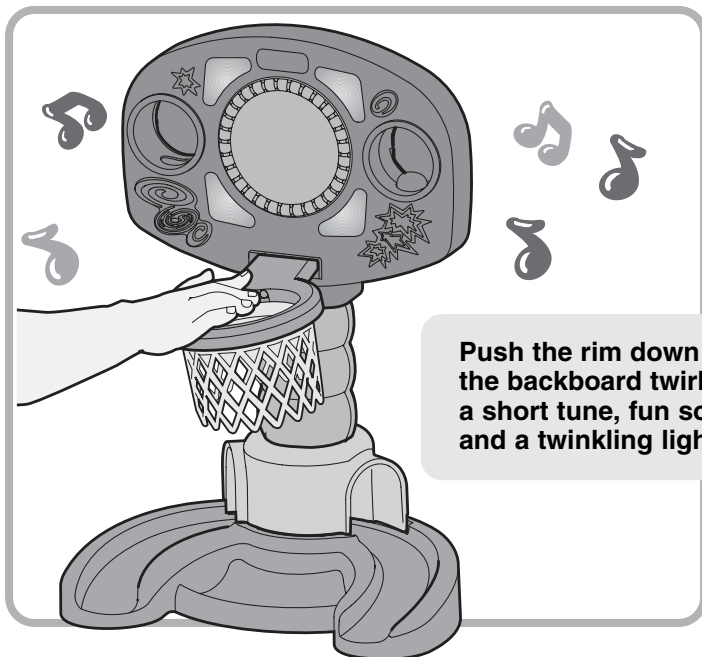

Push the rim down and watch the backboard twirl along with a short tune, fun sound effects and a twinkling light display!

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Do not drop this toy on a hard surface.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario, L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia., Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc., All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in Mexico

74069pr-0920