



# Baby Baseball



## Model Number 74074

Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required to install batteries.



Tool needed for battery installation: Phillips Screwdriver (not included).

Requires three "AA" (LR6) **alkaline** batteries for operation  
(not included).

**Fisher-Price®**

Discover what's possible™... [www.fisher-price.com](http://www.fisher-price.com)

# Battery Installation

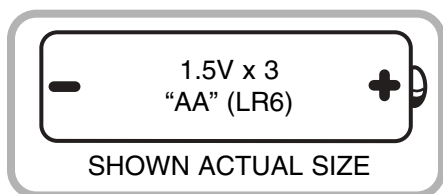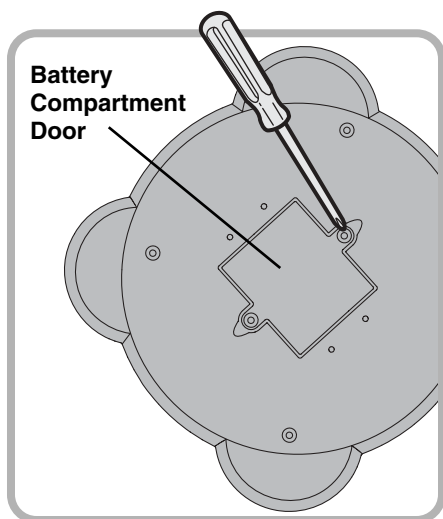

- Locate the battery compartment on the base of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Lift to remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries as indicated inside the battery compartment.



**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

## Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

# Play Ball!

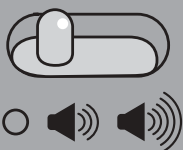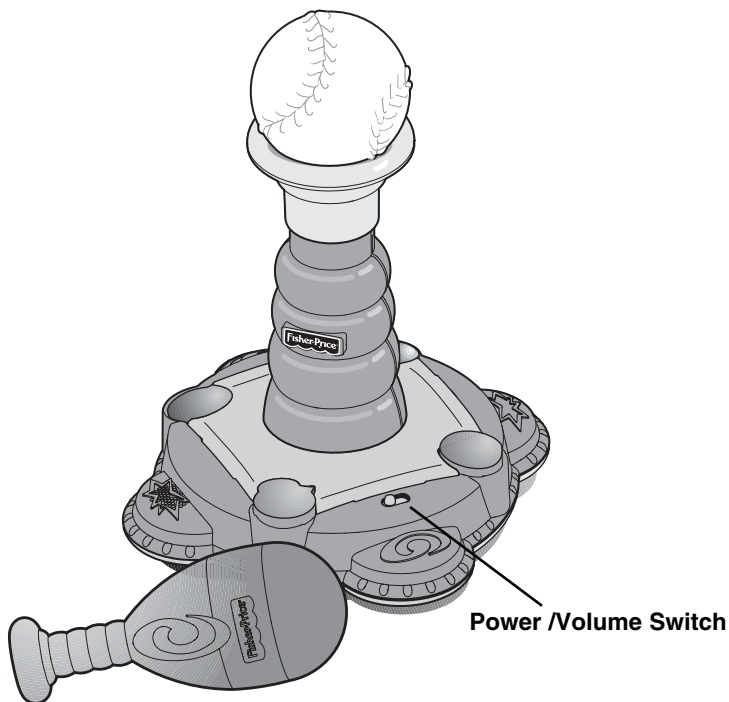


**Power/Volume Switch**

- Locate the power/volume switch on the base.
- Slide the power/volume switch to on with low volume ; on with high volume ; or off .


***Hint:*** Rock the base to hear sounds and see lights.

# Pretend Hitting for the "Beginner"

1

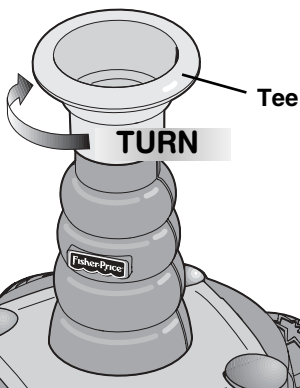


2

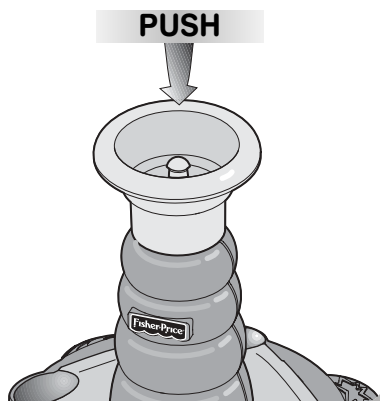


- Turn the tee clockwise to unlock it.
- Now, push the tee down to secure it in place.

3

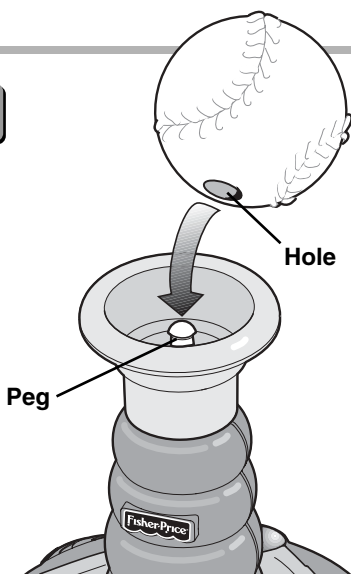


4

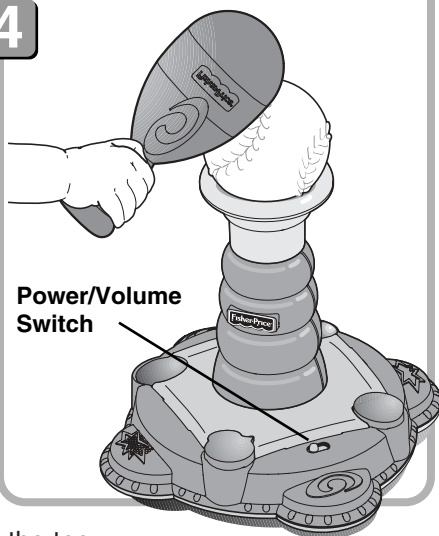


- Fit the hole in the ball to the peg inside the tee.
- When baby taps the ball and rocks the base, baby enjoys a short tune, fun sound effects and a twinkling light display!

# Real Hitting for the "Pro"

1

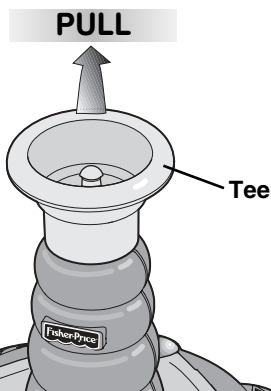


2

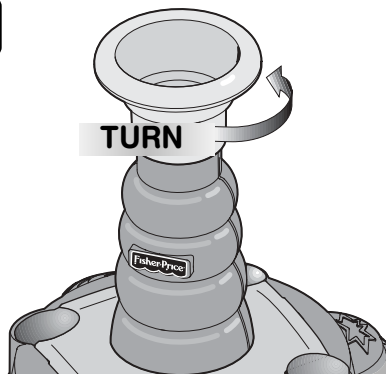


- Pull the tee up.
- Now, turn the tee counter-clockwise to lock it into place.

3

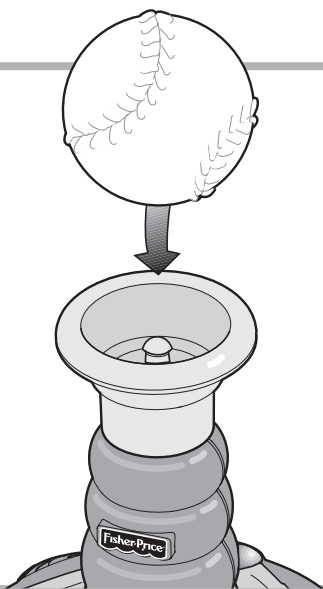

4

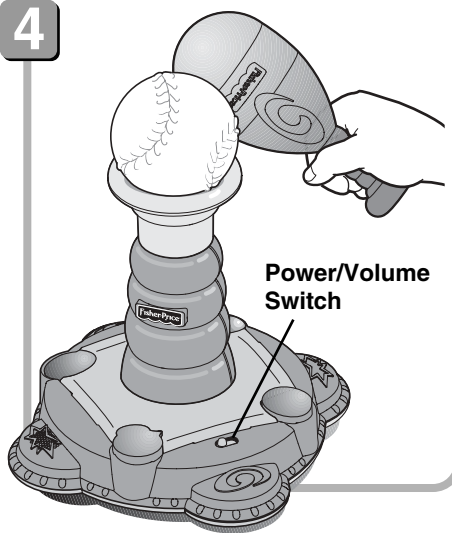

- Place the ball on the tee.
- When baby hits the ball off the tee, the base rocks and baby enjoys upbeat tunes, fun sound effects and a twinkling light display!

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Do not drop this toy on a hard surface.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

#### For other countries, outside the United States:

**Canada:** call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario, L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia., Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.