



Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Requires four "C" (LR14) **alkaline** batteries for the mobile
and two "AA" (LR6) **alkaline** batteries for the remote control
(batteries not included).

Tool required for battery installation:
Phillips screwdriver (not included).

Consumer Information



WARNING

Possible entanglement injury.

- Keep out of baby's reach.
 - Remove mobile from crib or playpen when baby begins to push up on hands and knees.
 - This product will not attach to all crib designs. Do not add additional strings or straps to attach to crib or playpen.
-
- The mobile may be used from birth until 5 months.
 - A crib mobile is intended for visual stimulation and is not to be grasped by a child.
 - Always attach with all provided fasteners (clamp) tightly to a crib or playpen according to the instructions. Check frequently.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)



service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

 
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.


Parts

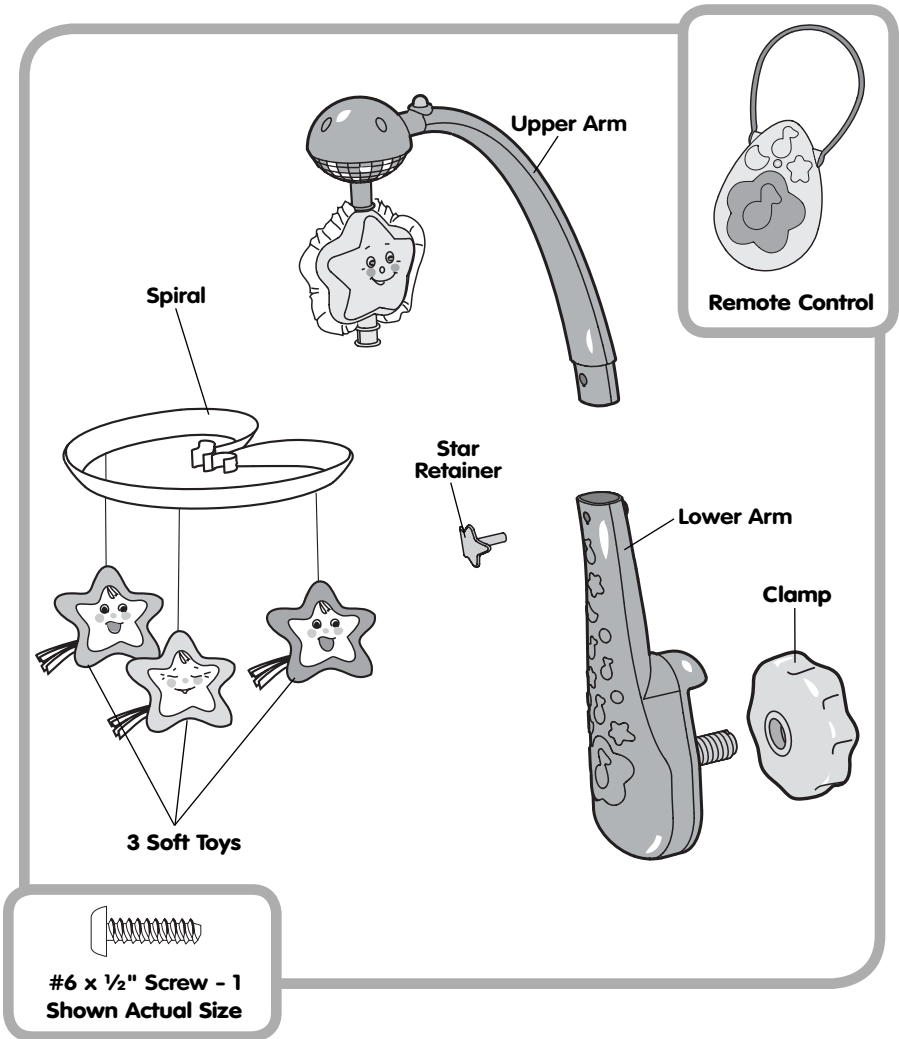

CAUTION

This toy contains small parts in its unassembled state.
Adult assembly is required.

 Battery Installation

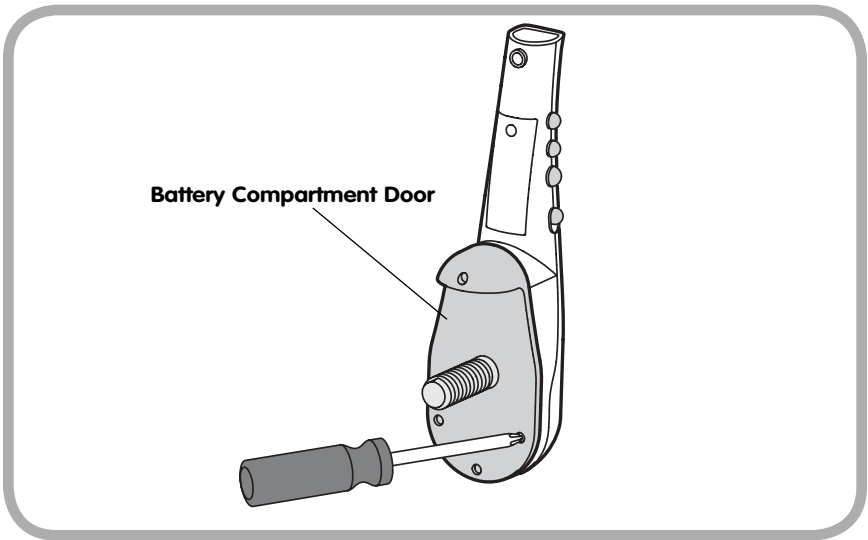


Mobile

- Locate the battery compartment door on the mobile's lower arm.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four "C" (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! Under normal use conditions, the batteries in the mobile will require replacement more often than the batteries in the remote control. When sounds or light become faint, it's time for an adult to replace the batteries in the mobile lower arm.

 Battery Installation

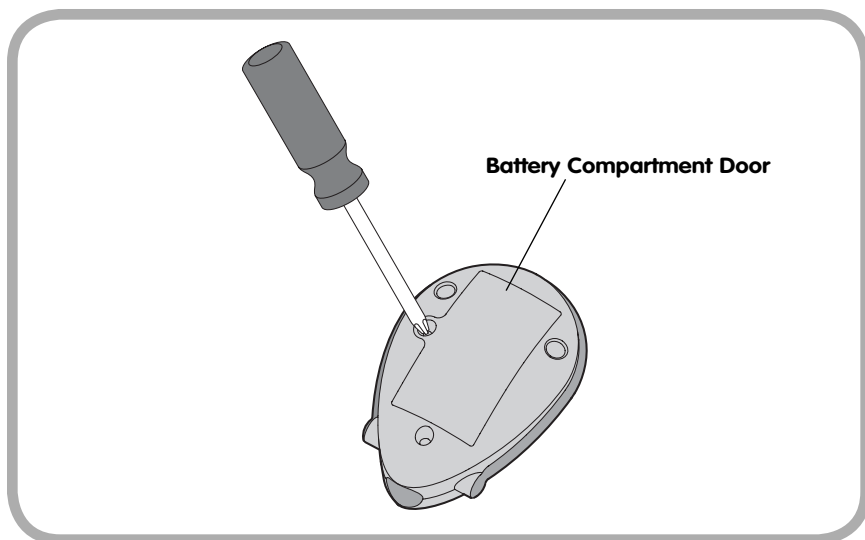


Remote Control

- Locate the battery compartment door on the back of the remote control.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two “AA” (LR6) **alkaline** batteries, as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! If the mobile does not respond to the remote control, it does not mean that the battery power in the remote control is low. Replace the batteries in the remote control if the LED signal indicator on the remote control is dim when the start button is pressed. If the LED signal indicator does not light after installing new batteries in the remote control, check the orientation of the batteries in the battery compartment to make sure they are properly installed.

 Battery Installation

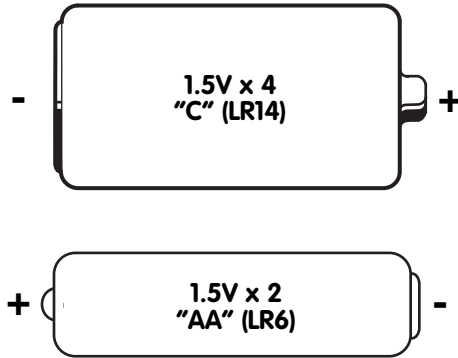

*Hint: We recommend using **alkaline** batteries for longer battery life.*

 
Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


Assembly

1

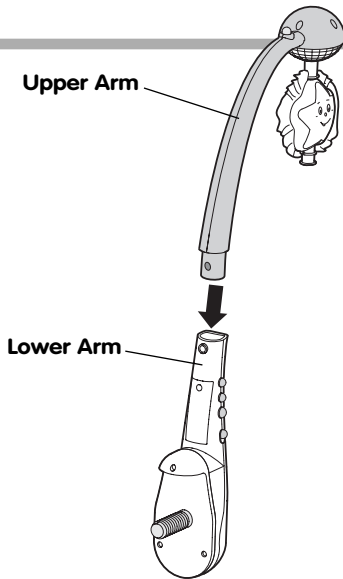

- Fit the upper arm into the lower arm.

 
2

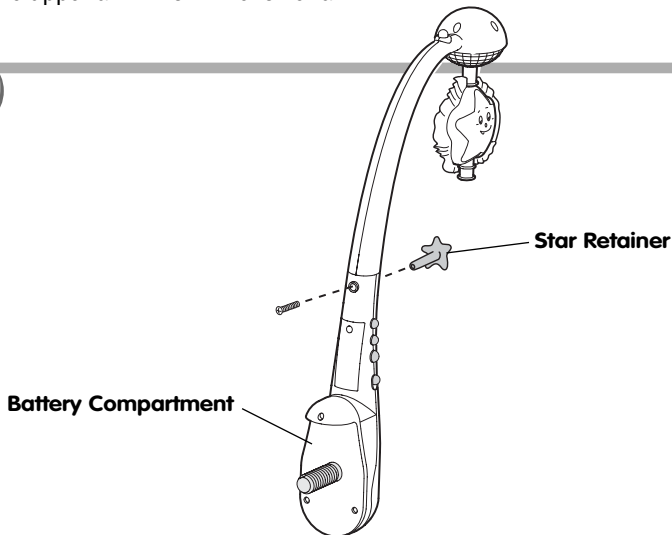

- Insert the star retainer into the hole in the lower arm on the side opposite the battery compartment.
- Insert the #6 x ½" screw into the lower arm as shown. Tighten the screw with a Phillips screwdriver. Do not over-tighten.


Assembly

 3

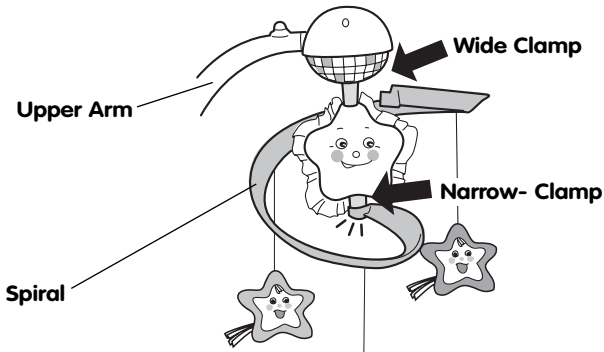


- Note that the spiral has a wide clamp on one end and a narrow clamp on the other end.
- “Snap” the spiral **wide** clamp onto the post **above the star** on the upper arm.
- “Snap” the spiral **narrow** clamp onto the post **below the star** on the upper arm.

 4

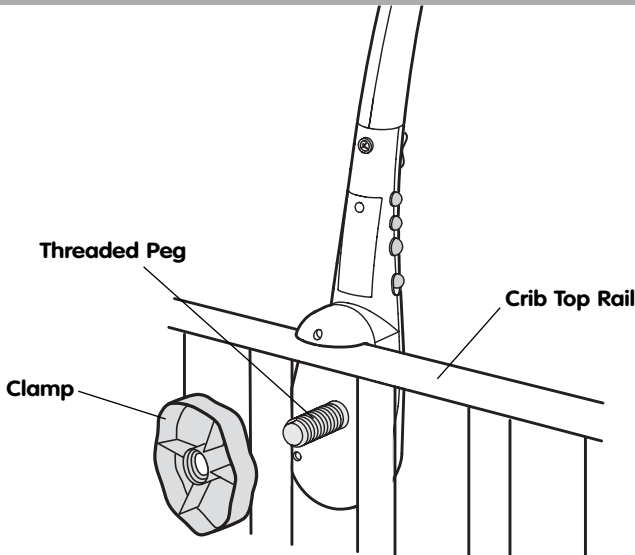


- Fit the mobile against the crib top rail so that the threaded peg extends out of the crib.
- Fit the clamp onto the threaded peg and turn the clamp clockwise to secure the mobile to the crib. Do not over-tighten the clamp.

 Use

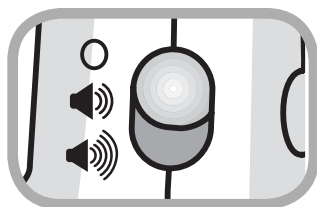


Power/Volume Switch

 - The switch has three positions: off ○ ; on with low volume 🔊 and on with high volume 🔊.
- Slide the power/volume switch to the off position ○ when not in use.

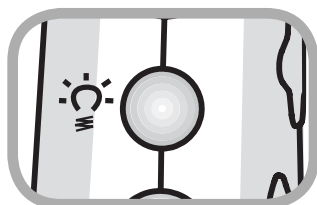


Light Select Button

 - Press the button to choose from four different light modes:
 - 1 Twinkling lights around baby's room
 - 2 Glowing star light gently fading in and out
 - 3 Twinkling and glowing lights
 - 4 No lights (music only)
- Each time you press the light select button the mobile will switch to the next of the four modes until it returns back again to the first.

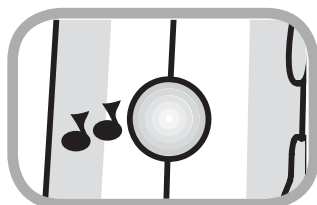

Song Select Button

 - Press the button to choose from seven different tunes or no music (lights only).
- Each time you press the song select button the mobile will switch to the next of the selections until it returns back again to the first.

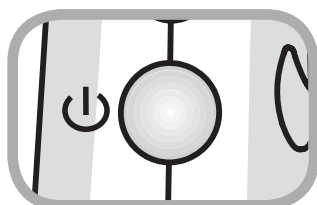


Start Button

- Press the start button to activate the mobile.
- The mobile will play for about six minutes.
- To restart or pause the mobile, press the start button on the remote control or the start button on the mobile.

Notes:

 
- The remote control will activate the mobile from one foot to as far as 20 feet away.
- After approximately two hours without activation, the mobile shuts down. Press the start button on the mobile to restart the mobile and reactivate the remote.

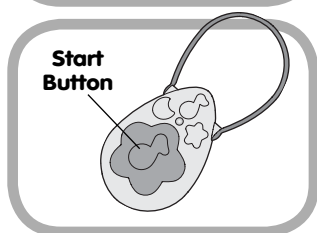

Use

IMPORTANT!

 - In the unlikely event that use of the remote interferes with normal use of other remote controlled equipment, such as televisions and stereos, or use of other electric or battery powered appliances interfere with operation of the mobile, do not use both appliances at the same time.
- For best performance between the mobile and the remote, avoid using the remote in areas of bright light. In bright natural or artificial light, you may notice loss of range. Move the mobile or otherwise reduce the amount of light to improve performance.

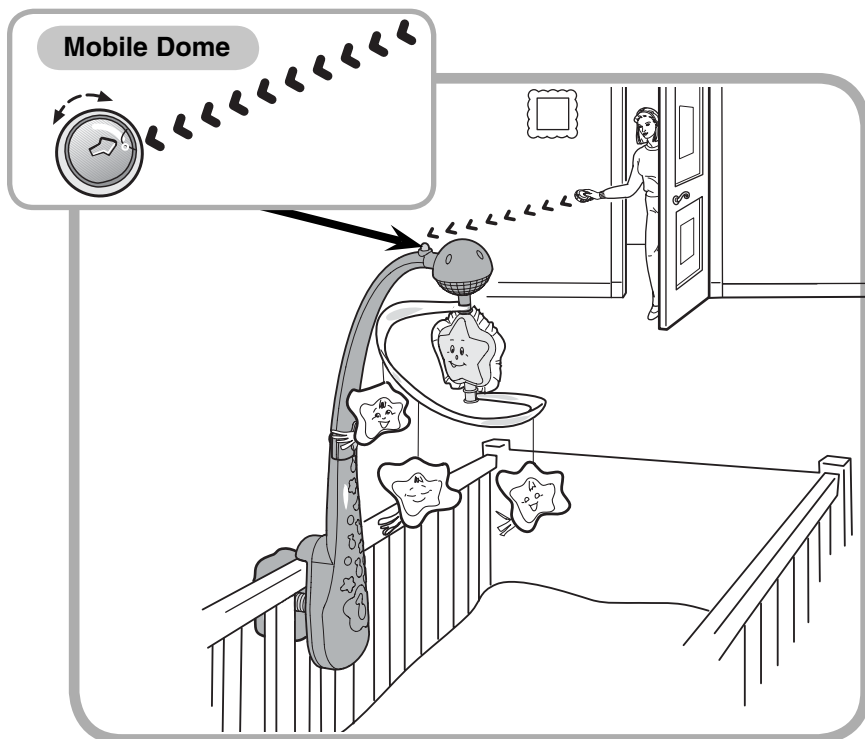

- When using the remote, make sure that the arrow on the mobile's dome is pointing towards the transmitter window on the remote. **For best results, the path between the transmitter window on the remote and the dome on the mobile are in a direct line and free of obstacles. Rotate the mobile dome so that the arrow points to the area from which you're most likely to use the remote.** For example, if you'll most often be using the remote from the doorway of the nursery, make sure that the arrow on the mobile dome is pointing towards the doorway and that the path between the mobile dome and the doorway is free from obstructions.

Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.