





# Harley Motorcycle Footboard Assembly Replacement Instructions


Model Numbers: 74290, 74370

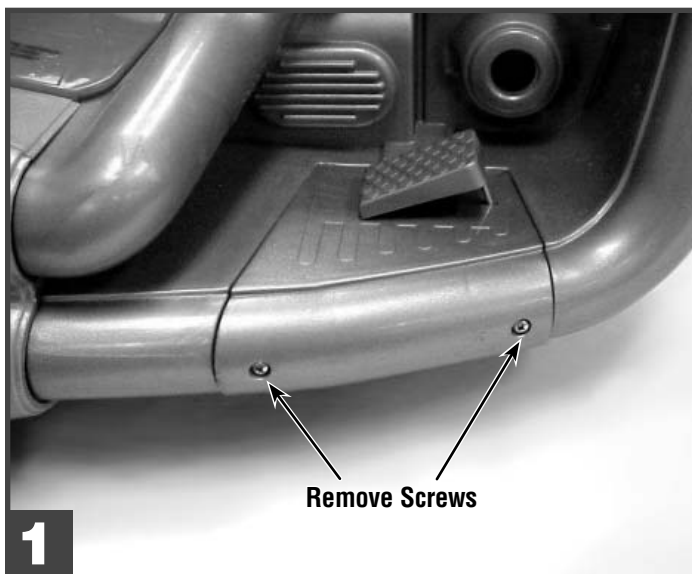

Remove the two screws in the footboard assembly.

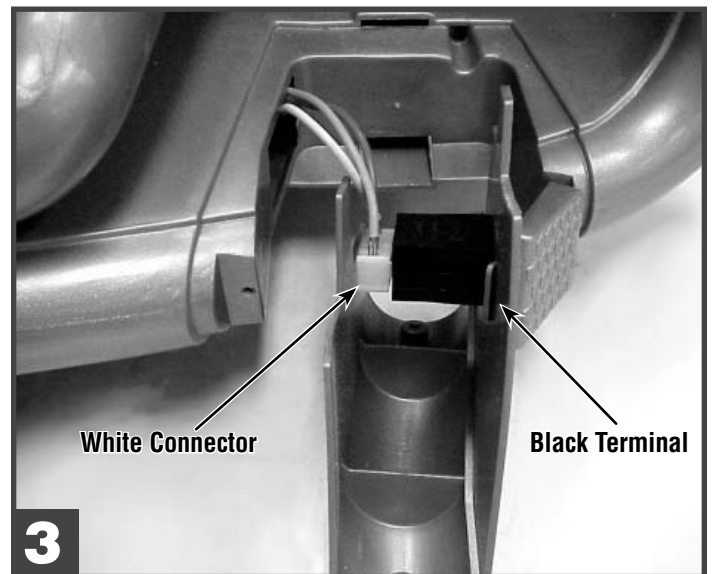

Turn the footboard assembly on its side. Gently wiggle to remove the white connector from the black terminal.

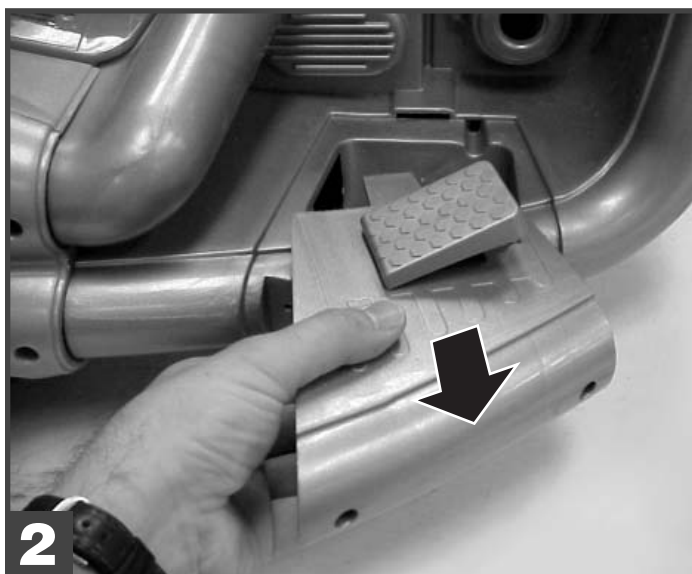


Slide the footboard assembly from the motorcycle.




Discard the footboard assembly.


## Footboard Replacement Instructions

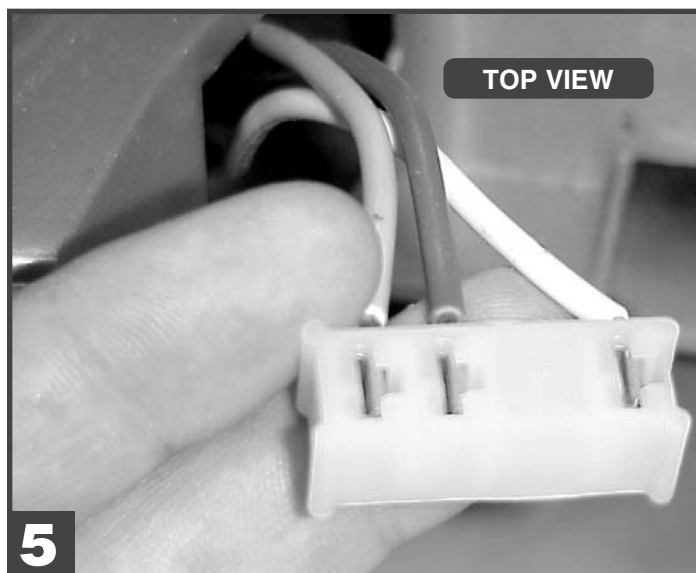


Locate the top side of the motorcycle white connector.

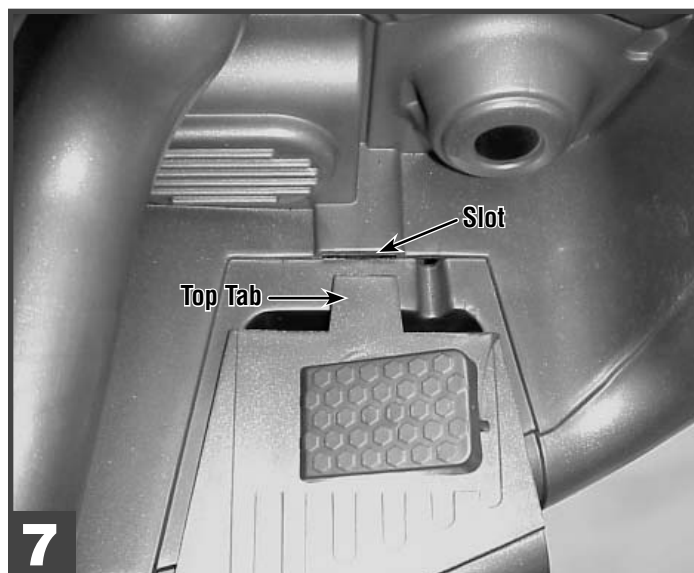

Slide the new footboard assembly back onto the motorcycle. Make sure the top (shown) and bottom (not shown) tabs insert into the slots on the motorcycle.

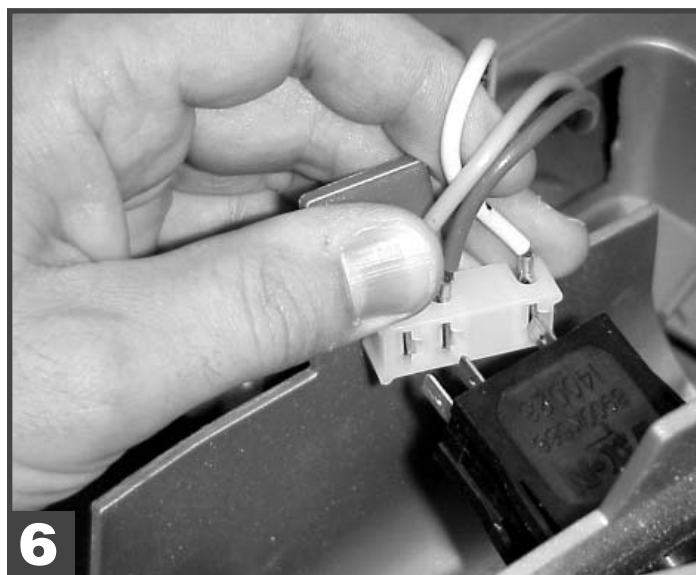

Insert the new footboard assembly black terminal into the slots in the motorcycle white connector.

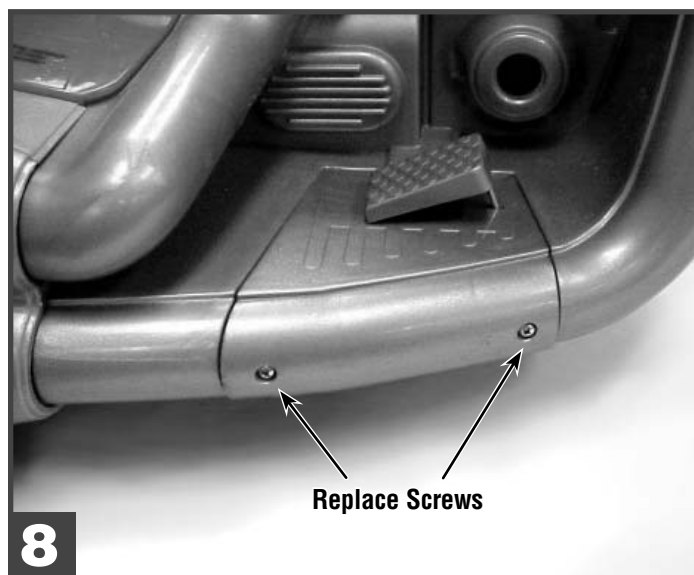

Re-insert the screws into the new footboard assembly. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

**IMPORTANT!** Test the operation of the new foot pedal. Press the foot pedal down. The motorcycle should move. If the motorcycle does not move, you have incorrectly assembled the new footboard or your battery needs to be re-charged. Please re-read these instructions and re-assemble the footboard correctly. Or, refer to your motorcycle Owner's Manual for instructions on how to charge your battery.

If you have further questions, please contact Fisher-Price® Consumer Relations at 1-800-348-0751, M-F 9AM to 7PM, Sat 11AM to 5PM (EST) or visit us online at [www.service.fisher-price.com](http://www.service.fisher-price.com).

Write to us Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.