

Instructions


Dream Doll House

Fisher-Price®

- Please keep these instructions for future reference.



Front View

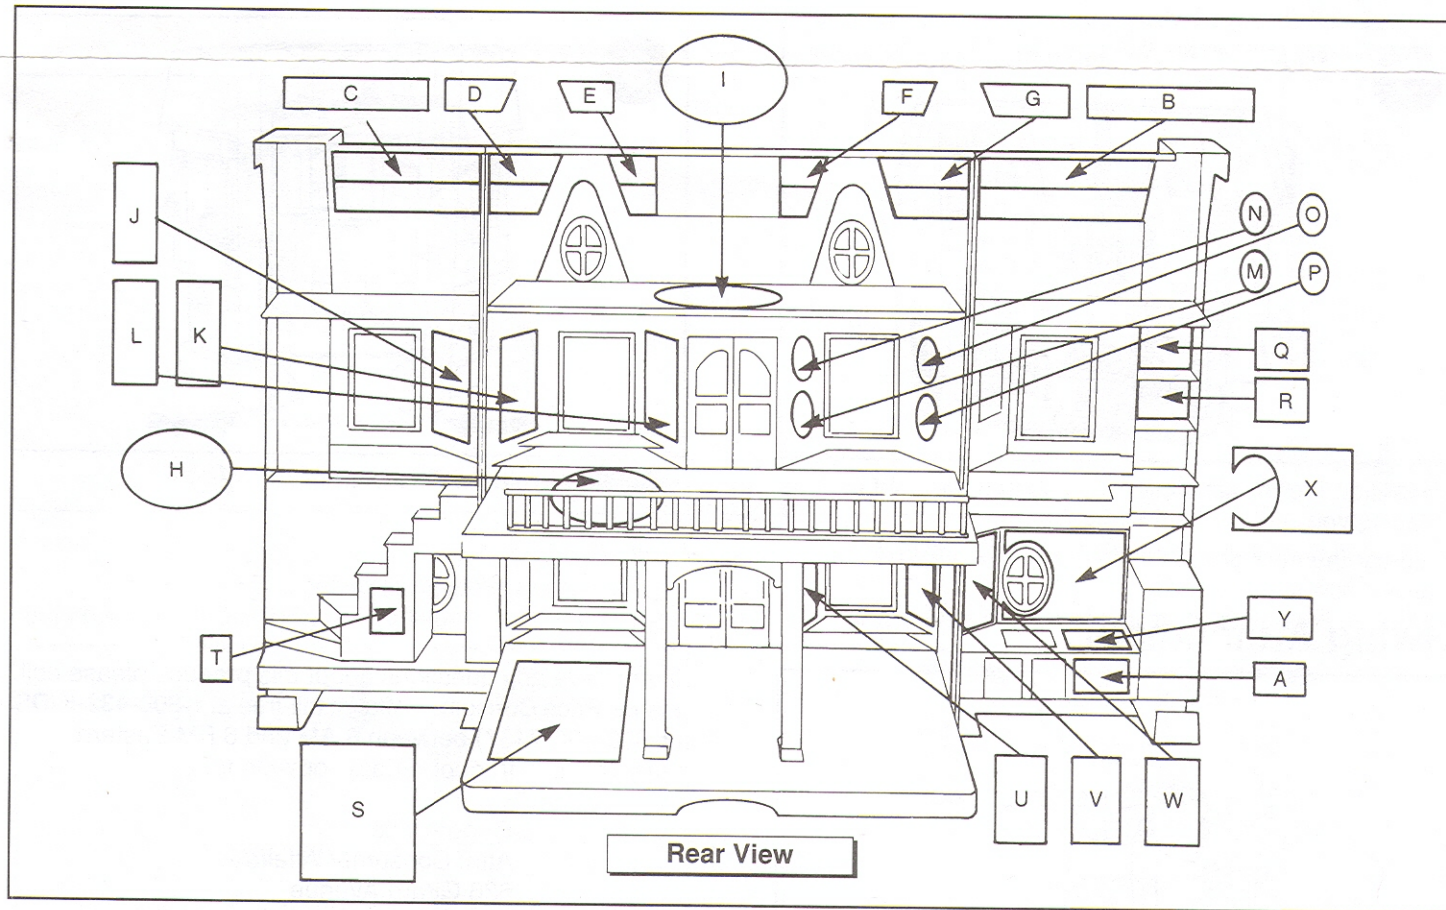


Decoration

- Apply the label decorations as indicated in the illustration.


To apply labels:

- Make sure the areas where the labels will be applied are clean and dry.
- Apply the top corners of the label first and smooth downward to remove air bubbles.
- For best adhesion, try to avoid applying the labels more than once.

To Unfold

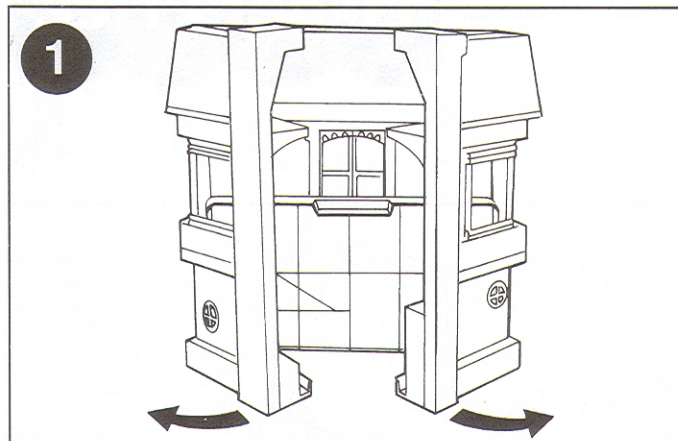


- Position the Dream Doll House so that the back is facing you.
- Swing open the side walls of the Dream Doll House.

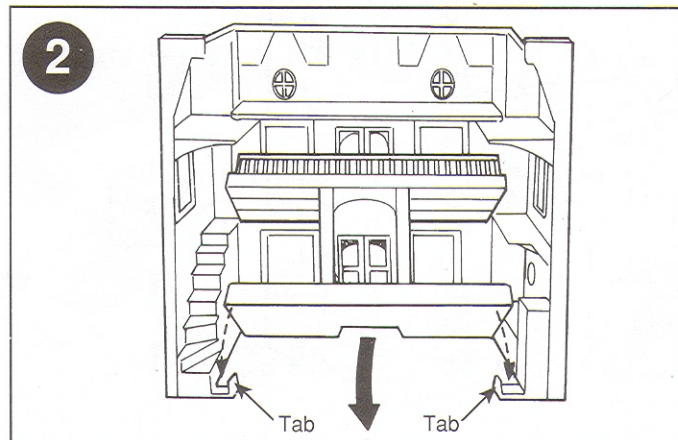


- Position the side walls at right angles to the front wall of the Dream Doll House.
- Lower the first floor onto the tabs.


To Fold For Storage

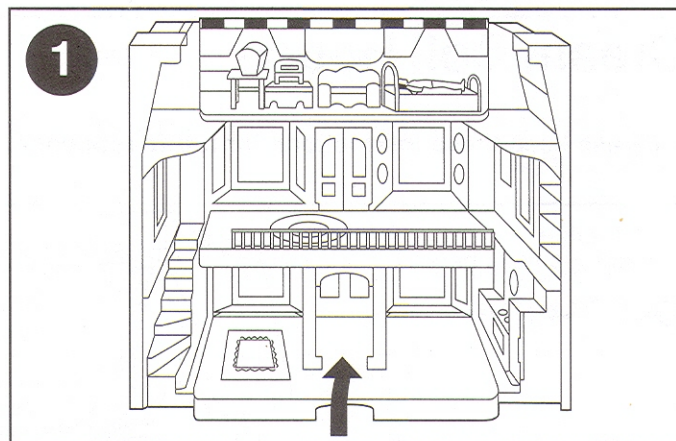

- Place the accessories on the front third floor inside the Dream Doll House for storage.
- Lift the first floor.

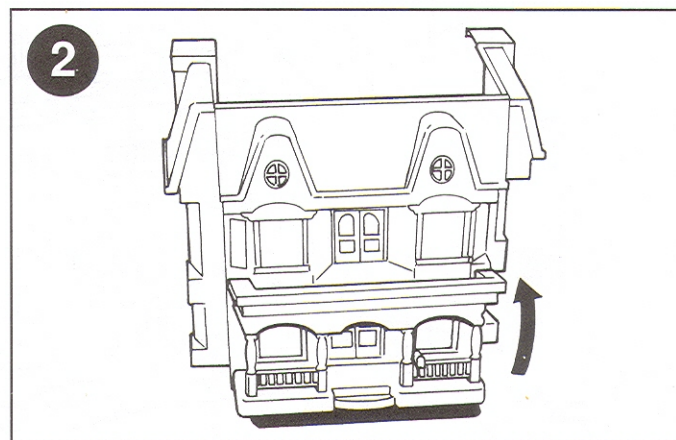


- Lift and snap the front porch closed.

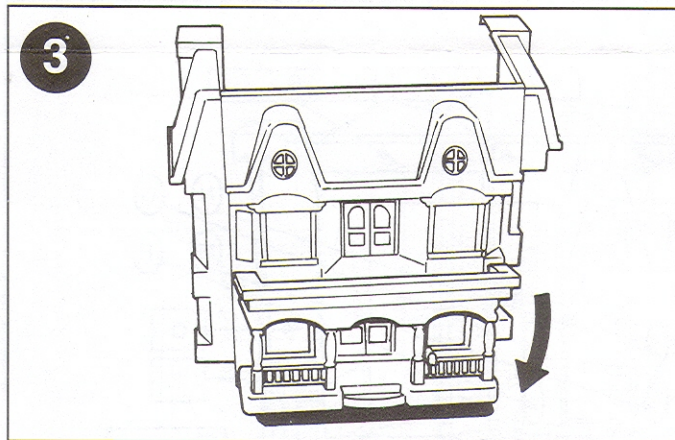


- Position the Dream Doll House so that the front is facing you.
- Lower the front porch.

Swing Attachment

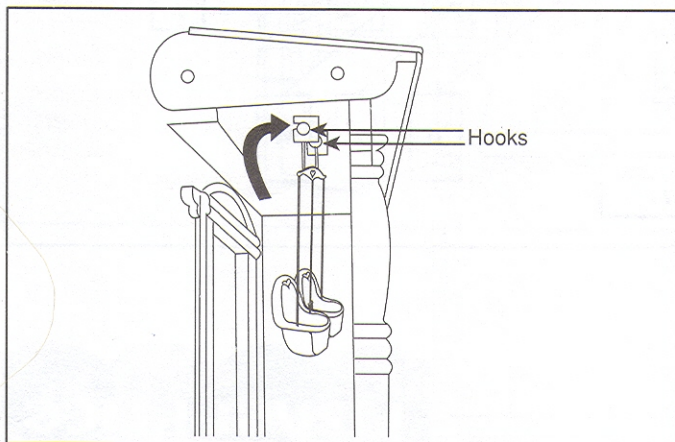

- Attach the swing to the hooks under the porch roof.

NOTE: The swing can also attach to the hooks inside the house in the first floor archway.

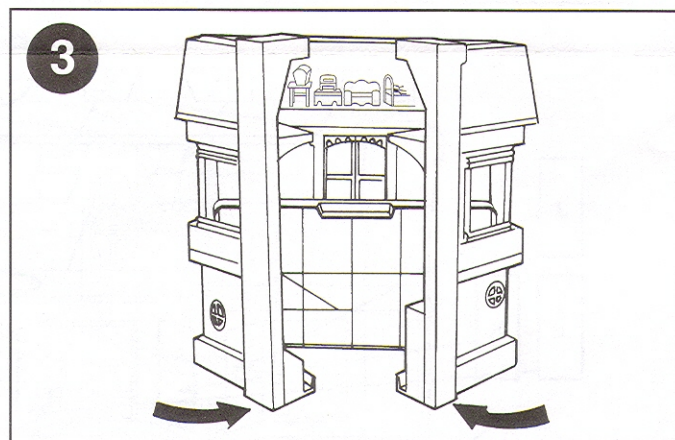

- Rotate the side walls inward.

If you have any questions about this product, please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS** (1-800-432-5437) between 8 AM and 6 PM Eastern time, Monday through Friday, or write to:

Fisher-Price, Inc.
Attn: Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.