


Fisher-Price®

Product Numbers: 75246, 75247


We've Made a Change!

Please use this instruction sheet to assemble the side railing, porch and porch railing to the house.

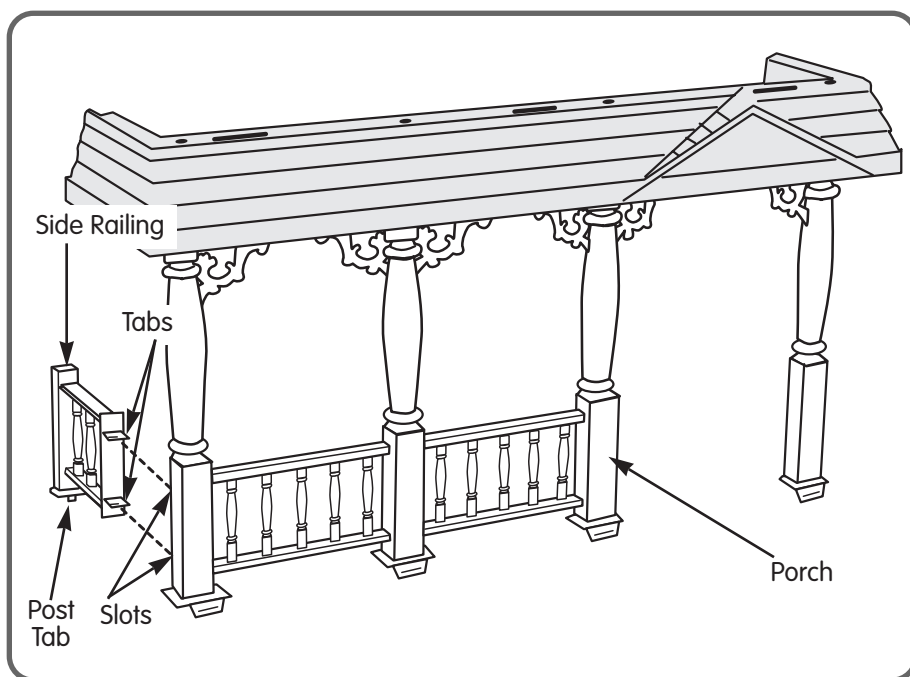


- Position the side railing so that the tab on its post faces down.
- Now, insert the tabs on the side railing into the slots on the end of the porch, as shown.

Hint: You will need to hold the side railing in place to complete the next step.

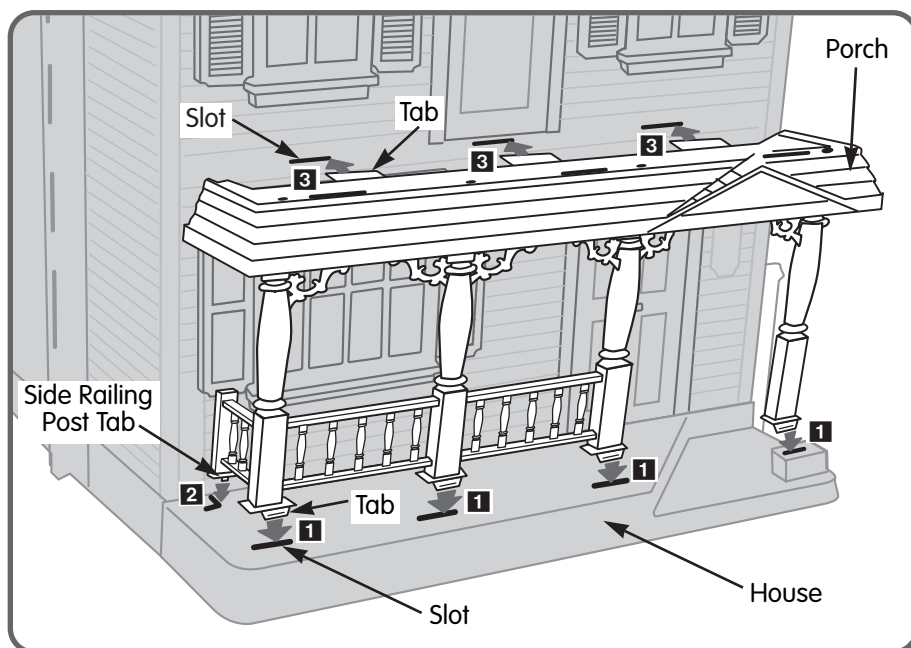

- While tipping the porch forward, insert and **"snap"** the tabs at the bottom of the porch into the slots in the house **1**.
- Fit the tab at the end of the side railing into the slot in the house **2**.
- Insert and **"snap"** the tabs on the top of the porch into the slots in the house **3**.

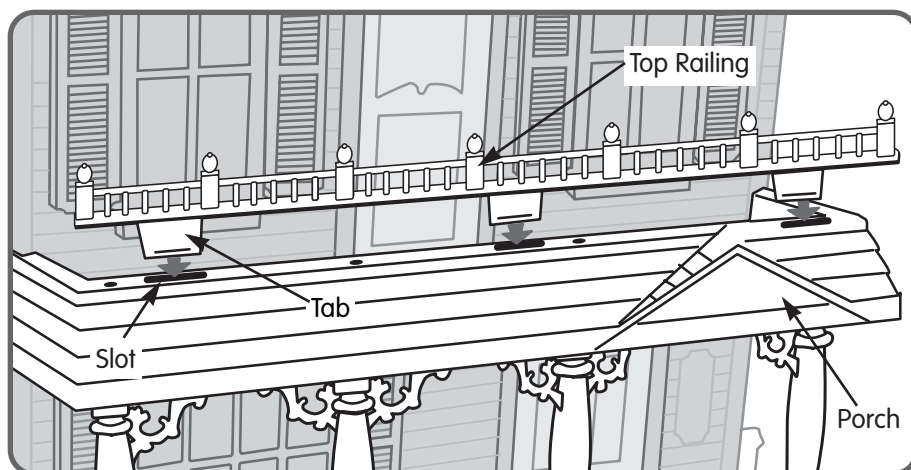

- Insert and **"snap"** the tabs on the top railing into the slots on top of the porch.

Now, please refer to the original instruction sheet that came with this toy!

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2001 Mattel, Inc. All Right Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.