

## **IMPORTANT!**

## Please use this instruction to properly assemble the shelves to the front and back panels.

Model Number 75423

- Follow assembly steps 1 through 8 on the original instruction sheet.
- Look down through the top of a side panel and note the tabs on the front and back panels.


**Hint:** The edge of the shelf should be covering these tabs. Please follow these instructions to fit the shelf over these tabs.

 While lifting the shelf slightly, push it so that the edge hooks over both tabs on the front and back panels.

**Hint:** You may need to press lightly on the inside of the front and back panels at the same time to bring all the parts together.

 Repeat this process to secure the other shelf to the other side of the front and back panels.

Now, continue with step 9 on the original instruction sheet to complete assembly of the kitchen.

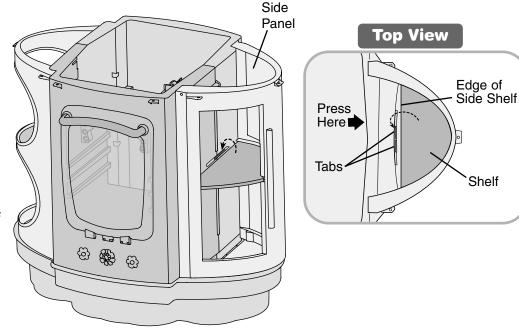

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in Mexico 75423pr-0923