
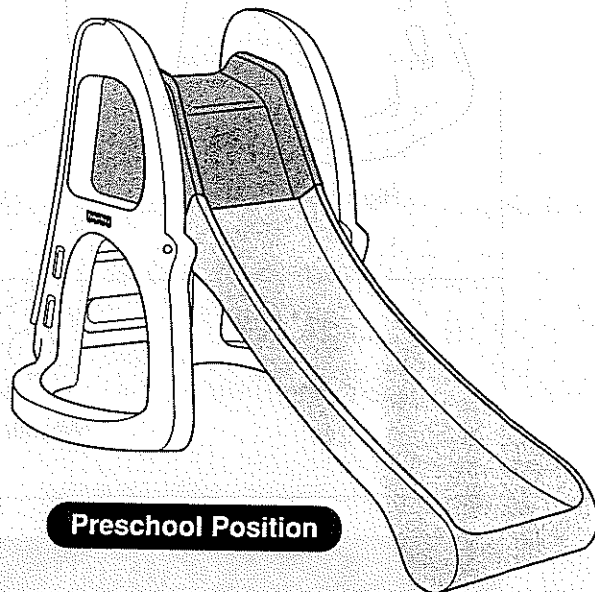


Instructions

2-in-1 Slide

Fisher-Price™

- Thank you for choosing the Fisher-Price 2-in-1 Slide. If you have any questions about this product or are missing a part, please call us at 1-800-432-KIDS, rather than returning it to the store.
- Please save these instructions for future reference.
- Adult assembly is required.
- Tool needed for assembly: Phillips Screwdriver
- Look for exciting information about Fisher-Price outdoor playsets at the end of these instructions.

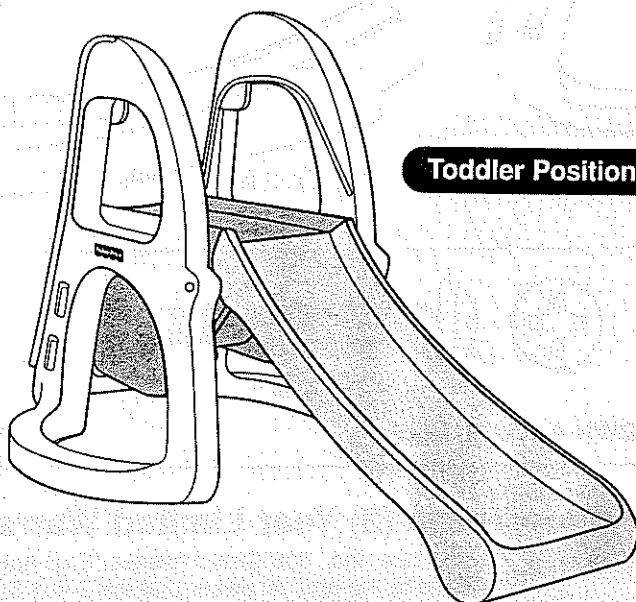

Important Safety Information


- Place the 2-in-1 Slide on level ground at least six feet from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Do not climb on the 2-in-1 Slide when it is wet.
- Do not climb on the 2-in-1 Slide until it has been properly assembled by an adult.
- Adult supervision is necessary to ensure that children play safely.
- Be sure children are dressed appropriately to avoid potential hazards while using the 2-in-1 Slide. Children should not wear loose clothing such as ponchos or scarves. Attire should include well-fitting shoes.
- Do not use the 2-in-1 Slide in a manner that is unintended.

WARNING

- Falls onto hard surfaces could result in head or other serious injuries.
- Never put on concrete, asphalt, wood or other hard surfaces.
- Carpet over hard floors may not prevent injury.

Parts

If you have any questions about this product or are missing a part, please call us at **1-800-432-KIDS**, rather than returning this product to the store.

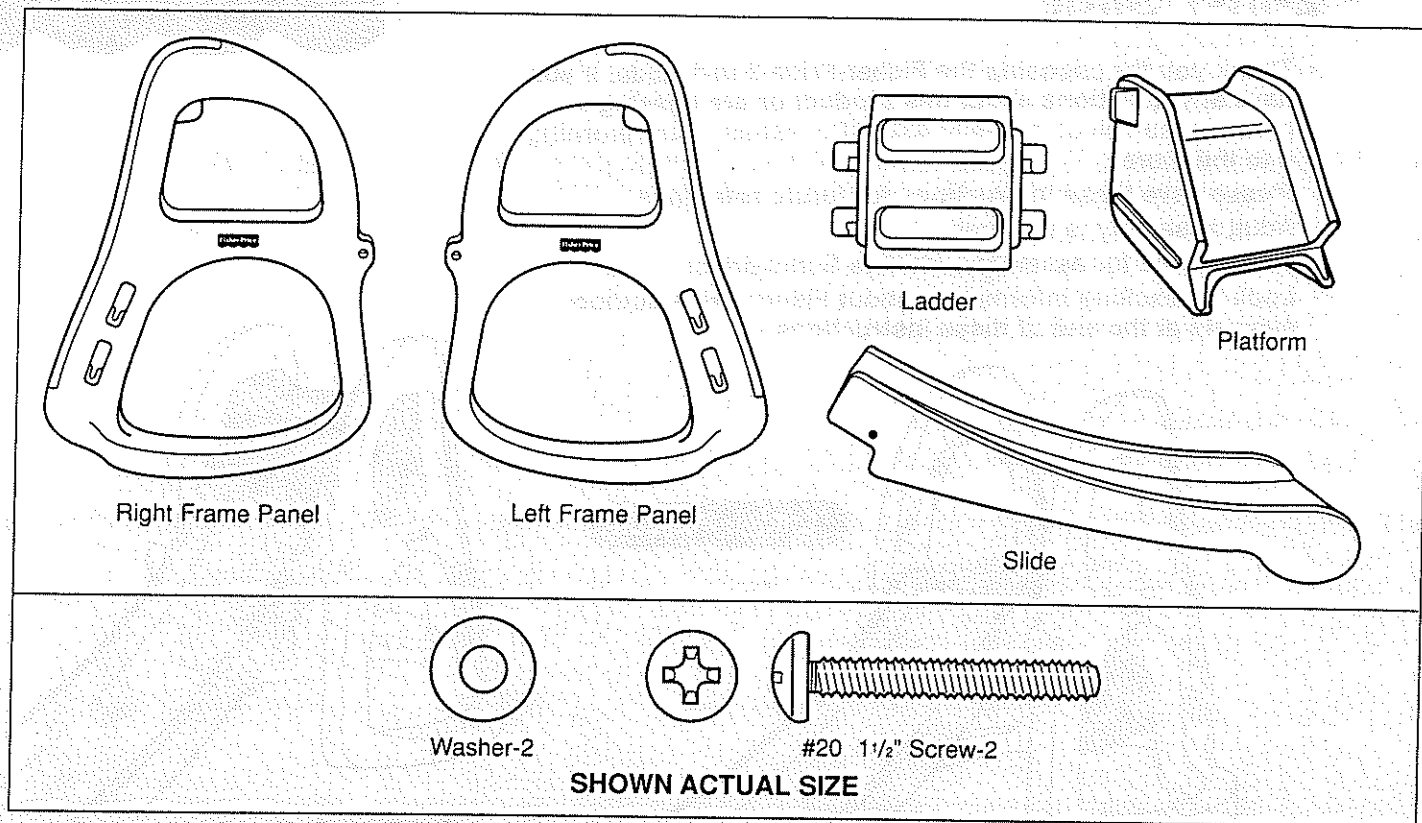

CAUTION

Please keep small parts and plastic bags out of children's reach.

If you have any questions about this product, please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS** (1-800-432-5437) between 8 AM and 6 PM Eastern time, Monday through Friday, or write to:

Fisher-Price, Inc.,
Attn: Consumer Affairs,
636 Girard Avenue,
East Aurora, New York 14052

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Three (3) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York warrants to the original owner that the 2-in-1 Slide is free from all defects in material and workmanship when used under normal conditions for a period of three (3) years from the date of purchase. This warranty does not cover color fading of the product or product parts, or damage from excessive abuse or Acts of God.

Should the product fail to perform properly, we will repair or replace it free of charge. Purchaser is responsible for shipping the product to the address indicated above and for all associated freight and/or insurance cost. Fisher-Price will bear the cost of shipping the repaired or replaced item to you. This warranty excludes any liability other than the above mentioned, including but not limited to any incidental or consequential damages.


SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.


Assembly Diagram

The 2-in-1 Slide can be assembled either for use by toddlers or for use by preschoolers and easily converts from one position to the other simply by flipping the platform.

For Toddlers - Gentle Slide (Approximately 18 - 36 months)

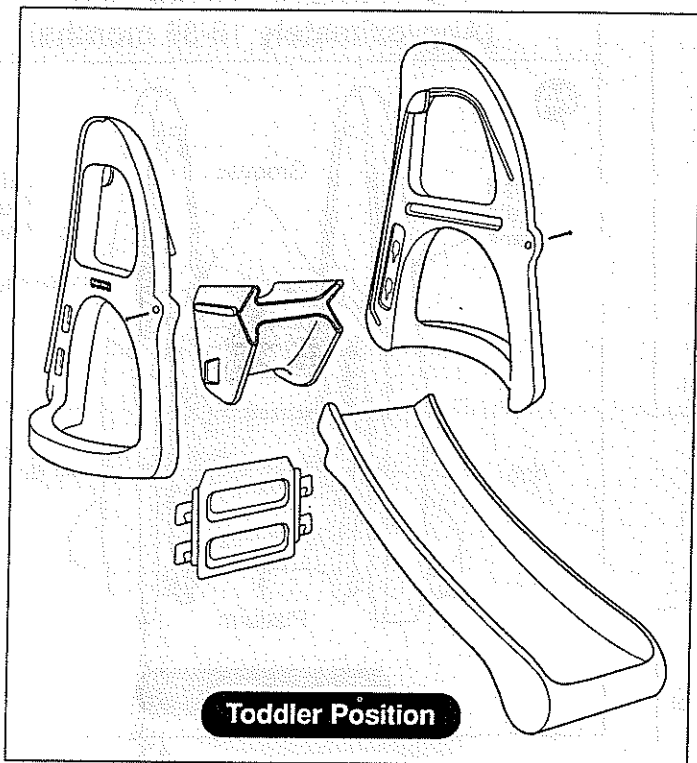


For Preschoolers - Challenging Slide (Approximately 3 - 6 years)

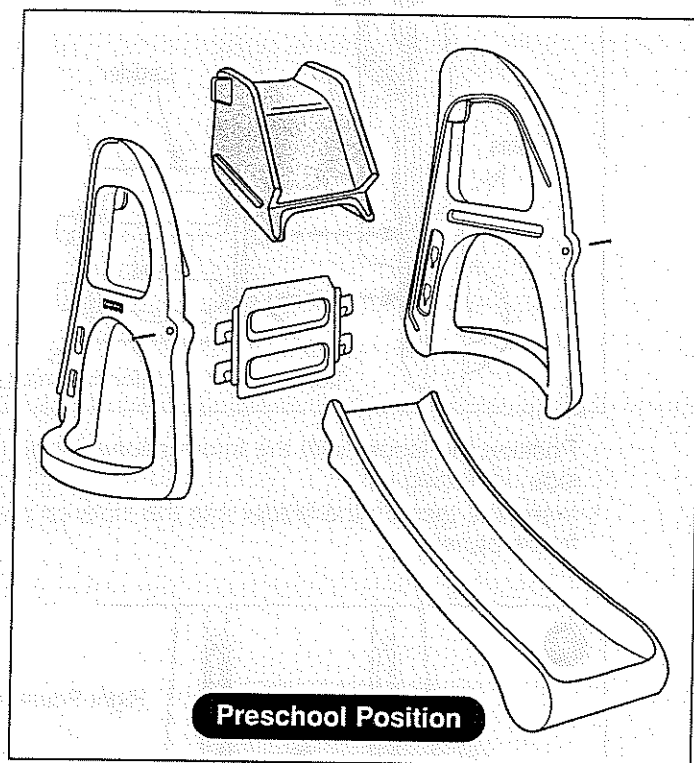


- Please save all packaging material until assembly is complete to ensure that no parts are discarded.
- If you have any questions about this product or are missing a part, please call us at **1-800-432 KIDS**, rather than returning this product to the store.
- Before assembling the 2-in-1 Slide, please wipe each part with a clean, dry cloth.

Assembly

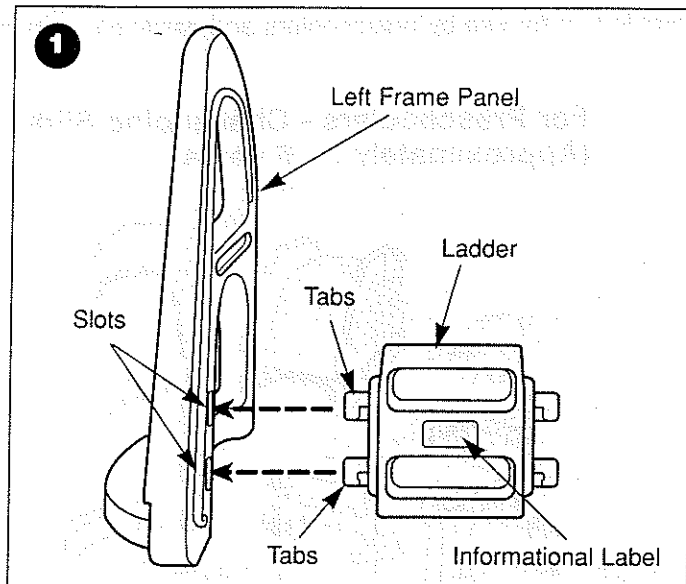


- Position the ladder with the informational label right side up, facing you.
- Insert the tabs on the ladder into the slots on the left frame panel.

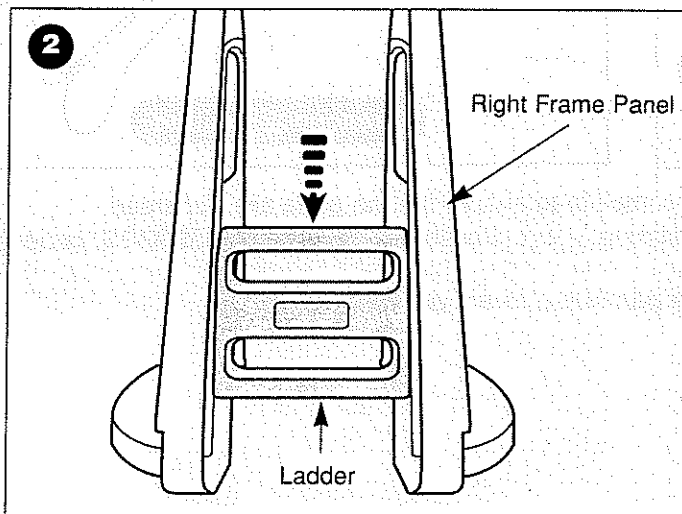

- Insert the tabs on the ladder into the slots on the right frame panel.
- Push down firmly on the ladder to lock it into both frame panels. **Make sure the tabs on the ladder are securely locked into the slots in both frame panels.**
- Turn the assembly around so that the ladder faces away from you.

IMPORTANT NOTE: The 2-in-1 Slide can be assembled either for use by toddlers or for use by preschoolers, depending on the position of the platform:

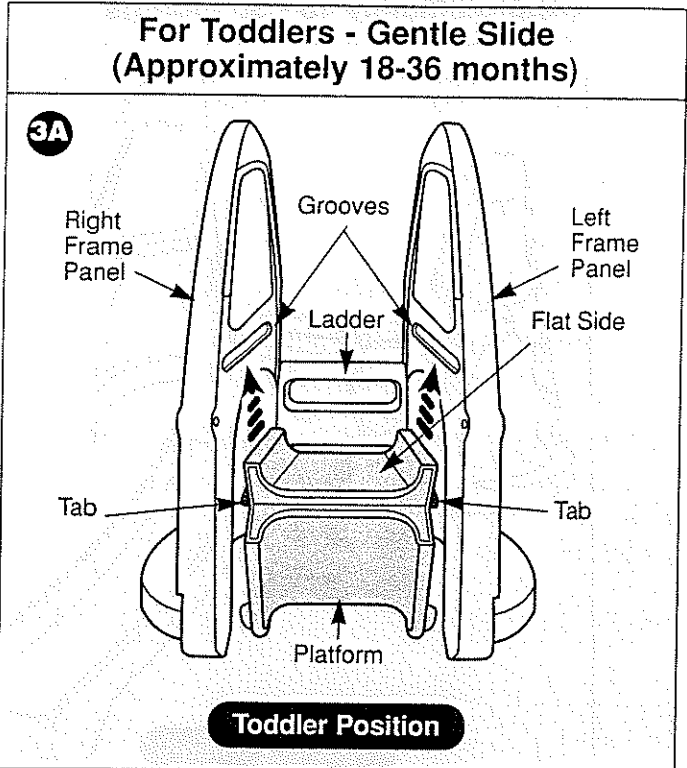

- Position the platform so that the flat side faces up and the step indentation faces away from you (towards the ladder).
- Insert the platform between the frame panels as shown.

Helpful Hint: You may need to spread the frame panels apart slightly.

- Insert the tabs on the sides of the platform into the grooves in the frame panels.
- Push the frame panels together to make sure the tabs on the platform are fully inserted into the grooves in the frame panels.

Fisher-Price knows kids love to play outdoors... not just for hours, but for years!


That's why we've created a complete line of outdoor products with features that grow with your kids. And they go together to make fun times as BIG as their imaginations!

5997 Super Sand Castle

2-6 yrs. A sandbox, playgym and slide in one!

Themed playsets add the extra dimension of imagination.


The "drawbridge" is also a cover for the sandbox to keep the sand clean and dry.

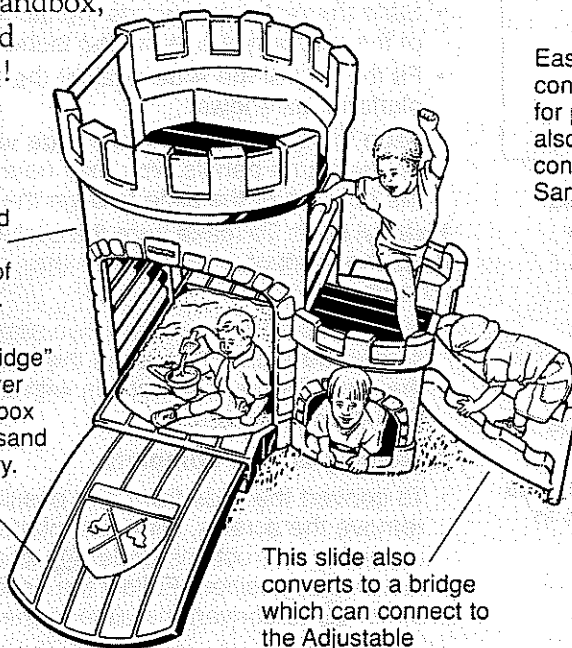

This slide also converts to a bridge which can connect to the Adjustable Playhouse Gym.

5990 Adjustable Playhouse Gym

15 mos.-6 yrs. Designed to grow with your child for years of imaginative fun!

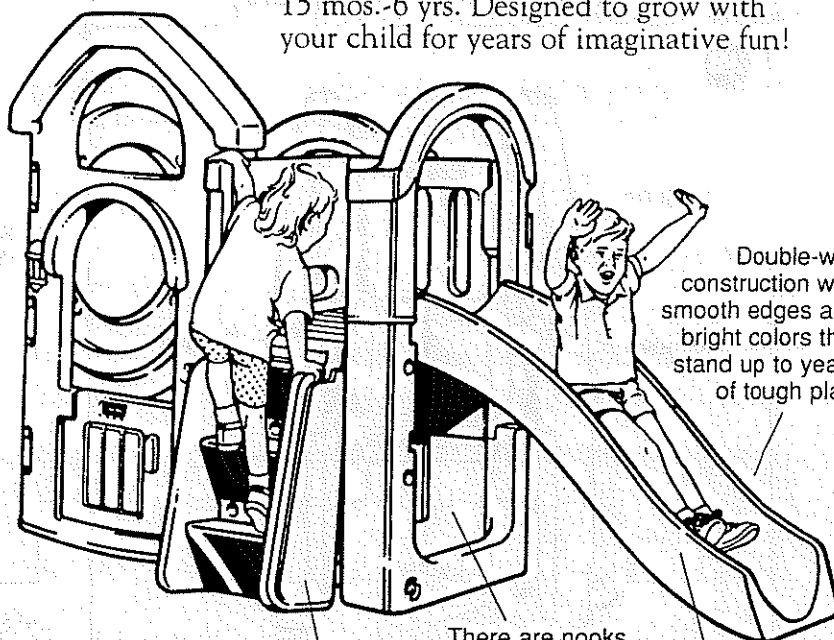

Double-wall construction with smooth edges and bright colors that stand up to years of tough play.


Easy climb toddler stairs convert to climb-up ladder for preschoolers, and can also convert to a bridge to connect to the Super Sand Castle.

There are nooks and crannies to hide in, a door to open, and ladders to climb.

Gentle sloping toddler slide converts to more challenging preschool slide.

The Fisher-Price Adjustable Playhouse Gym and Super Sand Castle easily connect to keep the fun growing!

Fisher-Price Sand Castle available Summer 1995

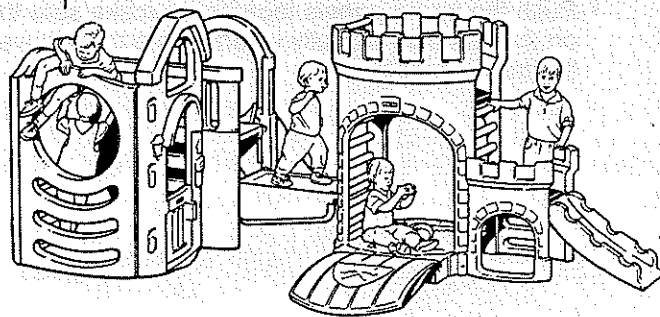


©1995 Fisher-Price, Inc., East Aurora, New York 14052

5996 1 70011-0281

For Preschoolers - Challenging Slide (Approximately 3-6 years)

3B

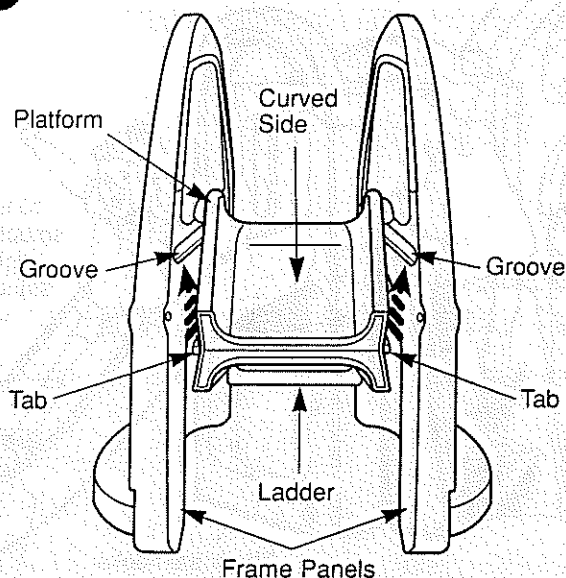


Preschool Position

- Position the platform so that the curved side faces up and the step indentation faces away from you (towards the ladder).
- Insert the platform between the frame panels as shown.

Helpful Hint: You may need to spread the frame panels apart slightly.

- Insert the tabs on the sides of the platform into the grooves in the frame panels.
- Push the frame panels together to make sure the tabs on the platform are fully inserted into the grooves in the frame panels.

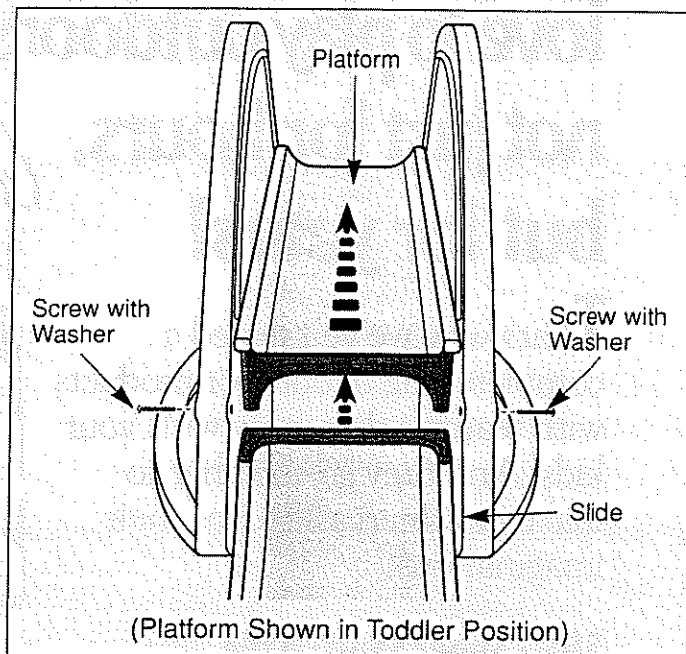

(Platform Shown in Toddler Position)

- Slide the platform towards the ladder so that the back of the platform is against the ladder.
- Fit the end of the slide against the the front of the platform, as shown.
- Align the screw holes in the slide with the screw holes on the frame panels. You may need to slightly adjust the position of the slide to align the holes.

Helpful Hint: To make sure the screw holes are aligned, pass the shaft of a screwdriver through the holes before inserting the screws.

- Place a washer on each of two screws and insert the screws through the holes in the frame panels and into the slide. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

Assembly is now complete.

- To convert the slide from one position to the other, remove the screws, slide and platform. Follow the assembly instructions under **3A** to convert the slide to the toddler position. Follow the assembly instructions under **3B** to convert the slide to the preschool position.

Care and Maintenance

- Check the 2-in-1 Slide twice monthly to make sure the screws are tightly fastened.
- To clean, use a mild soap and water solution and a clean cloth. Rinse clean with water to remove soap residue.