 


# GREAT ADVENTURES

## Robin Hood's Forest

Product Number: 77040

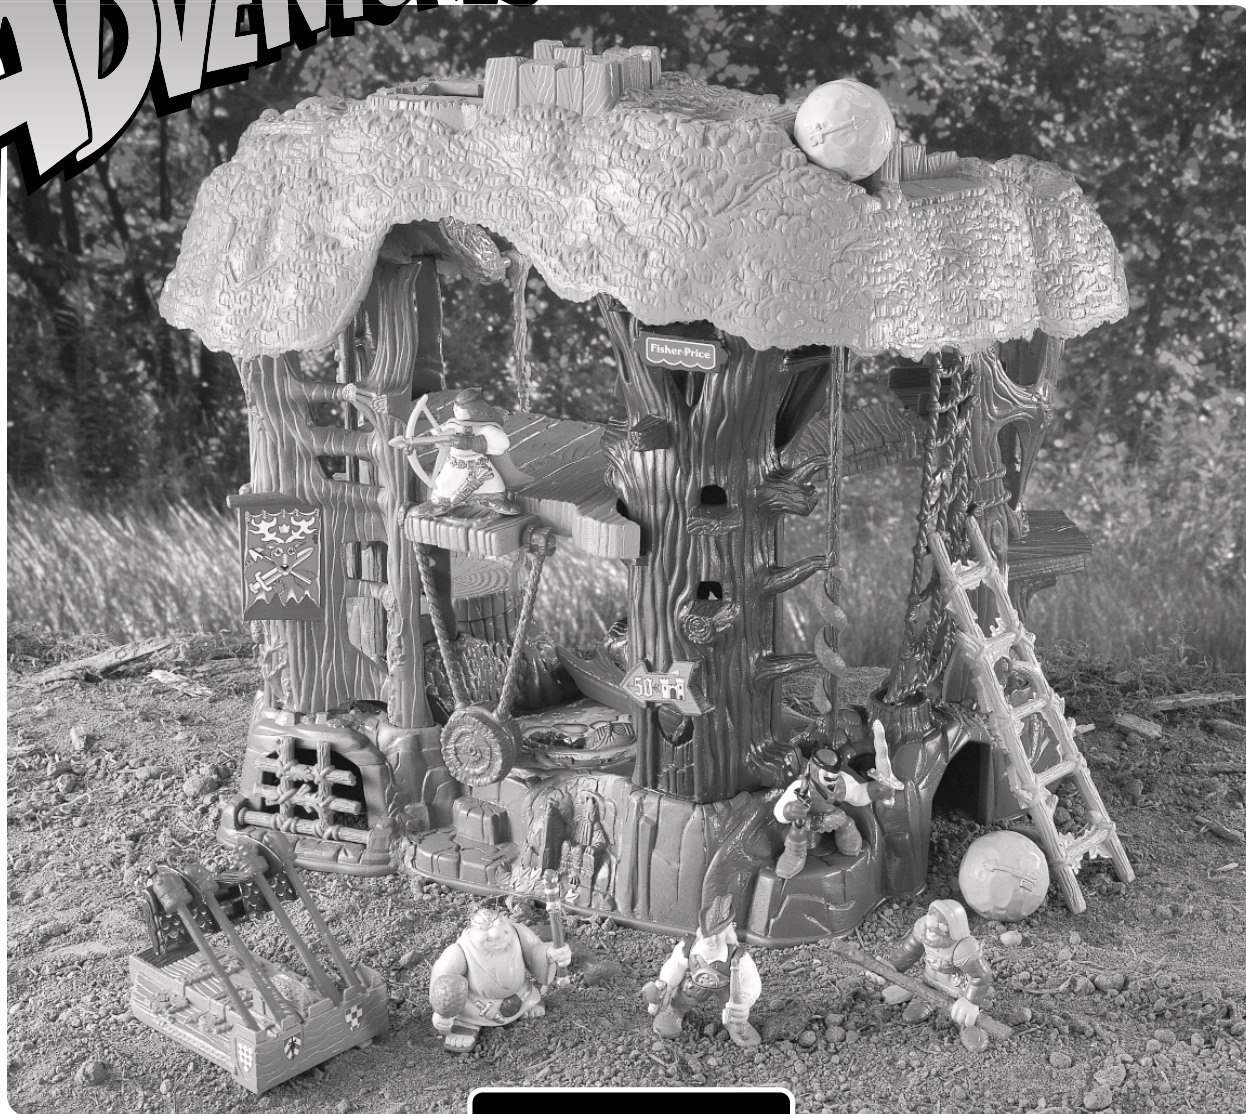


**Fisher-Price**

Please save these instructions for future reference.

Adult assembly is required.

Tool required for assembly: Phillips Screwdriver.

# Parts

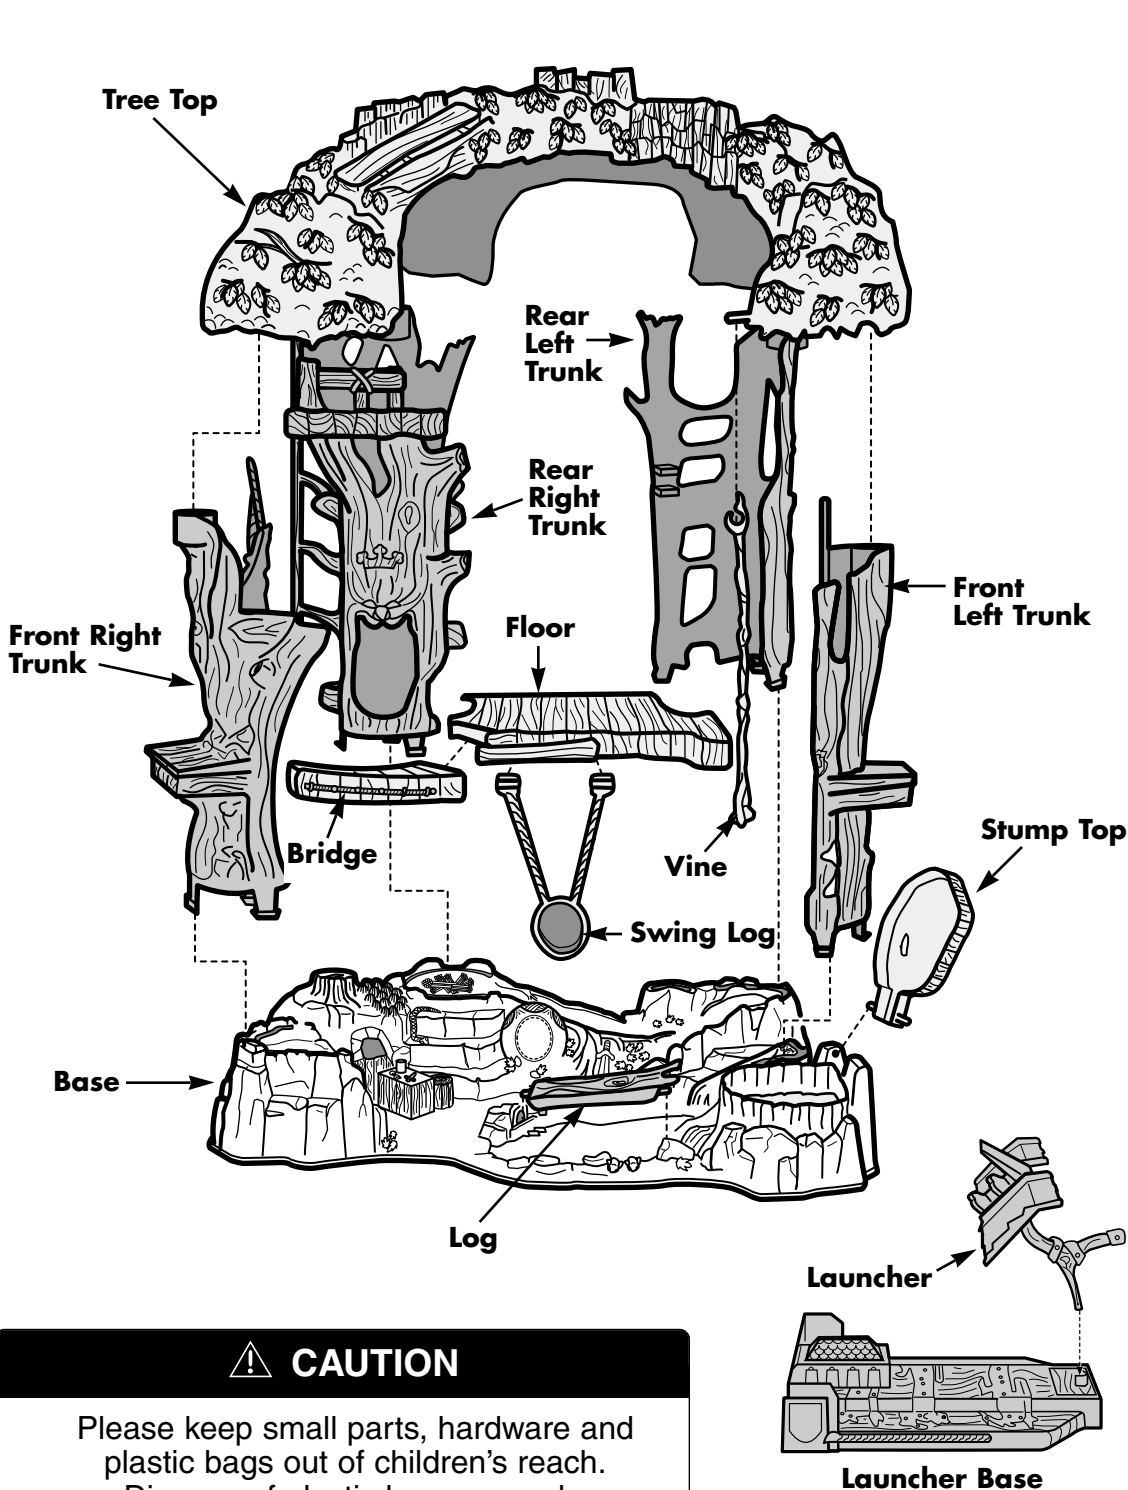

**Boulder - 2**



**Ladder**



**Snake - 2**



**Arrow - 4**



**1/2" Screw - 4**

**Shown  
Actual Size**


**Parts Not Shown**

Figures - 5  
Label Sheet

## ⚠ CAUTION

Please keep small parts, hardware and plastic bags out of children's reach. Dispose of plastic bags properly.


## Label Decoration

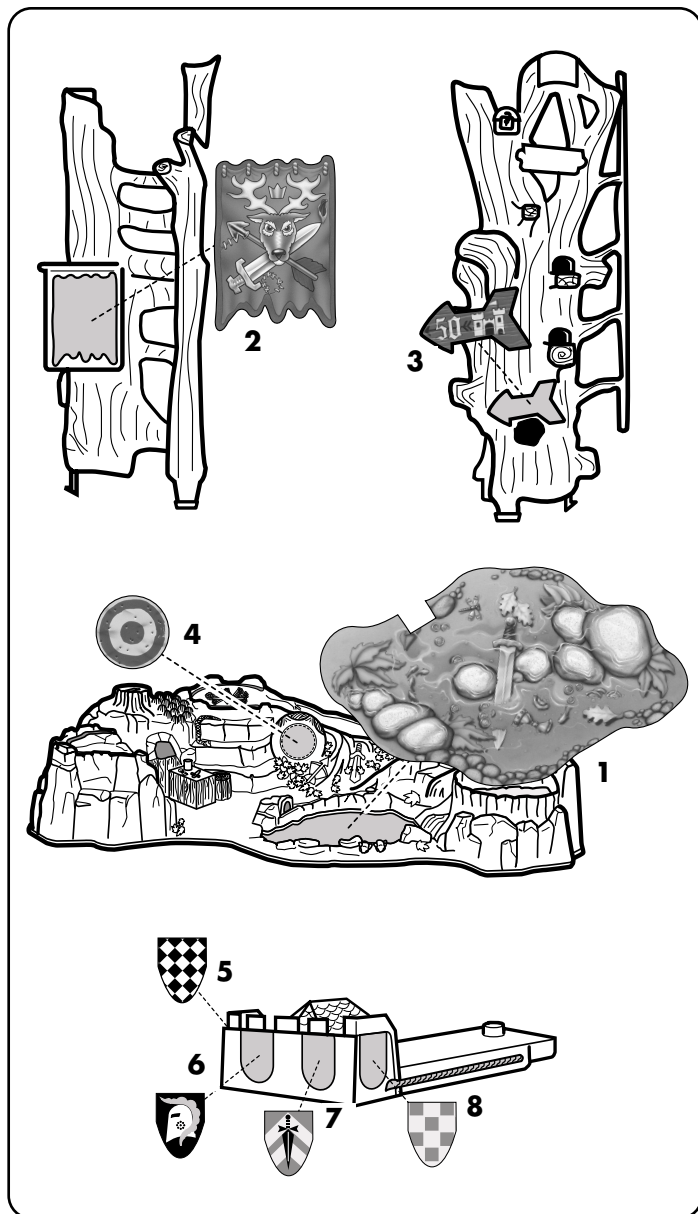


Proper label application will help to keep the labels looking their best!

- Wash your hands before applying the labels.
- Make sure the areas where the labels will be applied are clean and dry. Wipe this product with a clean, soft, dry cloth to remove any dust or oils.
- For best results, do not attempt to apply a label more than once.
- Apply the labels as shown in the illustration.

## Assembly

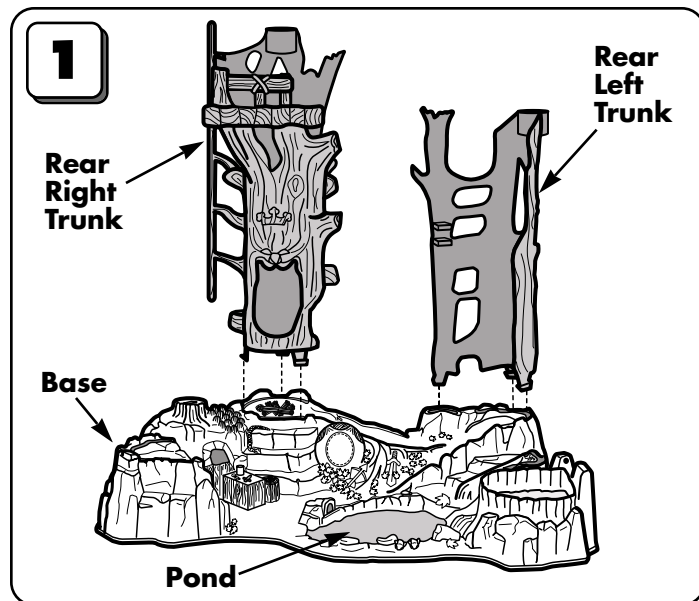


- Position the base so that the pond or front end is toward you.
- Insert and snap the hooked tabs on the rear right trunk and rear left trunk into the slots in the rear of the base.
- Pull up on the trunks to be sure they are secure.

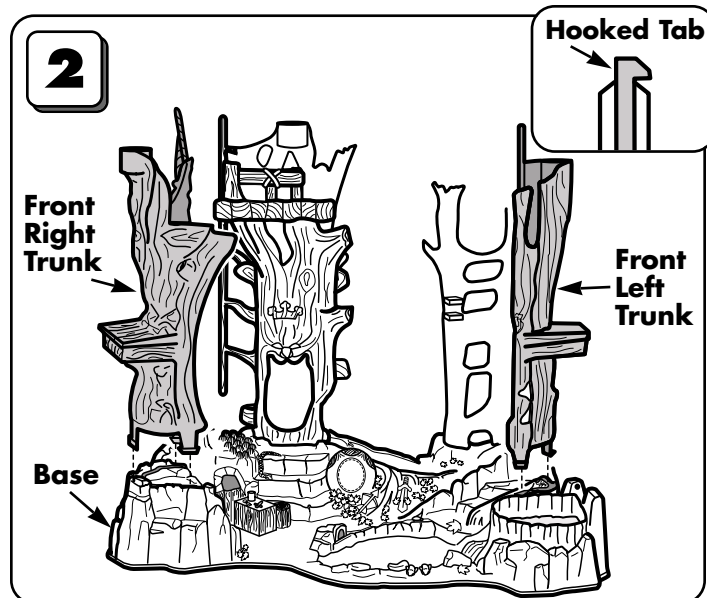


- Insert and snap the hooked tabs on the front right trunk and front left trunk into the slots in the front of the base.
- Pull up on the trunks to be sure they are secure.

**Helpful Hint:** Turn the base assembly over to make sure the hooked tabs on the trunks are snapped into the base (see inset).


# Assembly

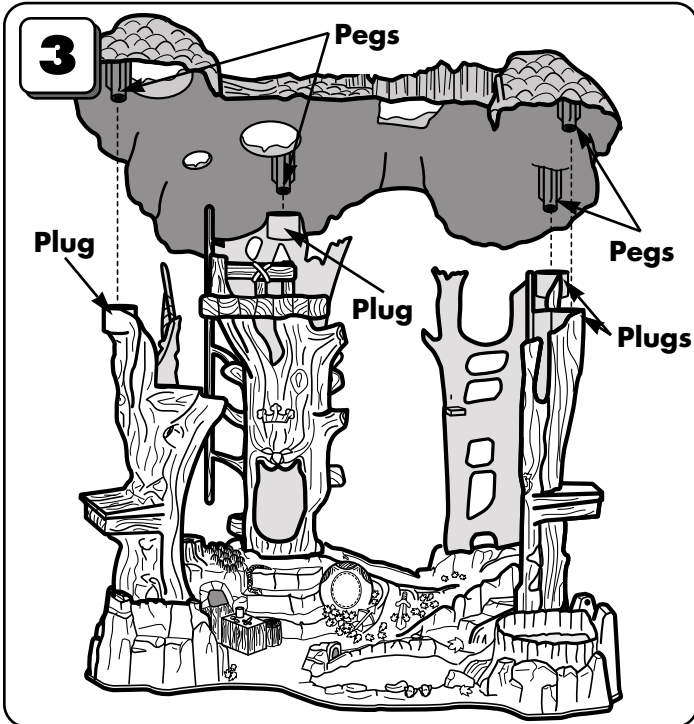


- Insert the pegs on the tree top into the plugs on the trunks.

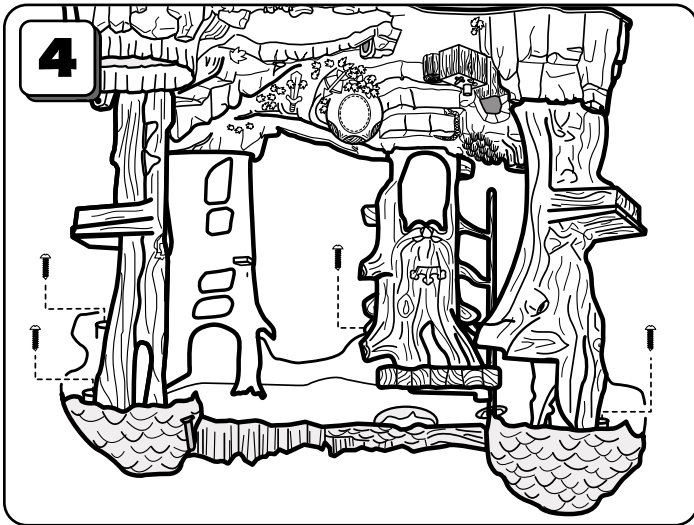

- While holding the tree top in place, carefully turn the assembly upside down.
- Insert four screws through the trunks and into the tree top.
- Tighten the screws with a Phillips screwdriver. Do not over-tighten.

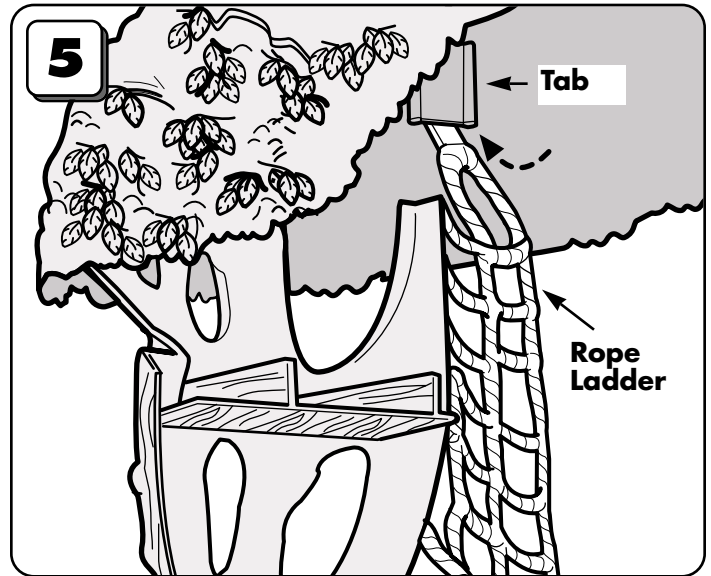


- Turn the base assembly upright.
- Bend the top of the rope ladder to fit it behind the tab on the tree top.

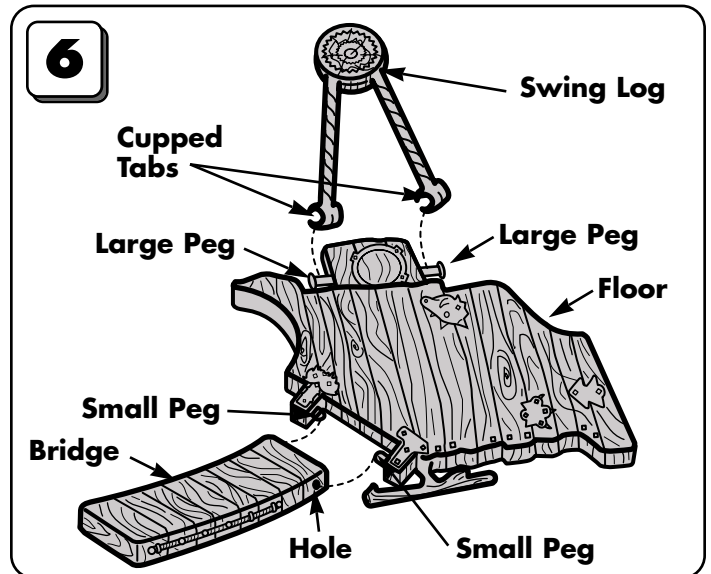

- Snap the cupped tabs on the swing log onto the large pegs on the floor.
- Fit a hole on one of the sides of the bridge onto one of the small pegs on the floor.
- Insert the small peg on the other side of the floor into the hole on the other side of the bridge.


# Assembly

7

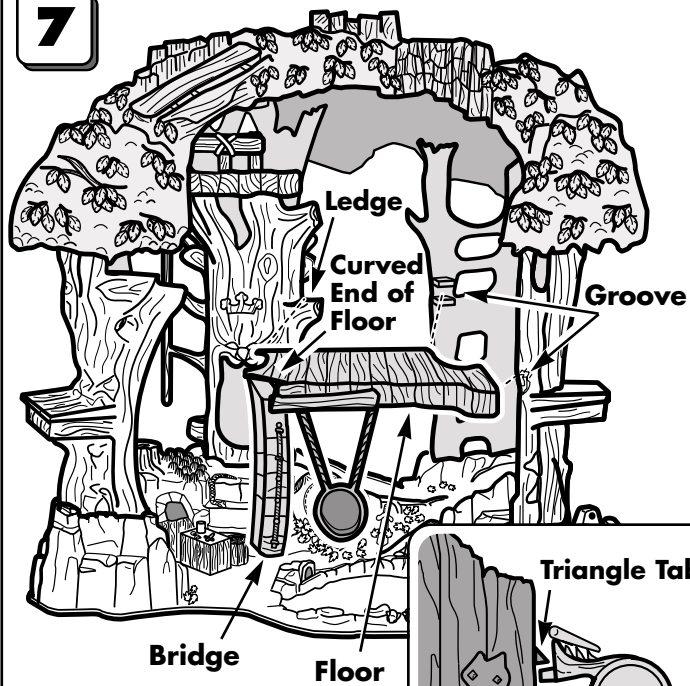


- With the bridge lowered and the floor angled as shown, fit the curved end of the floor onto the ledge on the rear right trunk.
- Rotate the floor to fit it between the grooves on the rear left trunk and front left trunk.
- Make sure the triangle tab on the floor fits behind the post on the front left trunk (see top view inset).
- Raise the bridge.

8

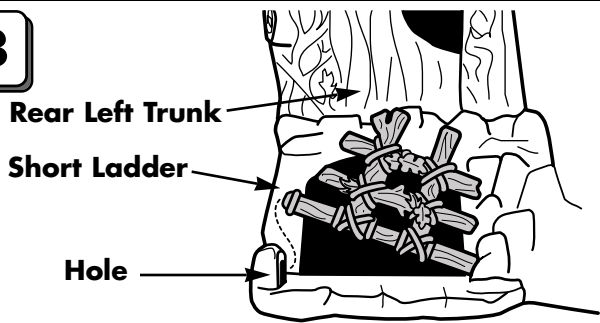


- Insert and snap one end of the short ladder into the hole in the base behind the rear left trunk.
- Insert the other end of the short ladder into the other hole in the base.

9

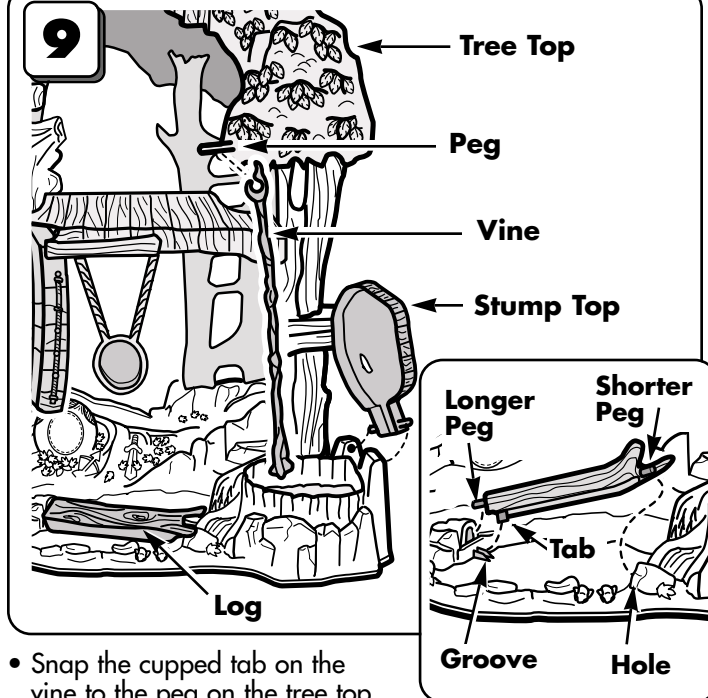

- Snap the cupped tab on the vine to the peg on the tree top.
- At an angle insert one of the pegs on the stump top into one of the holes in the stump.
- Insert and snap the other peg on the stump top into the other hole in the stump.
- At an angle insert the longer peg on the log into the hole in the base. Make sure the tab on the underside of the log fits into the groove in the base (See inset).
- Insert and snap the shorter peg on the log into the other hole in the base.

10

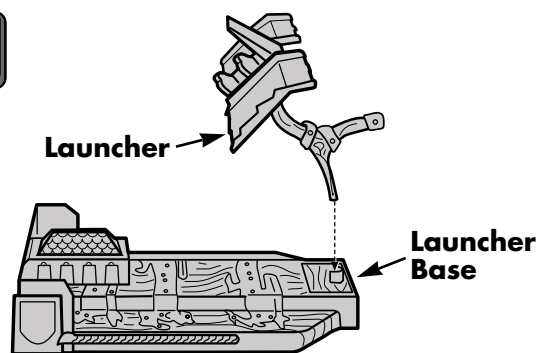


- Insert and snap the launcher into the launcher base.

# Let's Play!

## ⚠ CAUTION

- Do not fire boulders or arrows at point blank range.
- Only use the boulders and arrows supplied with this toy.


1

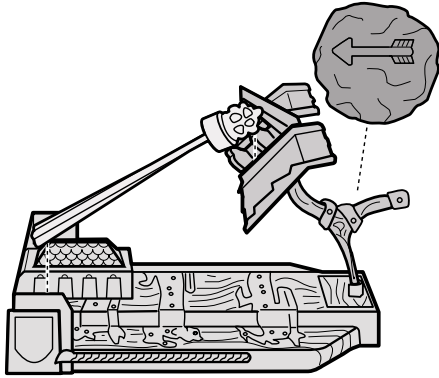

You can launch a boulder and arrows together or singly!

- Fit one or more arrows into the grooves in the catapult.
- Place the boulder on the front of the catapult too!

2

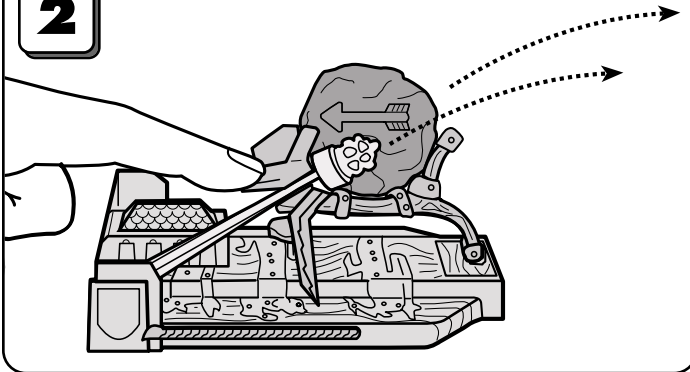


- Push the tab down and then release it to fire the arrows and boulder.

Tree Top  
Hole in Tree Top



- Place a boulder on the tree top and watch it roll through the forest.
- Drop the boulder through the hole in the tree top and watch it roll through the forest.

Snakes

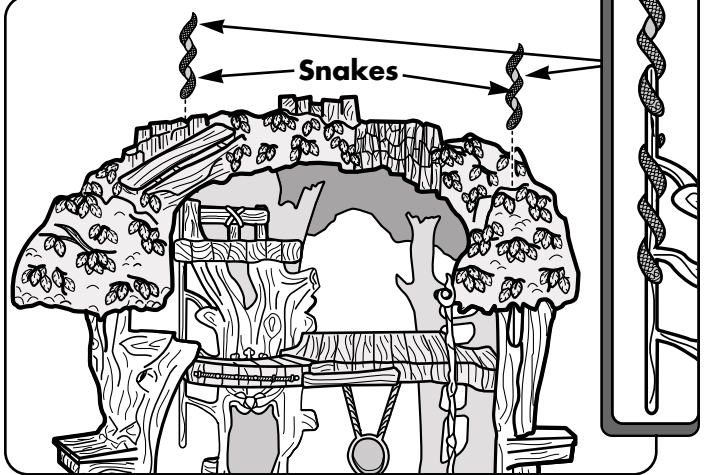

- Fit the snakes onto the poles and watch them slither down!



### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.