

# Fisher-Price®

## Instructions

# Snap Inliners

Model Number: 77115, 77137



*Please keep these instructions for future reference.*

*No assembly is required.*

*Tool needed to rotate wheels:  
4mm Allen Wrench (not included).*

*For ages 4 years and up.*

*Fits child's shoe size 10 to 13½ and 1-2.*

*For children up to 81 lbs.*



**Note:** Protective equipment shown in these photos is not included with this toy.



## WARNING

To prevent injury, always wear protective equipment, including helmet, wrist guards, knee pads and elbow pads (not included).

 
## Safety Tips

**IMPORTANT!** Please take a moment to review the following safety tips with your skater.

- Your skater should wear shoes or sneakers that provide good support.
- Your skater should not wear open-toe shoes.
- Your skater should wear a helmet, knee pads, wrist guards and elbow pads to guard against bumps and bruises.
- Keep loose laces and pant legs away from the wheels.
- Supervise beginner skaters. Hold the beginner's hand and guide the new skater along a smooth, level surface.
- Make sure your skater knows how to brake and stop in these skates.
- Choose areas for skating which are free of obstacles.
- Never skate in areas with water, wet spots, snow, ice, sand, oil, gravel etc.
- Make sure your skater never skates on streets, roadways and driveways which enter vehicle traffic routes.
- Towing skaters with bicycles or cars is **unsafe**.
- Make sure your skater does not skate down hill. Braking is gradual with these skates. Your skater should keep this in mind to allow enough stopping distance.
- Before skating, check to be sure all wheels, the brake, straps and other plastic parts are not loose, cracked or broken. Tighten all parts, as necessary. If any parts are cracked or broken, discard the skates.

## Size Adjustment

*Adjust these skates to fit over your child's shoes.*

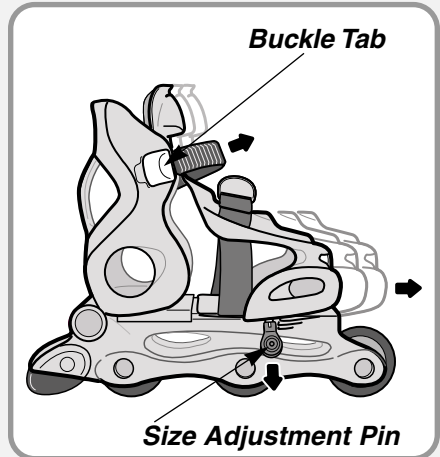


- Lift the top strap latch. Press the top strap buckle tab to remove the top strap from the buckle.
- Locate the size adjustment pin on the side of each skate.
- While pulling the size adjustment pin out, pull the front of the skate to the appropriate size for your child.
- Release the size adjustment pin to “snap” it into position.

**Hint:** You may need to push the front of the skate in or out slightly to fit the size adjustment pin into position.


**Note:** Make sure both skates are properly sized.

## Fitting the Skates

 There is a right and left skate. Note the R (for right) and L (for left) on the inside sole of each skate.

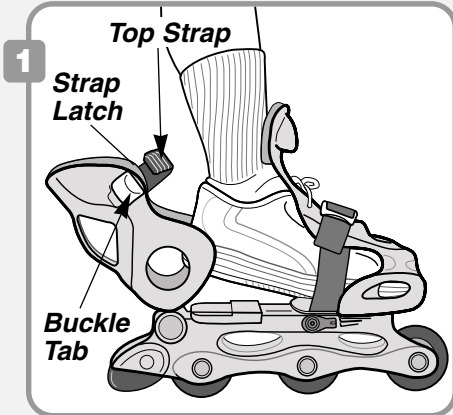

 - Make sure your child is seated.
- Lift the top strap latch. Press the top strap buckle tab to remove the top strap from the buckle. Pull the back of the skate down.
- Insert a foot (toes first) into the skate. As your child pushes down with the heel of the foot, the back of the skate will fit into place.

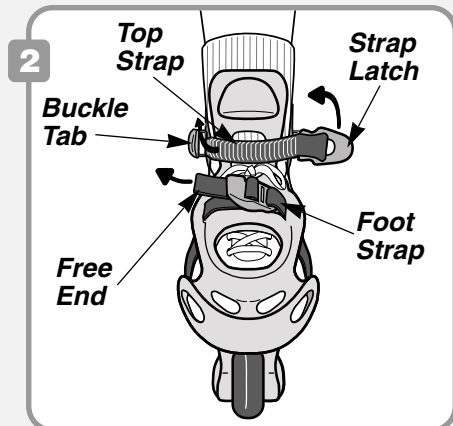

- Insert the top strap into the buckle tab to fit it to your child.
- Press the top strap latch down to lock the top strap in place.
- Pull the free end of the foot strap to tighten.

## Braking

 


**IMPORTANT!** Your child must first learn how to stop using the heel brake on these skates.


While leaning forward, bend at the knees and tilt the braking skate (with the heel brake) toe up. Apply pressure to the heel brake. The heel brake stops your skater **gradually**.

**Please be sure your skater keeps this in mind and always allows enough stopping distance.**

## Wheel Rotation

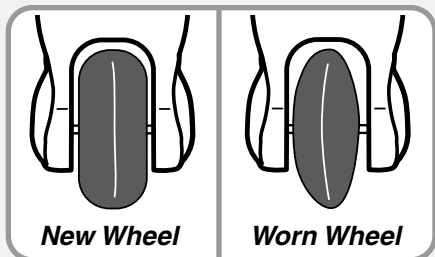


 **Proper care and maintenance is important!** Over time, and without rotation, the wheels will wear unevenly on the inside edge. When this happens, it's time to rotate the wheels.

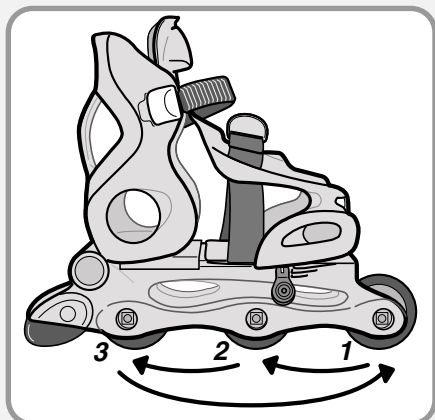

- Using a 4mm Allen wrench, loosen and remove the bolt and nut in each wheel. Remove each wheel, keeping in mind its original location.
- Turn the wheel around so that the worn edge is now on the outside. Now, replace each wheel in the skate, one position back from where it originally was placed. For example, the first wheel should be replaced in the second position; the second wheel should be replaced in the third position; and the last wheel should be replaced in the first position.
- Replace the nut and bolt in each wheel and tighten with a 4mm Allen wrench. Do not over-tighten.

## Heel Brake Wear

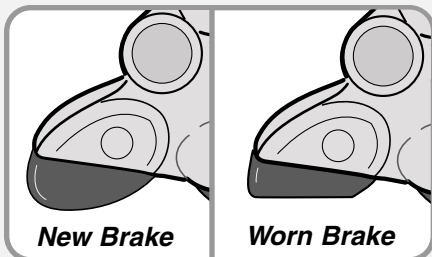 

**Proper care and maintenance is important!** Over time, the heel brake will wear down. If the heel brake is worn, it's time to replace it! Please call Fisher-Price® Consumer Affairs at **1-800-432-KIDS** for replacement information.

## Replacement Parts

**The wheels and heel brake are replaceable with Fisher-Price® parts only!**

If you would like to order a wheel replacement kit(s) or a brake replacement kit, or have any questions regarding this product, please call Fisher-Price® Consumer Affairs at **1-800-432-KIDS**, 8 AM-5 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Affairs  
636 Girard Avenue  
East Aurora, New York 14052

If you have any questions about this product:

**In Canada**, call **1-800-567-7724**, or write to:  
Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2.

**In Great Britain**, telephone **01628 500303**.

**In Australia**, Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870, Richmond,  
Victoria 3121 Australia. Consumer Advisory Service  
1-800-800-812 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc.  
East Aurora, New York 14052, U.S.A.

©1998 Mattel, Inc. All Rights Reserved.

® and TM designate U.S. trademarks of Mattel, Inc.

Printed in Mexico

77115pr-0920