



Replacement Instructions

Intelli-Table™

Model Number: 77148

WARNING

Choking Hazard


- Your child could swallow and choke on a knob retainer if it accidentally cracks off a red knob on either the white or yellow Play and Learn Rings.
- Do not use this product until you have repaired it using this replacement kit.

Replacement Kit Parts

Tool Required for Replacement: Phillips Screwdriver (not included).



Purple Knob

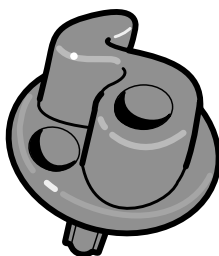


Purple Musical Note Knob




2 Screws

Size: #4 x 3/4"

 SHOWN ACTUAL SIZE



2 White Knob Retainers


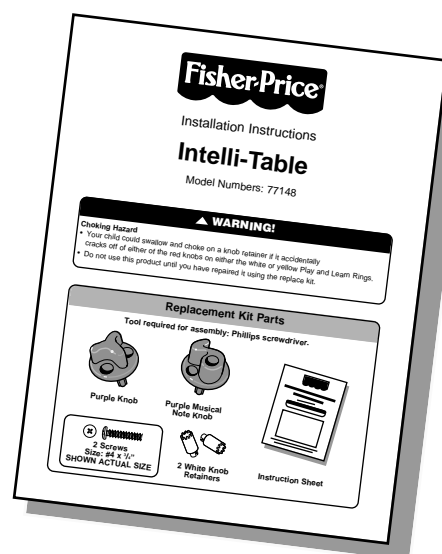


Instruction Sheet

Replacement Instructions

IMPORTANT! Carefully follow these instructions to replace the red knobs and knob retainers on the red and white Play and Learn Rings.

White Play and Learn Ring

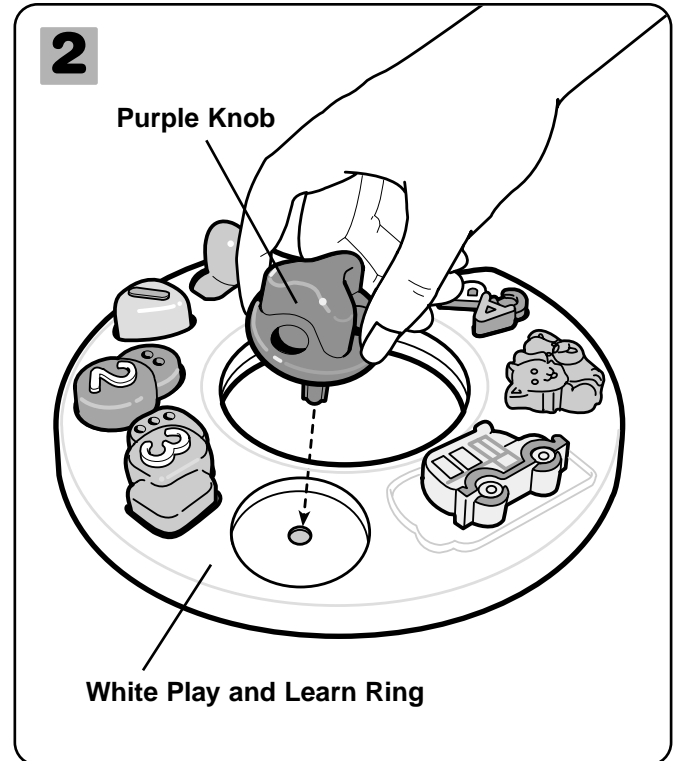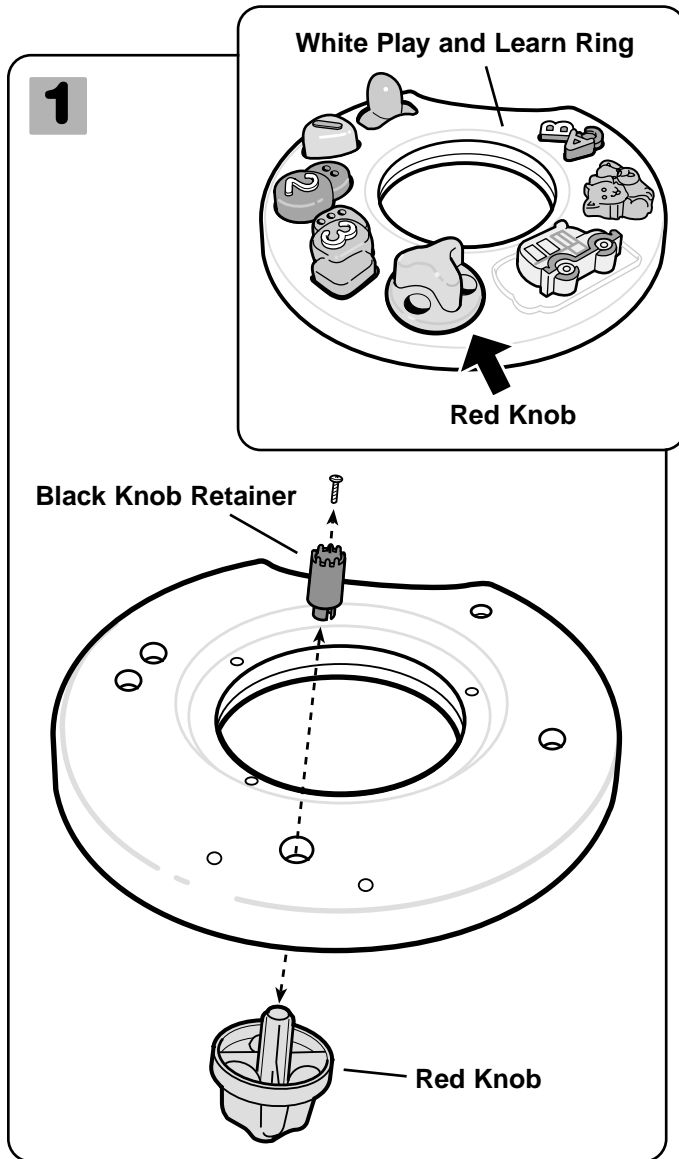


- Turn the white Play and Learn Ring over so the top is upright.
- Fit the new, purple knob to the topside of the white Play and Learn Ring.

- Locate the red knob on the white Play and Learn Ring.
- Turn the white Play and Learn Ring over. While holding the red knob, remove the screw in the black knob retainer using a Phillips screwdriver.
- Remove and discard the black knob retainer, red knob, and screw.

Replacement Instructions

3

White Knob Retainer

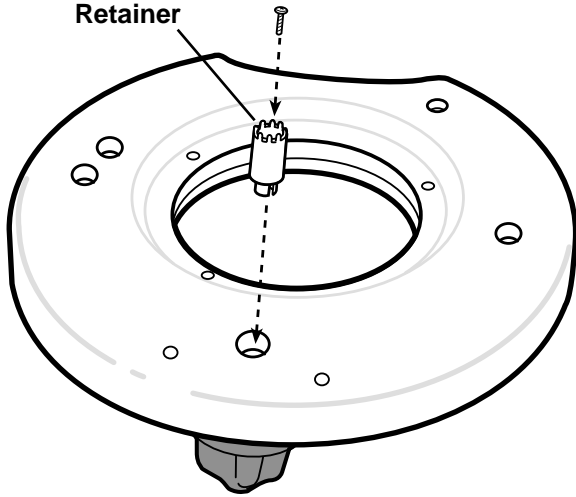


- While holding the purple knob in place, turn the white Play and Learn Ring over.
- Insert and fit the smaller end of the new, white knob retainer into the white Play and Learn Ring. (You may need to turn the knob retainer until it drops into place.) Make sure the new, white knob retainer is flush with the white Play and Learn Ring surface.
- Insert one of the screws provided through the knob retainer and into the new, purple knob. While holding the purple knob, tighten the screw with a Phillips screwdriver. Do not over-tighten.

Yellow Play and Learn Ring


4

Yellow Play and Learn Ring

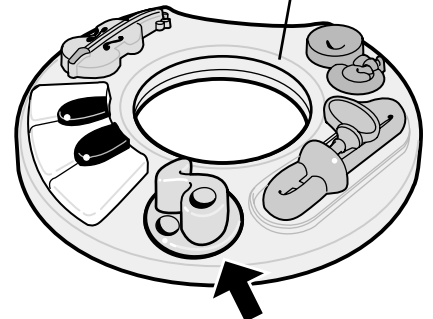

Red Musical Note Knob


Black Knob Retainer

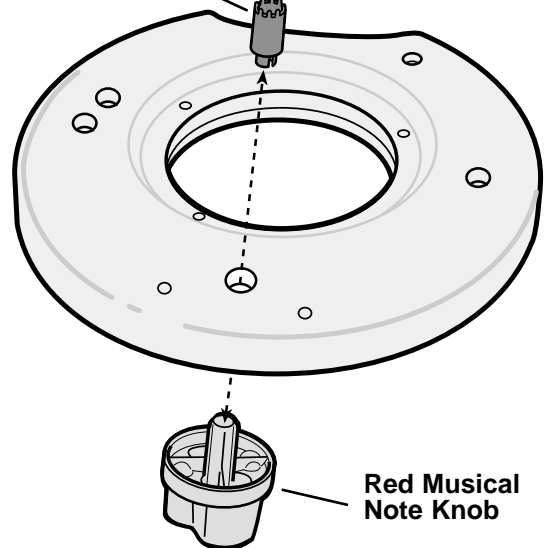


Red Musical Note Knob

- Locate the red musical note knob on the yellow Play and Learn Ring.
- Turn the yellow Play and Learn Ring over. While holding the red musical note knob, remove the screw in the black knob retainer, using a Phillips screwdriver.
- Remove and discard the black knob retainer, red musical note knob, and screw.

Replacement Instructions

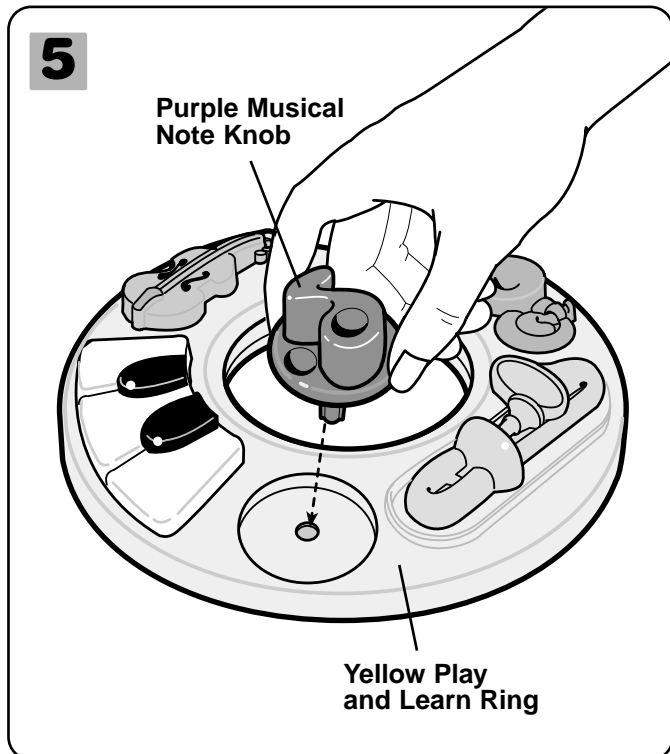

- Turn the yellow Play and Learn Ring over so the top is upright.
- Fit the new, purple musical note knob into the topside of the yellow Play and Learn Ring.

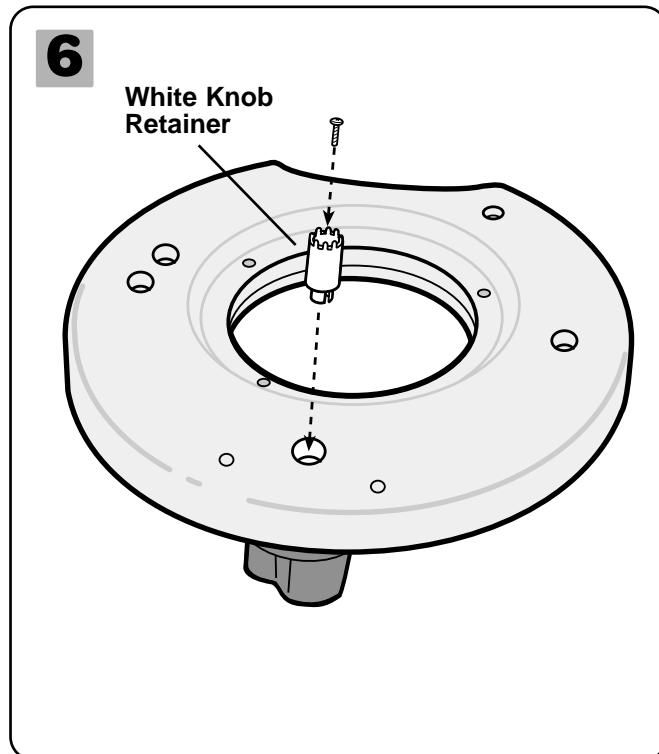

- While holding the purple musical note knob in place, turn the yellow Play and Learn Ring over.
- Insert and fit the smaller end of the new, white knob retainer into the yellow Play and Learn Ring. (You may need to turn the knob retainer until it drops into place.) Make sure the new, white knob retainer is flush with the yellow Play and Learn Ring surface.
- Insert the remaining screw (provided) through the knob retainer and into the new, purple musical note knob. While holding the purple musical note knob, tighten the screw with a Phillips screwdriver. Do not over-tighten.

Replacement is now complete.

Fisher-Price®

If you have further questions regarding the replacement of the knobs and knob retainers, please call Fisher-Price® Consumer Relations, toll free at 1-888-966-3375, 8 AM – 6 PM EST Monday through Friday. Hearing impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.
©2001 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.