



Rescue Jet

Instructions

Product Number 77473



Please save these instructions for future reference.


Adult assembly is required.

Requires three "AA" (LR6) alkaline batteries for operation (not included).


Tool required for battery installation: Phillips screwdriver (not included).




Parts

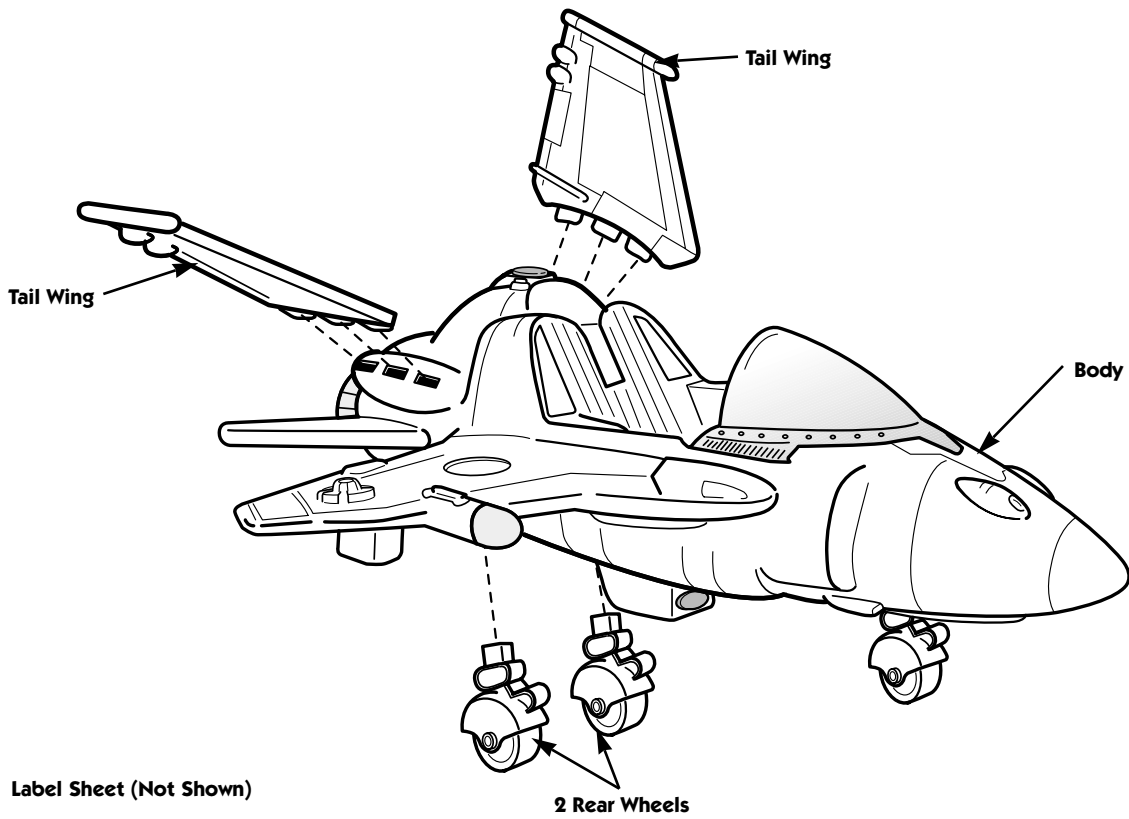

Assembly

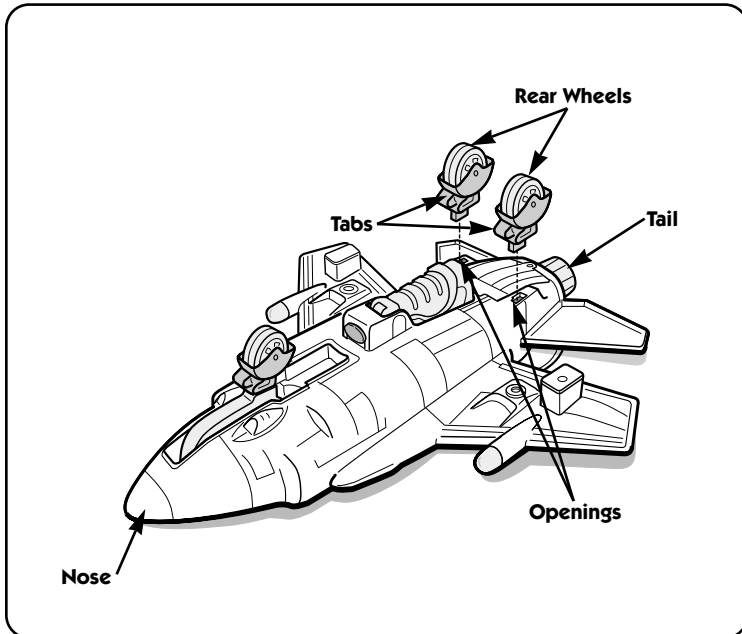

- Turn the jet upside-down, and place it on a flat surface.
- Position the rear wheels so that the tabs are toward the nose of the jet.
- Insert and **“snap”** the plug on the rear wheels into the openings near the tail of the jet.

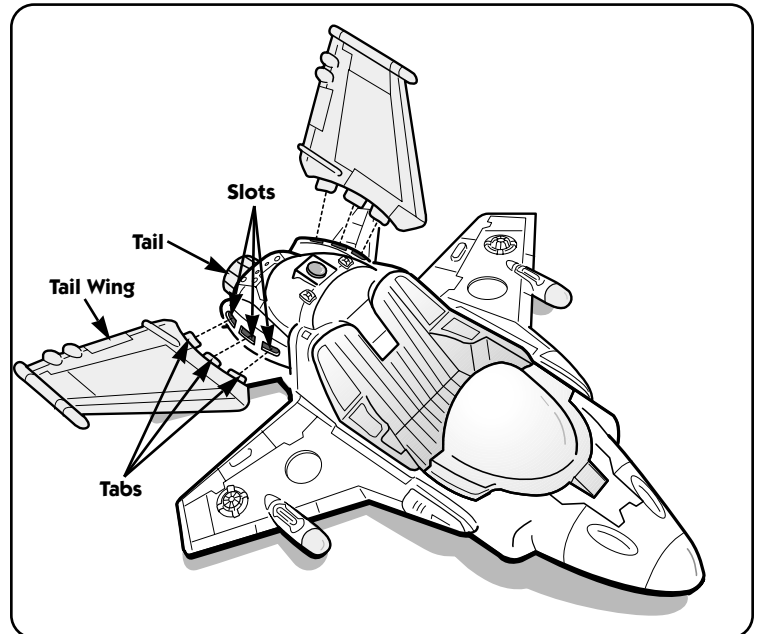


- Position the jet upright.
- Insert and **“snap”** the tail wing tabs into the slots in the tail of the jet.


Decoration

Proper label application will help to keep the labels looking their best!


- Wash your hands before applying the labels.
- Make sure the areas where the labels will be applied are clean and dry. Wipe this toy with a clean, soft, dry cloth to remove any dust or oils.
- For best results, do not attempt to apply a label more than once.
- Apply the labels as shown in the illustrations.

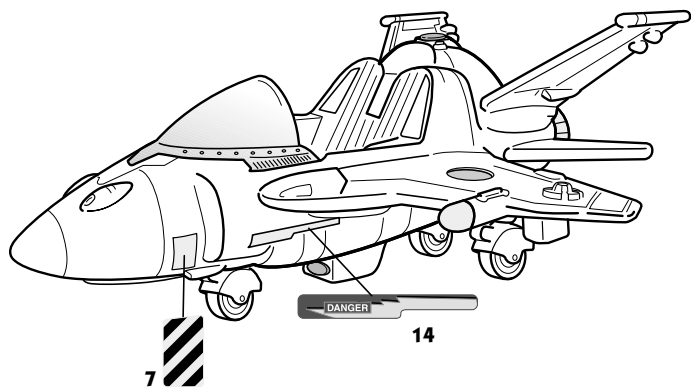


Right Side View

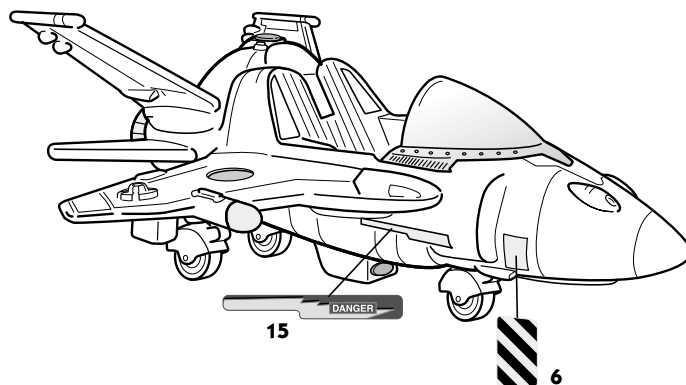

Left Side View

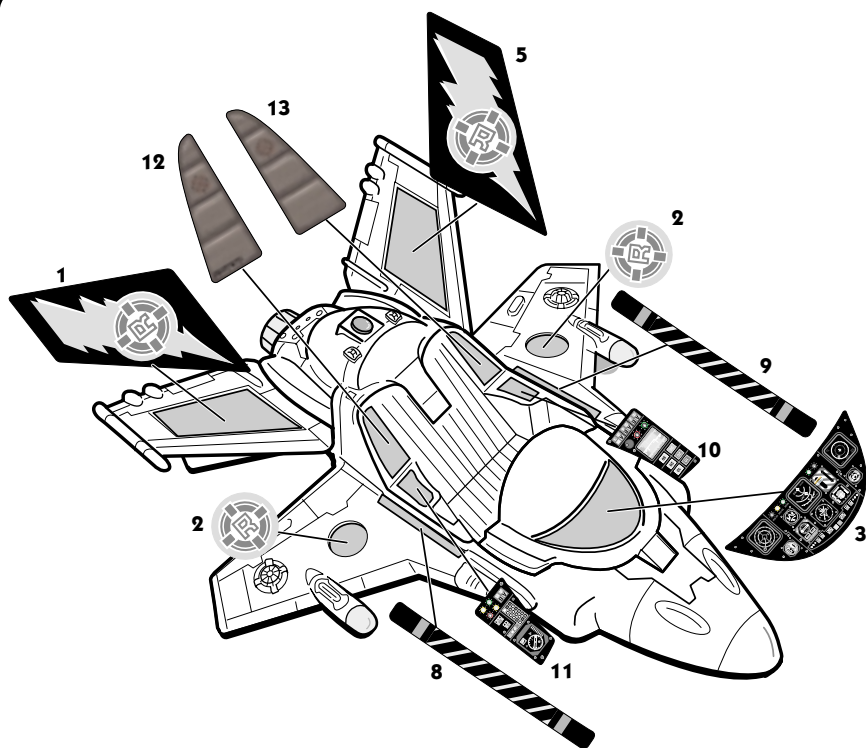


Top View

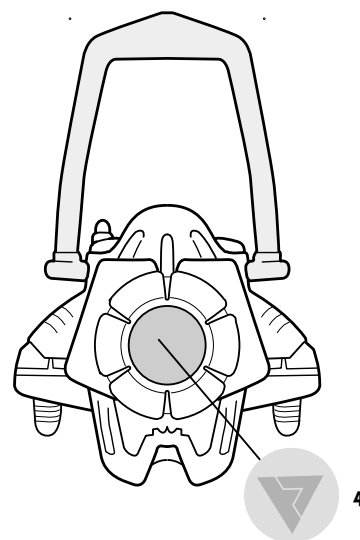


Rescue Pack

Battery Installation

Hint: We recommend the use of alkaline batteries for longer battery life!

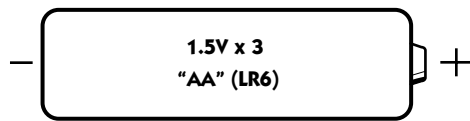

SHOWN ACTUAL SIZE

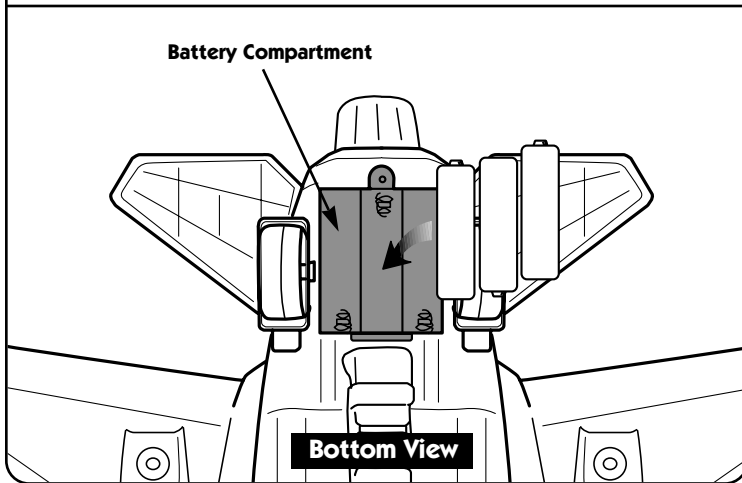

- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door.
- Insert three "AA" (LR6) alkaline batteries, as indicated in the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.


Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the Battery Installation instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

To the rescue

Hint: Bring this air rescue mission to life with a Voice Tech™ Rescue Heroes™ figure (sold separately).

Voice Tech™ Billy Blazes™
sold separately.

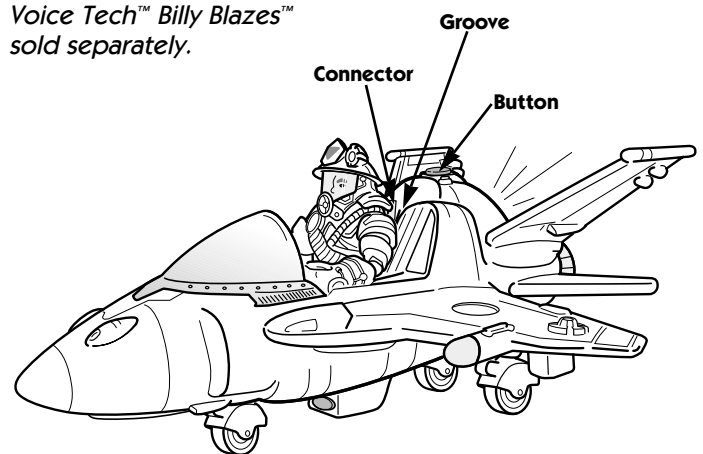


- Be sure to remove the backpack from the Voice Tech™ Rescue Heroes™ figure. (sold separately)
- Slide the connector on the back of the figure into the groove in the seat back in the jet cockpit.
- Press the button on the top of the jet for a rescue phrase and lights! The jet "recognizes" which Voice Tech™ Rescue Heroes™ is in the cockpit.

"Billy Blazes™ here. No one gets left behind. Do you copy?"

(Voice Tech™ figure required for phrases - sold separately).

Hint: If a Voice Tech™ Rescue Heroes™ figure is not inserted into the cockpit, pressing the button on the top of the jet will result only in jet engine sounds and lights.

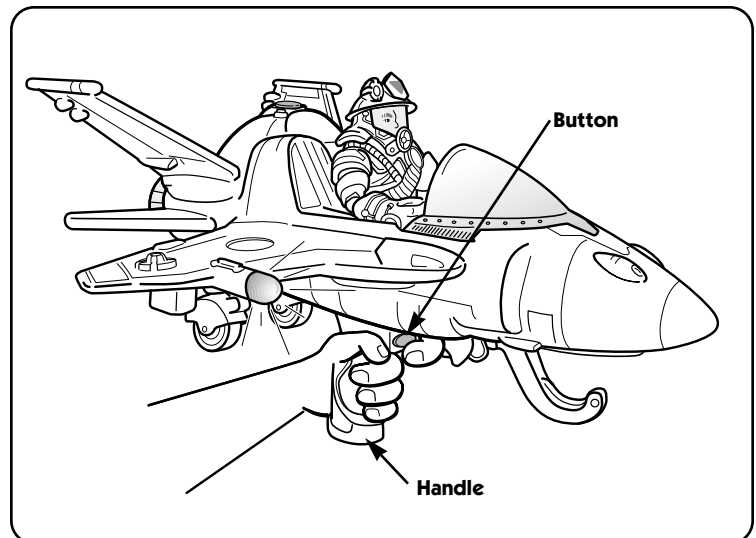


- Lower the handle to guide "flights".
- Press the button near the handle for jet engine sounds and lights!

"Zoouooooommmmmmm....."


To the rescue

Note: Rescue Heroes™ figures sold separately.

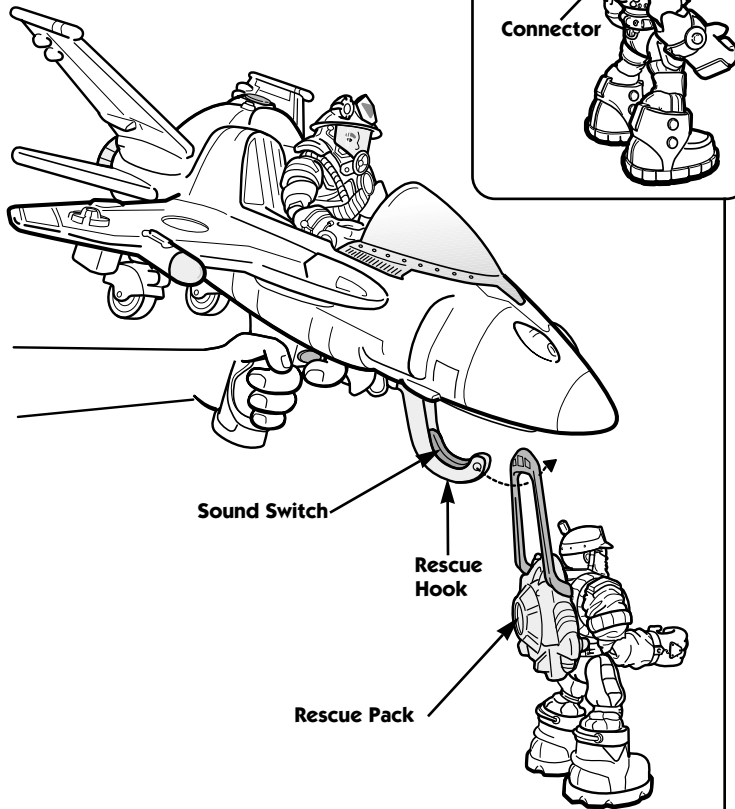


- Fit the rescue pack onto the back of the figure.
- Lower the rescue hook to start sounds and lights.
"Beep".
- Lift the figure using the rescue hook for sound and lights!

Hint: There is a sound switch on the rescue hook!

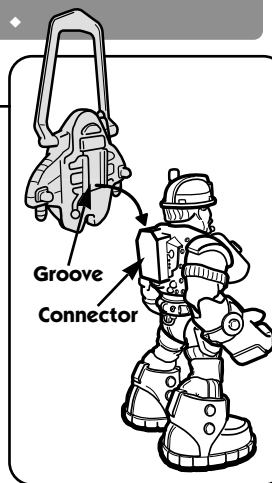

Storage

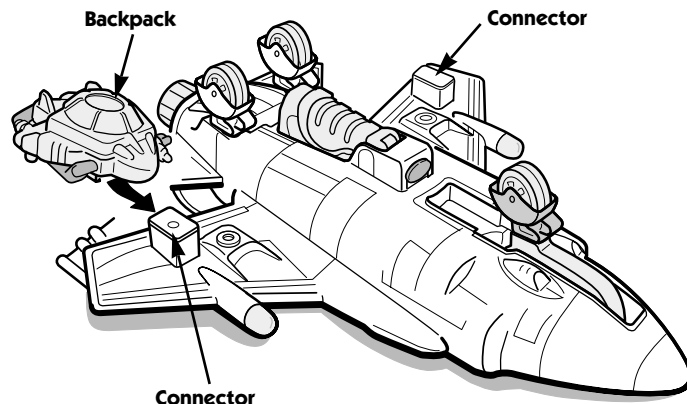

- Fit the backpack to the connector on the underside of either wing.

Care

- If sound or lights become faint or stop, it's time for an adult to replace the batteries!
- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

Consumer Information



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that Voice Tech™ Rescue Heroes™ Jet is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase. Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Collect the entire Voice Tech™ team!

Voice Tech™ Rescue Heroes interact with Voice Tech™ Fire Truck and Jet!
(Each sold separately.)



www.fisher-price.com