

Care

IMPORTANT! You must remove the sounds and light unit from this toy before washing.

- Open the fastener flap on the back of the toy to locate the sounds and light unit.
- Pull firmly to remove the sounds and light unit from the toy.
- Place the toy in a pillowcase and machine wash cold on gentle cycle. Do not use bleach.
- Line dry.
- After drying, fit the sounds and light unit back into the toy.
- Close the fastener flap.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at 1-800-432-KIDS, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

CANADA, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Questions? 1-800-567-7724. **GREAT BRITAIN**, Mattel U.K., Ltd., Helpline: 01628 500303.

AUSTRALIA, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2000 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

77491B-0920

Fisher-Price®

BIGIDEAS
VeggieTales®

Junior Asparagus Glowlight®

Model Number 77491



 
 
VeggieTales® is a registered trademark of Big Idea Productions, Inc.
©2000 Big Idea Productions, Inc. All rights reserved.

- Please save these instructions for future reference.
- Adult assembly is required for battery installation and light bulb replacement.
- Requires three "AAA" (LR03) alkaline batteries (included) for operation.
- Requires one PR7 (3.7V) light bulb (included).
- Tool required to install battery and replace light bulb: Phillips Screwdriver.

Learn more about VeggieTales® at
www.Bigidea.com

www.fisher-price.com

Battery Installation and Use

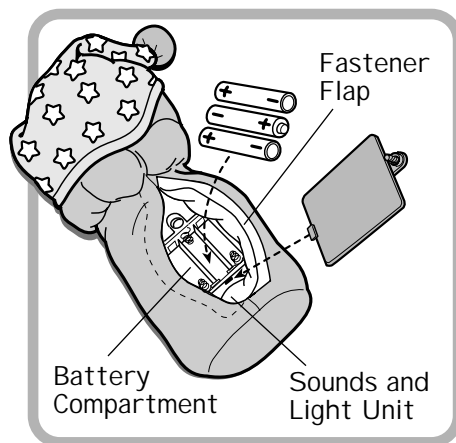

Shown Actual Size


- Open the fastener flap on the back of the toy to locate the sounds and light unit.
- Loosen the screw in the battery compartment cover using a Phillips screwdriver. (The screw will remain in the cover.)
- Lift to remove the battery compartment cover.
- Insert three, new "AAA" (LR03) alkaline batteries as indicated inside the battery compartment.

Helpful Hint: We recommend use of alkaline batteries for longer battery life.

- Fit the tab on the bottom of the battery compartment cover into the slot in the battery compartment and close the cover.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or light from this toy stop working or work erratically, it's time for an adult to replace the batteries!

Battery Tips:


- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can cause damage. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

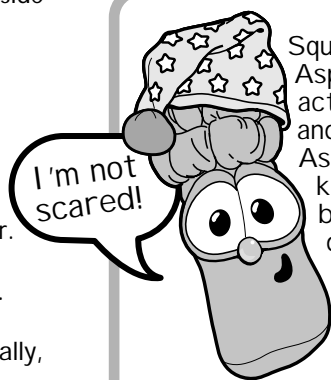


Squeeze Junior Asparagus to activate lights and sounds. Junior Asparagus helps kids learn not to be afraid of the dark as he hums a lullaby, talks and softly glows.

Light Bulb (Glass Bulb) Replacement


IMPORTANT! Should the light bulb become non-functional, you are advised to remove and replace it. This should be carried out away from the child's sleep or play area.

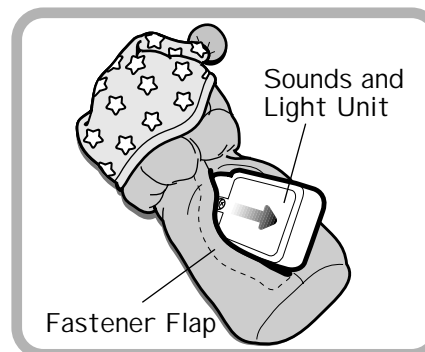


- Open the fastener flap on the back of the toy to locate the sounds and light unit.
- Pull firmly to remove the sounds and light unit from the toy.

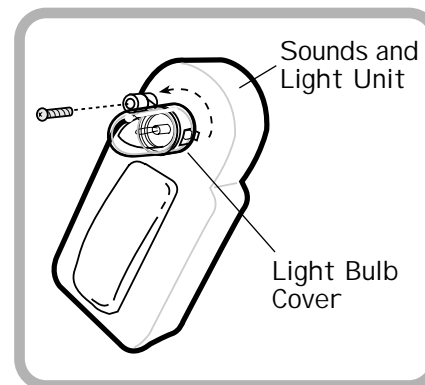

- Loosen the screw on the light bulb cover using a Phillips screwdriver.
- Twist the light bulb cover counter-clockwise and lift to remove.
- Remove and properly discard the light bulb. Beware of cracked or broken glass.
- Replace the light bulb with a new PR7 (or equivalent) light bulb.

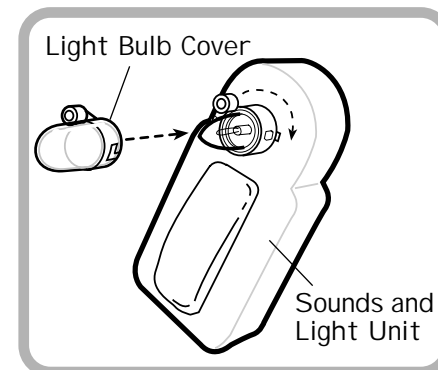

- To replace the light bulb cover, fit the slots on the light bulb cover onto the pegs on the sounds and light unit.
- Twist the light bulb cover clockwise to secure it in place.
- Replace the screw and tighten with a Phillips screwdriver. Do not over-tighten.

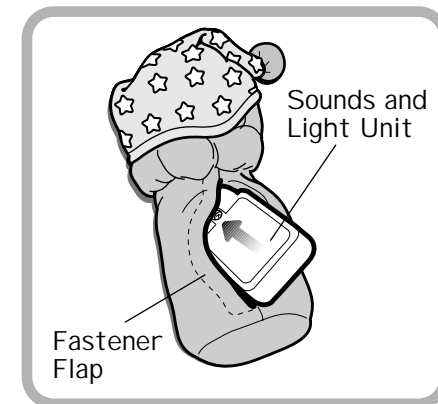

- Fit the sounds and light unit back into the toy.
- Close the fastener flaps.