

Fisher-Price®

Instructions

All-in-One™ Pirate Ship

Model Number 77543



- **Please keep these instructions for future reference.**
 - **Adult assembly is required.**
 - **No tools needed for assembly.**
- **Pirate Ship is not designed for use in water.**

www.fisher-price.com


Attaching the Masts

Crow's Nest Mast

Tall Mast


Slot

Slot

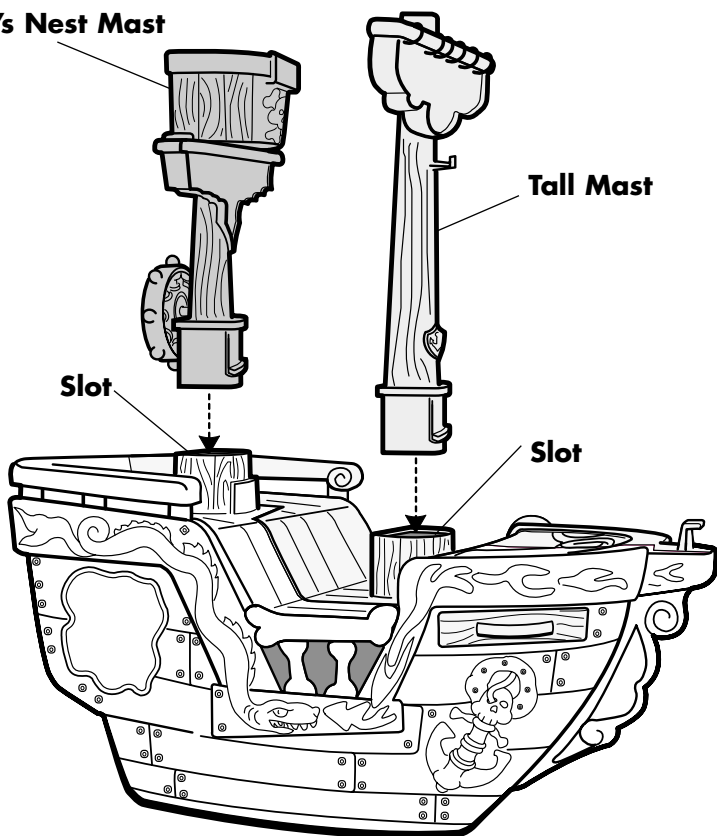

- Identify the crow's nest mast from the tall mast. (The crow's nest mast has a steering wheel.)
- Insert and snap the crow's nest mast into the slot in the Pirate ship deck, as shown.
- Insert and snap the tall mast into the slot in the Royal Navy ship deck, as shown.

Attaching the Ladders

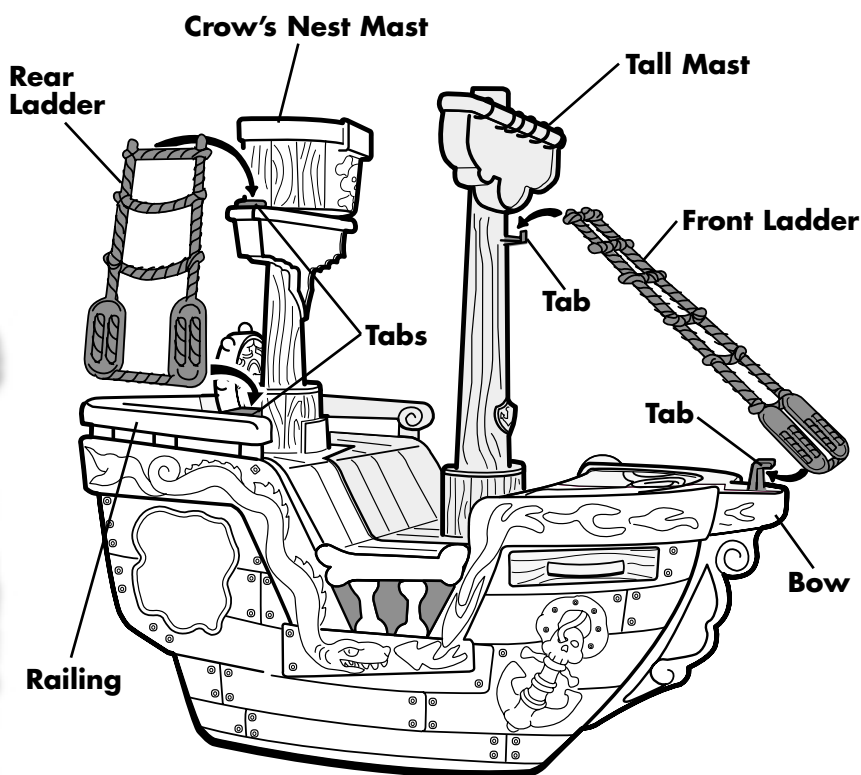


- Identify the front ladder from the rear ladder. (The rear ladder is smaller than the front ladder.)
- Hook the top of the rear ladder over the hooked tab at the top of the crow's nest mast.
- Fit the bottom of the rear ladder underneath the hooked tab on the Pirate ship railing.
- Hook the top of the front ladder over the hooked tab at the top of the tall mast.
- Fit the bottom of the front ladder underneath the hooked tab in the bow of the Royal Navy ship.

CAUTION


Only use the projectiles supplied with this toy.
Do not fire at people or animals.
Do not fire the barrel at point blank range.

Firing the Cannons

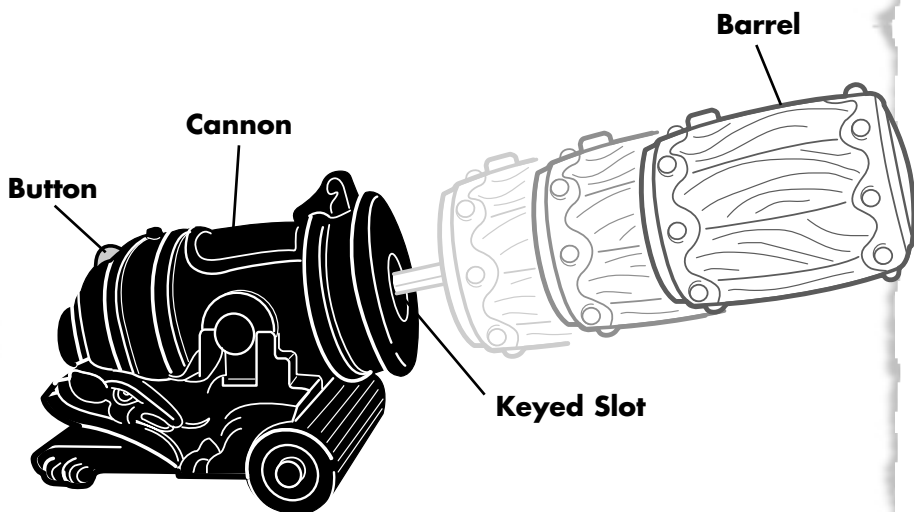

- Insert the straight end of a barrel into the keyed slot in a cannon until you hear a click.
- Push the button on the cannon to send the barrel flying!

Ahoy, Mate!

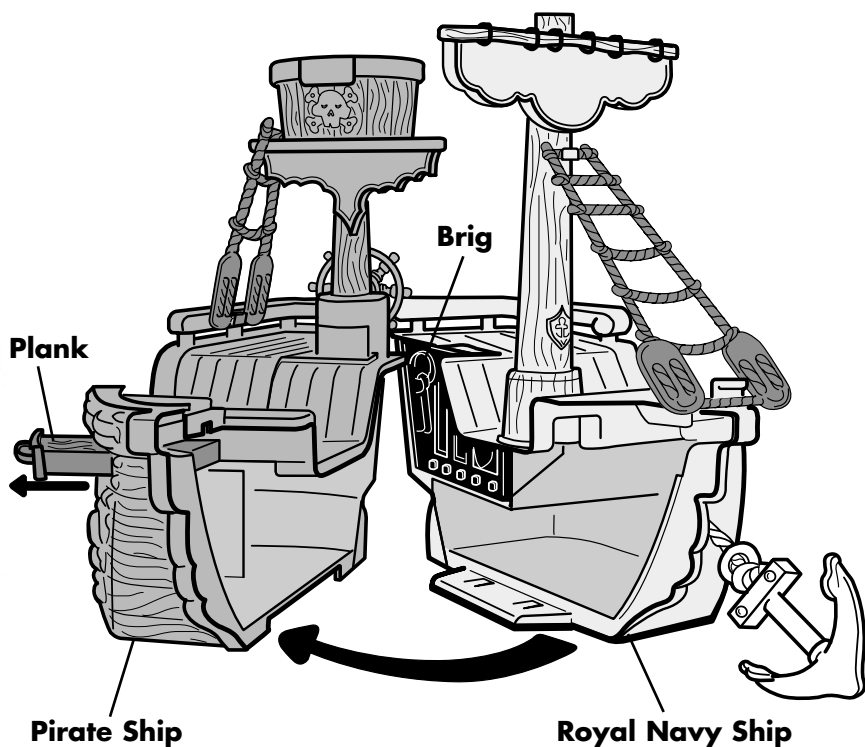

- Pull the two ship halves apart to separate the Pirate ship and the Royal Navy ship.
- Snap the two ship halves together to create one large ship!
- Plank pulls out from the side of the Pirate ship.
- Built-in "brig" keeps the enemy out of trouble!
- When playtime is over, store all accessories inside the ship and snap the ship halves together.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution.
- Pirate Ship is not designed for use in water.



Questions? We'd like to hear from you!

Call Fisher-Price Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM – 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500303.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price, Inc. is a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

© 2000 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.