



Teach 'n Tug Choo Choo™

Instructions

Product Number 77885



 
Please keep these instructions for future reference.

Requires three "AA" batteries for operation (included).


Tool required to replace batteries: Phillips screwdriver (not included).

Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries.

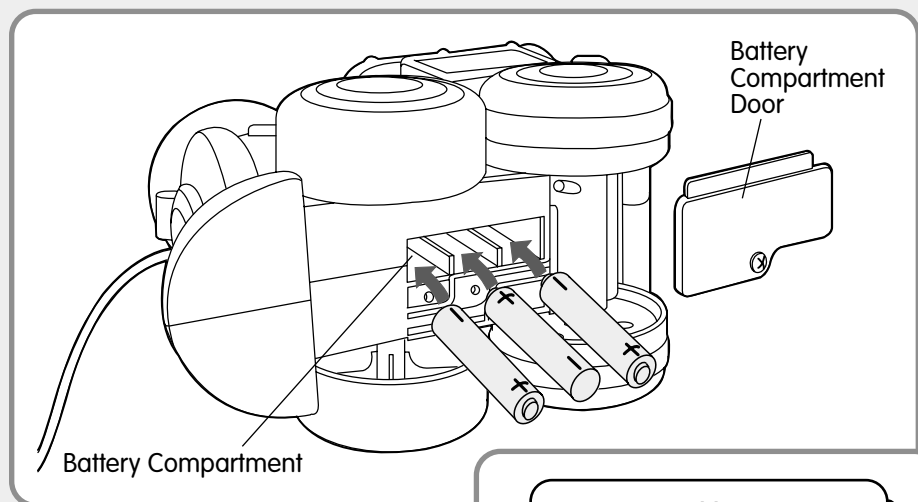


- Locate the battery compartment on the bottom of the Choo Choo.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Carefully remove the exhausted batteries from the battery compartment. Properly discard the used batteries.
- Insert three, new "AA" (LR6) alkaline batteries in the battery compartment as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

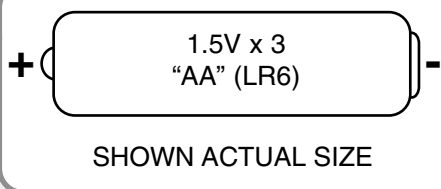 

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- When sounds from the toy become faint or stop, it's time for an adult to change the batteries!

 Play Time

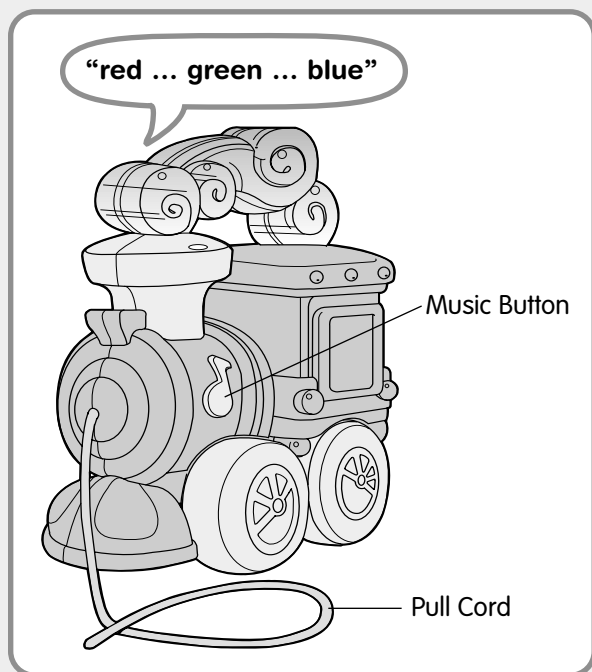

- Pull the Choo Choo or press the music button, and the smokestack lights up with different colors.
- The Choo Choo also says the names of the colors as they light.
- When the Choo Choo is pulled faster, the lights speed up.
- Press the music button twice to hear a little tune.

Care

Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TTD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

In Canada, call 1-800-567-7724, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500302.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1-800-800-812 (valid only in Australia).

www.fisher-price.com