

Fisher-Price **Kasey**  
the  
**Kinderbot**  
LEARNING SYSTEM

 
***French***



**Bonjour!**  
Learn  
French with  
me!



Discover what's possible™...[www.fisher-price.com](http://www.fisher-price.com)

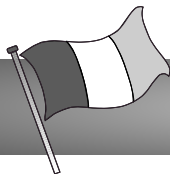


# Getting Started

Please keep this manual for future reference, as it contains important information.

**Before inserting the software cartridge, turn power off by presing the On/Off button on the top of Kasey's foot. Insert the software cartridge into the software port and Kasey automatically turns back on!**

Software Cartridge

 Software Port

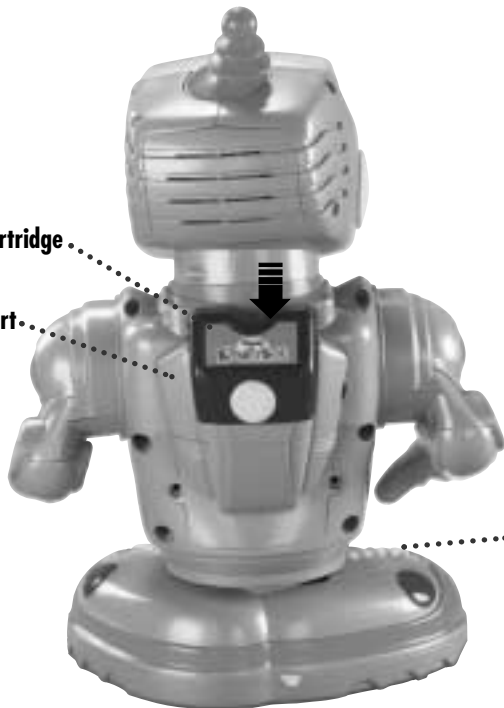

On/Off Button



# Oh, the places we can explore!

 
Choose a game or activity from the Main Menu: **French Alphabet Airplane**, **Pack the Magic Suitcase™**, **Chip's Photo Album™** or **Picture Postcards**. Touch a colored selection button to make your choice.

## **French Alphabet Airplane**

*Press the red selection button.  
Ready for take-off? You'll be  
flying high as you learn French  
letters, words and more!*

## **Pack the Magic Suitcase™**

*Press the blue selection button. Let's  
get packing! We can learn French  
words for clothing, food and animals!*

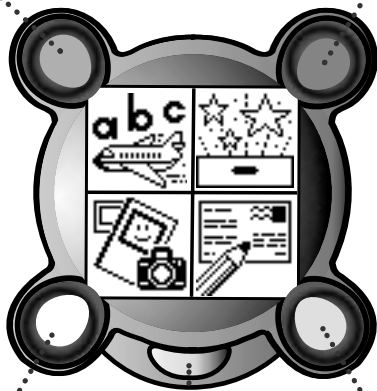

## **Chip's Photo Album™**

*Press the yellow selection button.  
No matter where we go, we can make  
friends – and count them! Un, deux,  
trois (one, two, three)!*

## **Write a Postcard to Friends**

 
 
*Press the green selection button. Help  
Kasey and Chip™ tell their friends  
about the Eiffel Tower, a beautiful palace  
and the fun places they visited in France.*

## **Home Screen**

*Press the Home Button to return to the Main Menu at any time.*





# French Alphabet Airplane

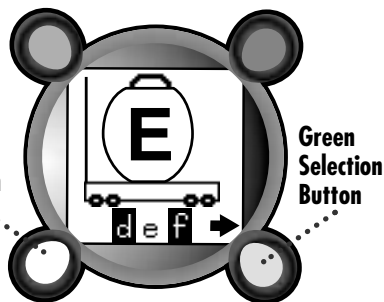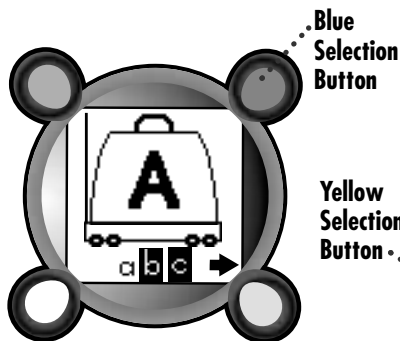

- Press the blue selection button to choose the upper case letter on the screen. Watch and listen to the French letter and a corresponding word.

  
- If you'd like to scroll forward or backward through the alphabet:
  - Press the green selection button to go forward.
  - Press the yellow selection button to go backward.

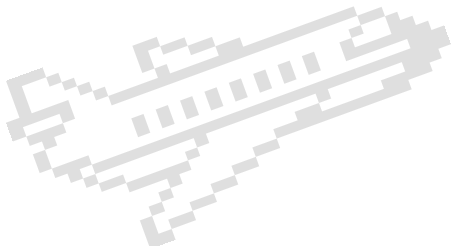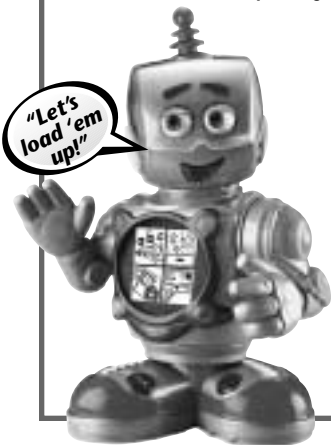

**Hint:** Press the red selection button to repeat the French letter.




# French Alphabet Airplane

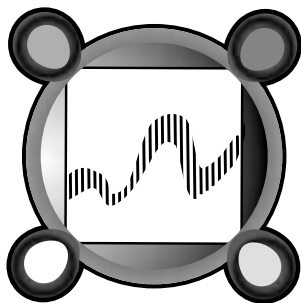 


Red  
Selection  
Button

 - When you get to Z, it's music time!

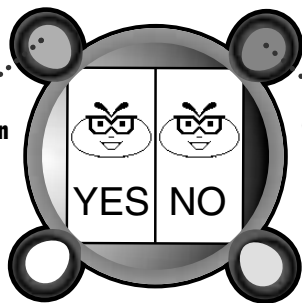


Blue  
Selection  
Button

 - To play the tune again, press the red selection button (for yes), or press the blue selection button (for no) and return to the Main Menu.

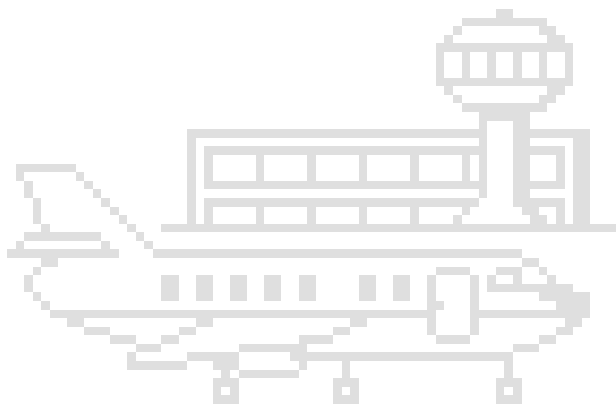




# Pack the Magic Suitcase™

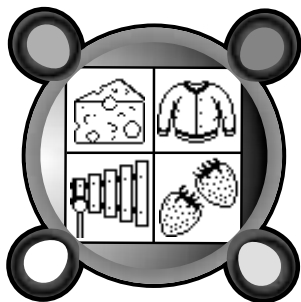 

 - What do you want to pack? Press any colored selection button to make your choice.

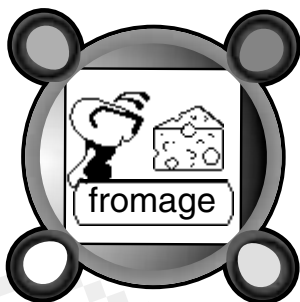


- Watch Chip™ pack what you selected.




# Pack the Magic Suitcase™



 - After you pack four objects, Kasey tells you the French name of each object in the suitcase.

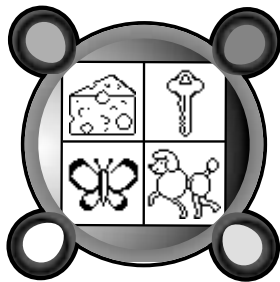

 
- Kasey may ask you to pack one of the objects again. This time, Kasey asks for the object in French.
- Press a colored selection button to make your choice.

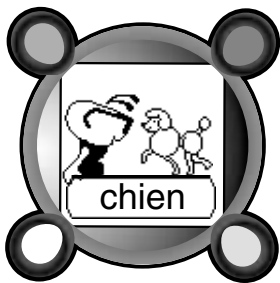


- If you choose correctly, "Fantastique !"
- If you choose incorrectly, Kasey asks you to try again. After a third incorrect response, Kasey helps you out by showing you the correct answer.



# Pack the Magic Suitcase™

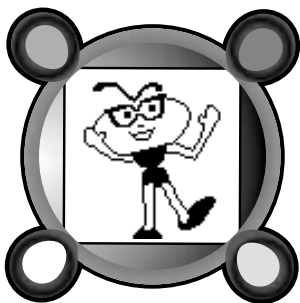 


Red  
Selection  
Button

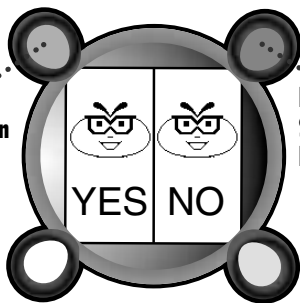 

Blue  
Selection  
Button

- It's time to stretch or listen to a song with Kasey and Chip™.

 
- Kasey may ask you if you'd like to listen to the song again. Press the red selection button (for yes), or you can go back to the Main Menu by pressing the blue selection button (for no).

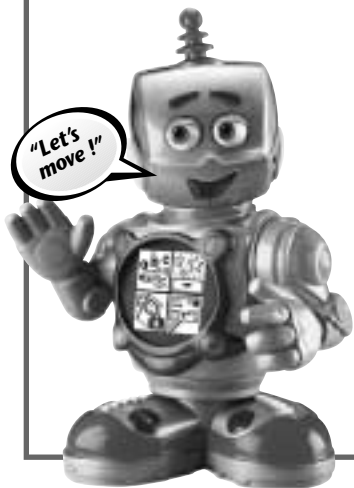






# Chip's Photo Album™

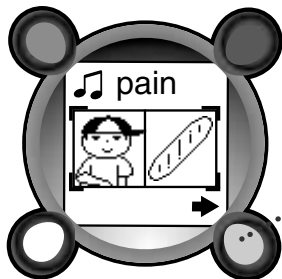 

Yellow  
Selection  
Button

 Green  
Selection  
Button

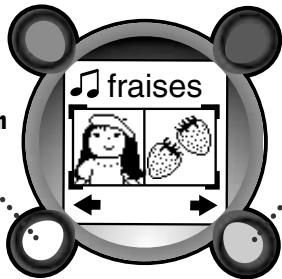


Green  
Selection  
Button

- Kasey tells you the name of one of his friends along with a favorite object or food.
- You can practice saying French words too!
- To see the previous picture in the photo album, press the yellow selection button.
- If you'd like to select the next picture, press the green selection button.


***Hint:*** Press the red selection button to sing a counting song with Kasey!



# Chip's Photo Album™

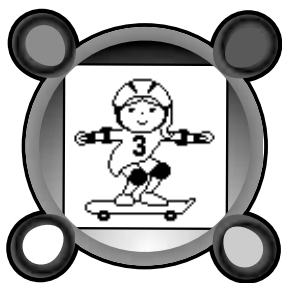 

 - After looking at four pictures in Chip's Photo Album™, you can sing and dance with Kasey and Chip™.

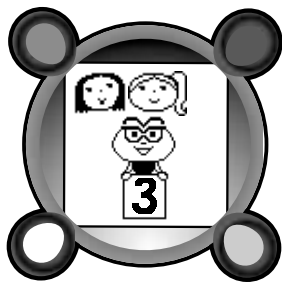


- Or, you can count friends and take their pictures.





# Write a Postcard to Friends

 
**Yellow  
Selection  
Button**

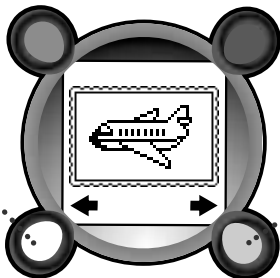


**Green  
Selection  
Button**

- Use the yellow and green selection buttons to scroll through postcard choices.

 
**Blue  
Selection  
Button**

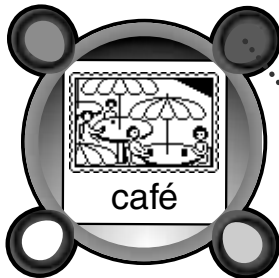

 - When you find one that you like, press the blue selection button.

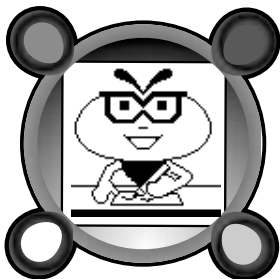

- Listen to Kasey read the postcard.

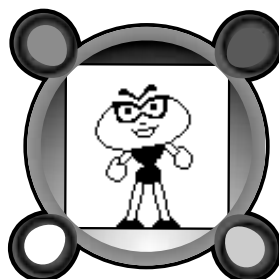 


- Help Chip deliver the postcard by "mail truck" or "airplane" or "train"!

**Hint:** Press the red selection button to repeat the name of the object on the postcard.



# Write a Postcard to Friends
 
## Upper Selection Buttons

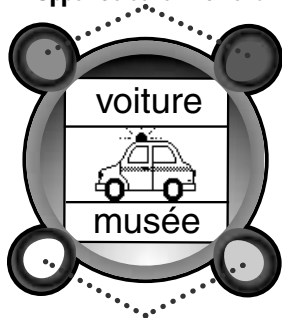

## Lower Selection Buttons

- If Kasey asks you a question, listen carefully to the French word.
- Choose the French word that matches the picture. Press one of the upper selection buttons for the upper word; or one of the lower selection buttons for the lower word.
  - If you choose correctly, "Excellent !"
  - If you choose incorrectly, Kasey shows you the correct answer.
- After writing postcards, you'll enjoy a fun activity with Kasey and Chip™.

 


**Bonjour, amis !**

# Vocabulary Guide

Alphabet Letter	Francais	English
<b>a</b>	amis avion arbre argent au revoir allons-y	friends airplane tree money goodbye let's go
<b>b</b>	bateau béret balle ballon bonjour bon voyage	boat beret ball balloon hello good trip
<b>c</b>	chapeau chemise cinq clé chien canard café	hat shirt five key dog duck cafe
<b>d</b>	deux dauphin dix doigts	two dolphin ten fingers
<b>e</b>	étoile éléphant excellent	star elephant excellent
<b>f</b>	fraises fromage fleur fantastique	strawberries cheese flower fantastic
<b>g</b>	girafe	giraffe
<b>h</b>	hibou huit	owl eight
<b>i</b>	image	picture
<b>j</b>	jaguar	jaguar

Alphabet Letter	Francais	English
<b>k</b>	kangourou ketchup	kangaroo ketchup
<b>l</b>	lion lapin	lion rabbit
<b>m</b>	manteau musée musique merci magnifique	jacket museum music thank you magnificent
<b>n</b>	neuf nez non	nine nose no
<b>o</b>	orange ours oui oreilles	orange bear yes ears
<b>p</b>	pingouin papillon pain palais pomme	penguin butterfly bread palace apple
<b>q</b>	quatre	four
<b>r</b>	renard raisins	fox grapes
<b>s</b>	sept statue souris six s'il vous plaît	seven statue mouse six please
<b>t</b>	train tortue trois tour Eiffel	train turtle three Eiffel Tower
<b>u</b>	un	one
<b>v</b>	vache vélo voiture	cow bicycle car
<b>w</b>	wagon	train car
<b>x</b>	xylophone	xylophone
<b>y</b>	yac	yak
<b>z</b>	zèbre	zebra

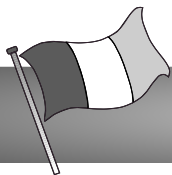

## Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.

## One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Kasey the Kinderbot™ French is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. **This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.**

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

# Consumer Information

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM-6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®  
Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

 
For other countries, outside the United States:

**Canada:** call 1-800-567-7724, or write to: Mattel Canada Inc.,  
6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone **01628 500302**.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

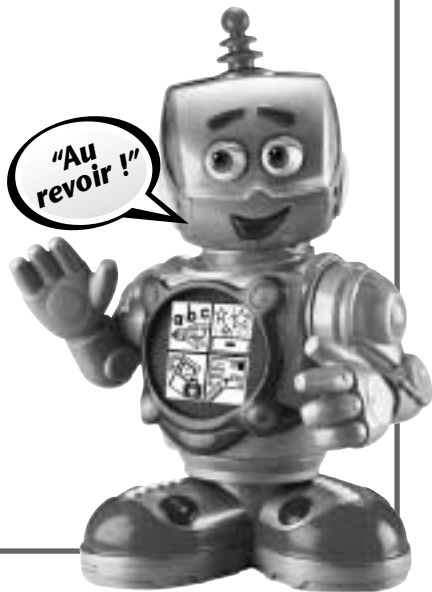

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.