



Fisher-Price®

PowerTouch™

LEARNING SYSTEM

Getting Started

1. Be sure the **reset switch** (located on the back of the unit) is in the **On** position.
2. Insert the **cartridge** into the **cartridge port**.
3. With the book closed, fit one end of the book binding into the top of the unit. Lower the other end of the binding into the bottom of the unit.
4. Press the **On/Off button** and slide the **volume switch** to a comfortable listening level.
5. Now **use your finger** to touch words and pictures to hear stories, play games and much more!

Hint: The unit is equipped with a headphone jack for private listening. Be sure your headphones (not included) are equipped with a 3.5 mm pin.

Reading Activities



Story—Listen to the story as it's read aloud.



Words—Touch individual words and pictures to hear them identified.



Phonics—Touch a word to hear it sounded out.



Spelling—Touch a word to learn how it is spelled.

Interactive Games



Find—Listen to the question and search for the object on the page.



Count—Count the objects on the page.



Surprise—Play a variety of games.




Music—Hear songs or play notes and music to create masterpieces!

For Best Results



1. Use **one finger** to touch words and pictures on the pages.
2. Do not rest hands or arms on the pages. Each page is "touch sensitive" and the unit "reads" everything that touches the page.
3. Make sure the unit is used on a **flat** surface.
4. The unit may not recognize the book page if the book is not properly positioned in the unit. Check to be sure it's not upside down or crooked in the unit.
5. The unit may also not recognize the book page if you have the wrong cartridge in the cartridge port. Match the title on the book cover with the title on the cartridge.
6. If the unit does not function properly, slide the **reset switch** on the back of the unit **Off** and then **On** again.
7. When sounds become faint or there are no sounds at all (and the volume is all the way up) or the unit does not function properly (and you have already reset the unit), it's time to replace the batteries in the unit! Replace **all four** batteries with fresh, "AA" (LR6) **alkaline** batteries.

Cartridge Storage

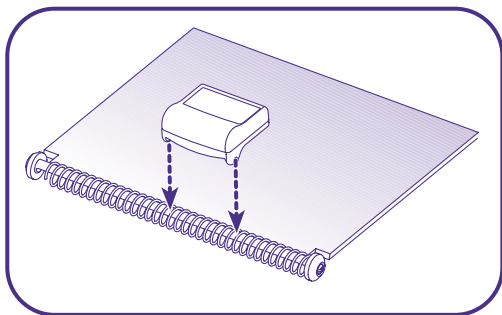

The cartridge has been designed to clip to the binding for storage! Simply press the edge of the cartridge anywhere on the binding.

Consumer Information

Questions?

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price, Inc.
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

www.fisher-price.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. Trademarks of Mattel, Inc.

©2003 Sesame Workshop. "Sesame Street", "Sesame Workshop" and their logos are trademarks of Sesame Workshop.

All Rights Reserved. ©2003 Sesame Workshop/CTTO.