

Welcome to the

PowerTouch



LEARNING SYSTEM

IMPORTANT! If at any time the unit does not seem to be functioning properly, slide the Reset switch on the back of the unit Off and then On again.

For Best Results

- Use **only one finger** to touch words or pictures.
- Keep the unit **completely open** so that it lies flat.
- Make sure your Power Touch™ book is properly loaded into the unit and the **pages lie flat**.
- Avoid curling, bending, or ripping the Power Touch™ books. Damaged books may not work properly in the unit.
- Avoid use in direct sunlight.

Hints for Added Fun and Educational Play

- **In the Count Game** : Try touching words as well as pictures! For example, when asked to count pigs or crayons, you can touch the word **pig** or **crayon** or the picture of the pig or crayon.
- **In the Music Game** : In Ernie's Neighborhood, you are asked to touch something on the bus to hear a song on the "Police Officer" page. You can also touch other pictures on the page to create silly songs!

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. Trademarks of Mattel, Inc.

©2003 Sesame Workshop. "Sesame Street", "Sesame Workshop" and their logos are trademarks of Sesame Workshop.

All Rights Reserved. ©2003 Sesame Workshop/CTTO.

Fisher-Price

Printed in China

77989pr-0922