

## Video Mission



### Instructions

Product Numbers: 78178, 78179, 78180, 78181, 78182, 78183, 78184, 78185, 78186 and 78187



Please keep this instruction sheet, as it contains important information.

Adult assembly is required.

Requires three, **alkaline** button cell batteries (LR44 or equivalent) for operation (included).

 
Tool required for battery replacement: Phillips screwdriver (not included).

**Fisher-Price**

www.fisher-price.com

## Getting Ready for Rescue

**IMPORTANT!** Attachment of the connector to the figure is a permanent assembly.

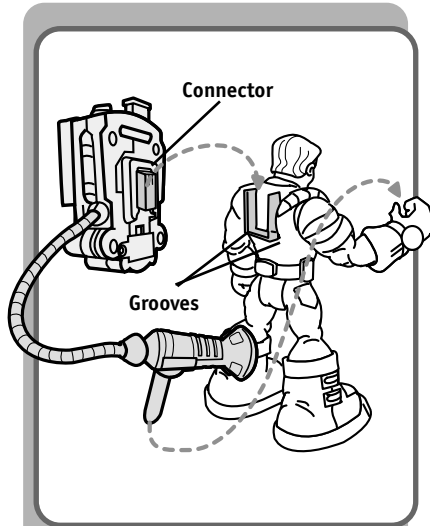


- Position the backpack and the figure upright.
- Slide the backpack connector into the grooves on the back of the figure **until you hear a "click"**.
- Slide the backpack up to remove it from the figure. **The connector should remain attached to the figure.**


## On a Mission

 - Fit the backpack onto the connector on the figure's back.
- Press the video screen button to see moving video on the backpack along with sound effects.
- Press the audio button to hear your figure talk. Press again to hear more phrases.


**Hint:** The sound effects and phrases will not play at the same time.

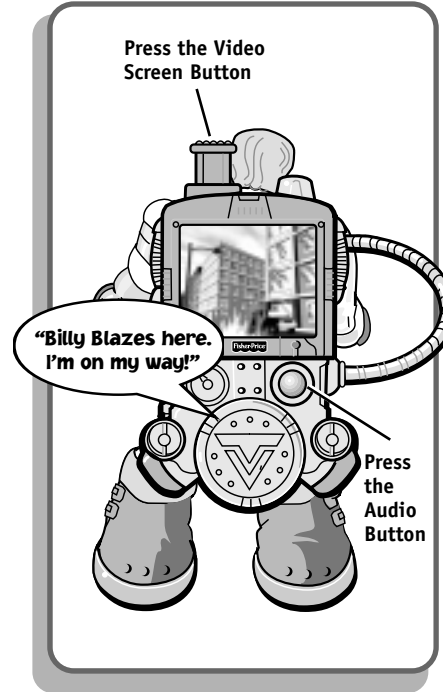

## Battery Replacement

 

 1.5V x 3  
LR44 or Equivalent  
**SHOWN ACTUAL SIZE**

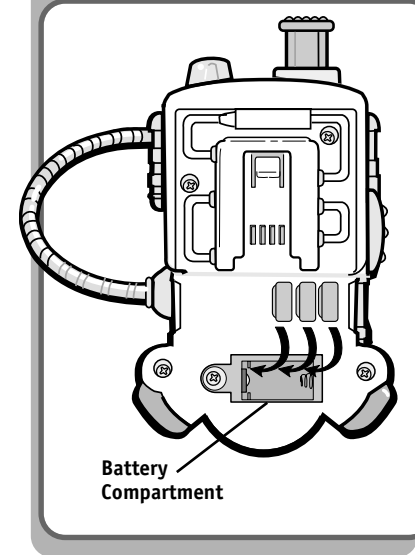

- Remove the backpack from the figure.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three, new **alkaline** button cell batteries (LR44 or equivalent), as indicated inside the battery compartment. Make sure the flat side of each battery (printed with the battery designation) faces the spring.

**Hint:** We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries!

## Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the Battery Replacement Instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Collect the entire Voice Tech™ team!

(Each sold separately and subject to availability.)



**Billy Blazes™**  
78178



**Jake Justice™**  
78179



**Wendy Waters™**  
78180



**Jack Hammer™**  
78181



**Rocky Canyon™**  
78182



**Roger Houston™**  
78183



**Matt Medic™**  
78184



**Warren Waters™**  
78185



**Police Car**  
78361 (Figures sold separately.)



**Aquatic Rescue Command Center™**  
78157 (Figures sold separately.)



**Gil Gripper™**  
78186



**Ariel Flyer™**  
78187



**Rescue Jet**  
77473 (Figure sold separately.)

## Consumer Information

If you have any questions, please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:  
**Canada:** Call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone **01628 500303**.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.