



NIGHT PATROL™ Captain Cuffs™

Police Officer



Model Number: 78193

Please keep this instruction sheet for future reference,
as it contains important information.

Requires two "AAA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:

 
Phillips screwdriver (not included).

Fisher-Price®

www.rescueheroes.com

BATTERY REPLACEMENT

For best performance, we recommend replacing the batteries that came with this toy with two, new alkaline “AAA” (LR03) batteries.

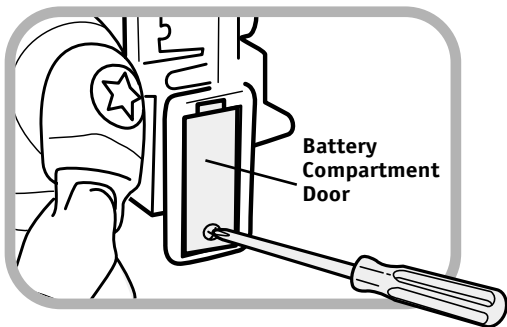


- Locate the battery compartment door on the backpack.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two “AAA” (LR03) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Slide the backpack back onto the figure.
- When lights from this toy become faint or stop, it's time for an adult to change the batteries!

 BATTERY TIPS




SHOWN ACTUAL SIZE

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

READY FOR ACTION!

CAUTION

 
- Do not launch the cuffs at close range.
- Only use the projectile (cuffs) supplied with this toy.
- Do not fire at people or animals.

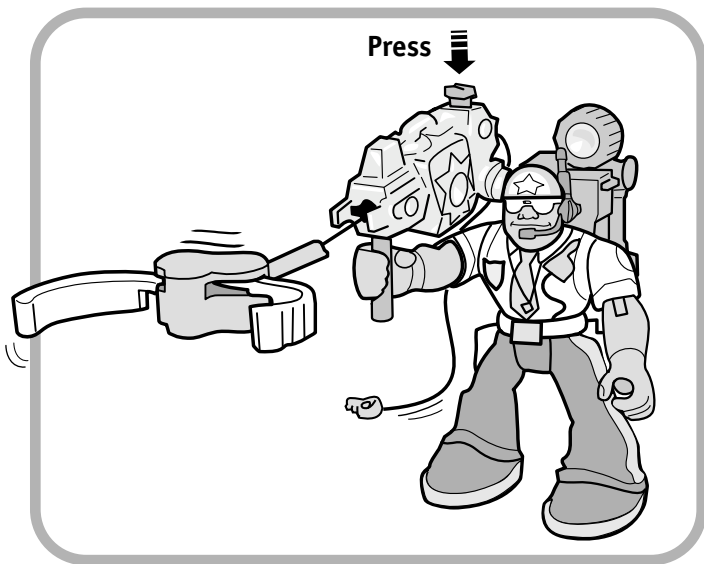

- To load the cuffs, grasp the key on the end of the cord and pull the cord back through the launcher until the cuffs lock in place.
- Press the release lever to launch the giant handcuff.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.
©2001 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

 READY FOR ACTION!

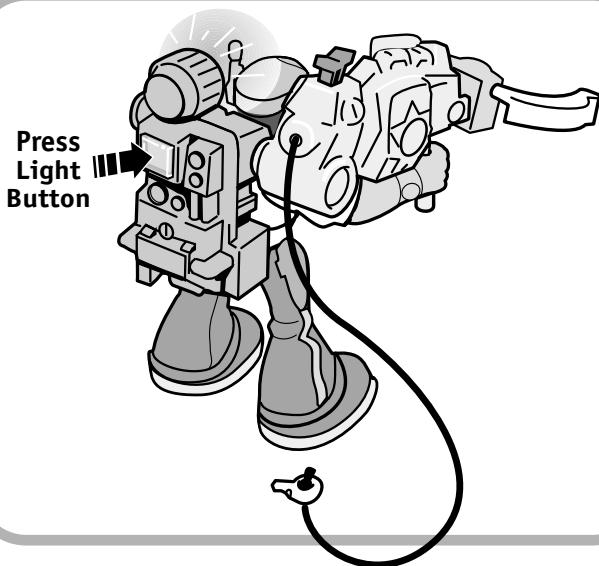

- Press the button on the back of the pack to activate the searchlight.

CARE

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

COLLECT THE OTHER MEMBERS OF THE NIGHT PATROL™!

Each sold separately and subject to availability.



Willy Stop™
Police Officer
78319



Sam Sparks™
Firefighter
78194



Sergeant Siren™
Police Officer
78195



Aidan Assist™
Emergency Medical
Technician 78306

CONSUMER INFORMATION

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**,
8 AM - 6 PM EST Monday through Friday. Hearing-impaired
consumers using TTY/TDD equipment, please call 1-800-382-7470.
Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue,
East Aurora, New York 14052.

For other countries, outside the United States:

Canada: call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2. **Great Britain:** telephone 01628 500303.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.