


Town & Country™ Stroller

Model Numbers: 79235, 79278, 79292

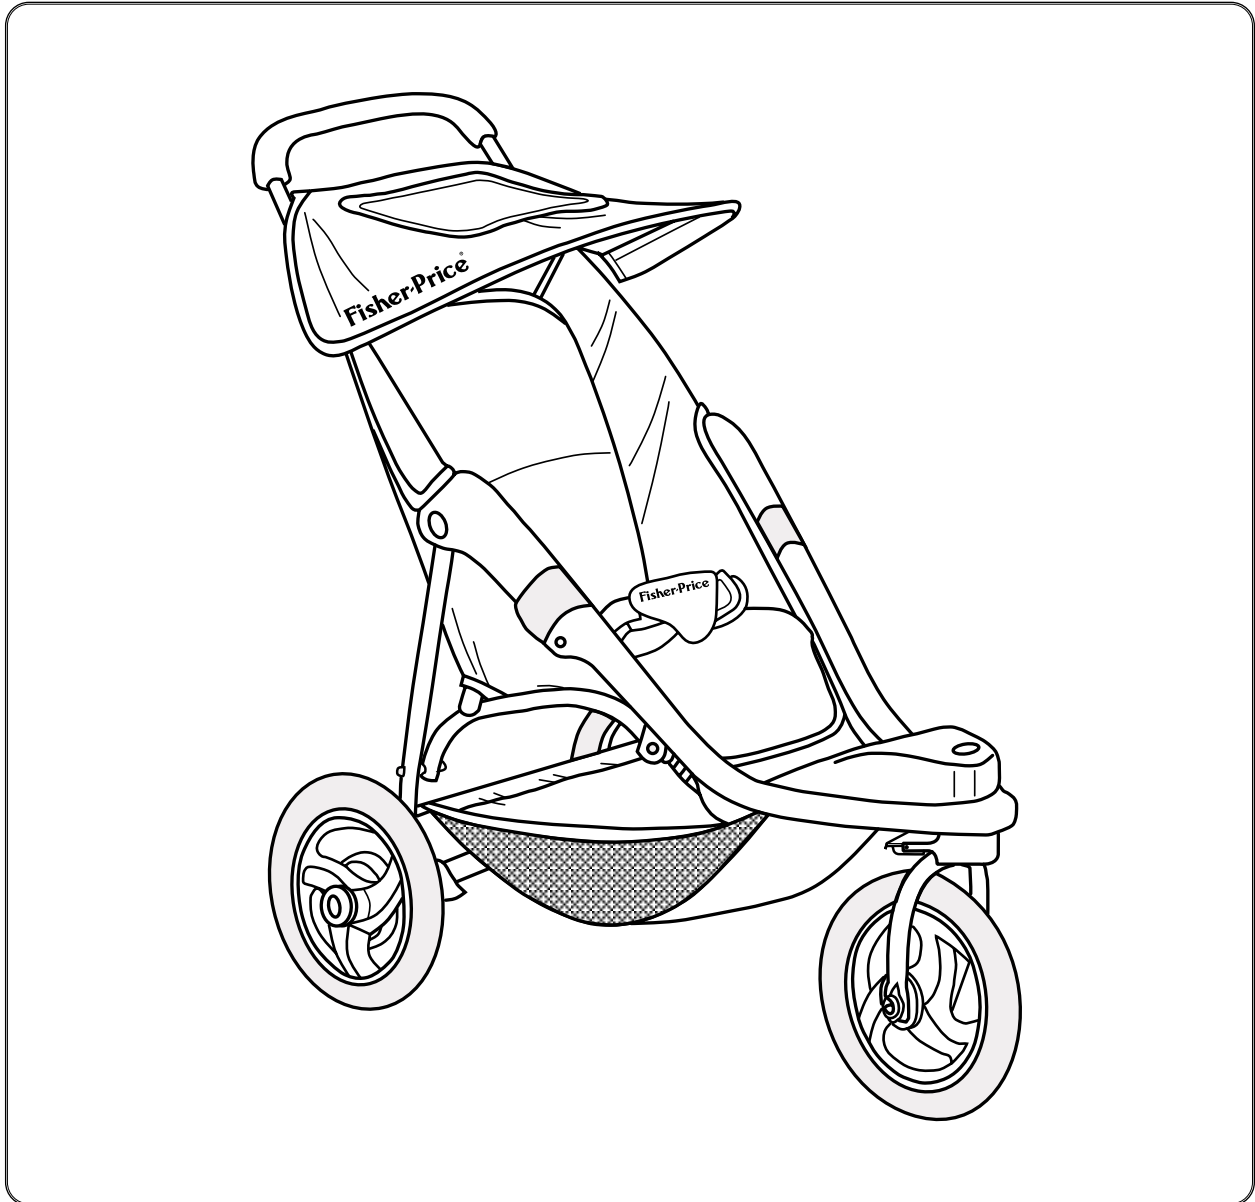

- Please save these instructions for future reference.
 - Adult assembly is required.
 - Tool needed for assembly: Adjustable Wrench.
- Tool needed for maintenance: Large Adjustable Wrench, Long Shaft Phillips Screwdriver.
 - Maximum weight of child: 40 lbs.
 - Maximum height of child: 38 inches.
- Maximum storage weight for carry compartment: 8 lbs.

Fisher-Price®

Message to Parents

Thank you for purchasing the Fisher-Price Town & Country Stroller. The design of this stroller makes it easier to take your child everywhere you go...over sand, over grass and even gravel. We believe you will find the features of this Fisher-Price product to be a great help in the day-to-day care of your child.


Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than returning this product to the store. Usually, we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday, 9 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

WARNING

**The safety of your child while in the Town & Country Stroller depends on you!
Please read and understand the following warnings and instructions before use.**


- **Never** leave your child unattended.
- To prevent serious injury or death from falls or sliding out, **always use** the restraint belts.
- **Do not** carry additional children, goods or accessories in or on the Town & Country Stroller, except as recommended in the instructions.
- The Town & Country Stroller may become unstable if items are hanging from or placed on the handle. **Do not** hang shopping bags, purses or accessories on the handle.
- The Town & Country Stroller may become unstable if the maximum storage weight of the carry compartment is exceeded. **Do not** exceed the maximum storage weight of 8 lbs. in the carry compartment.

Parts


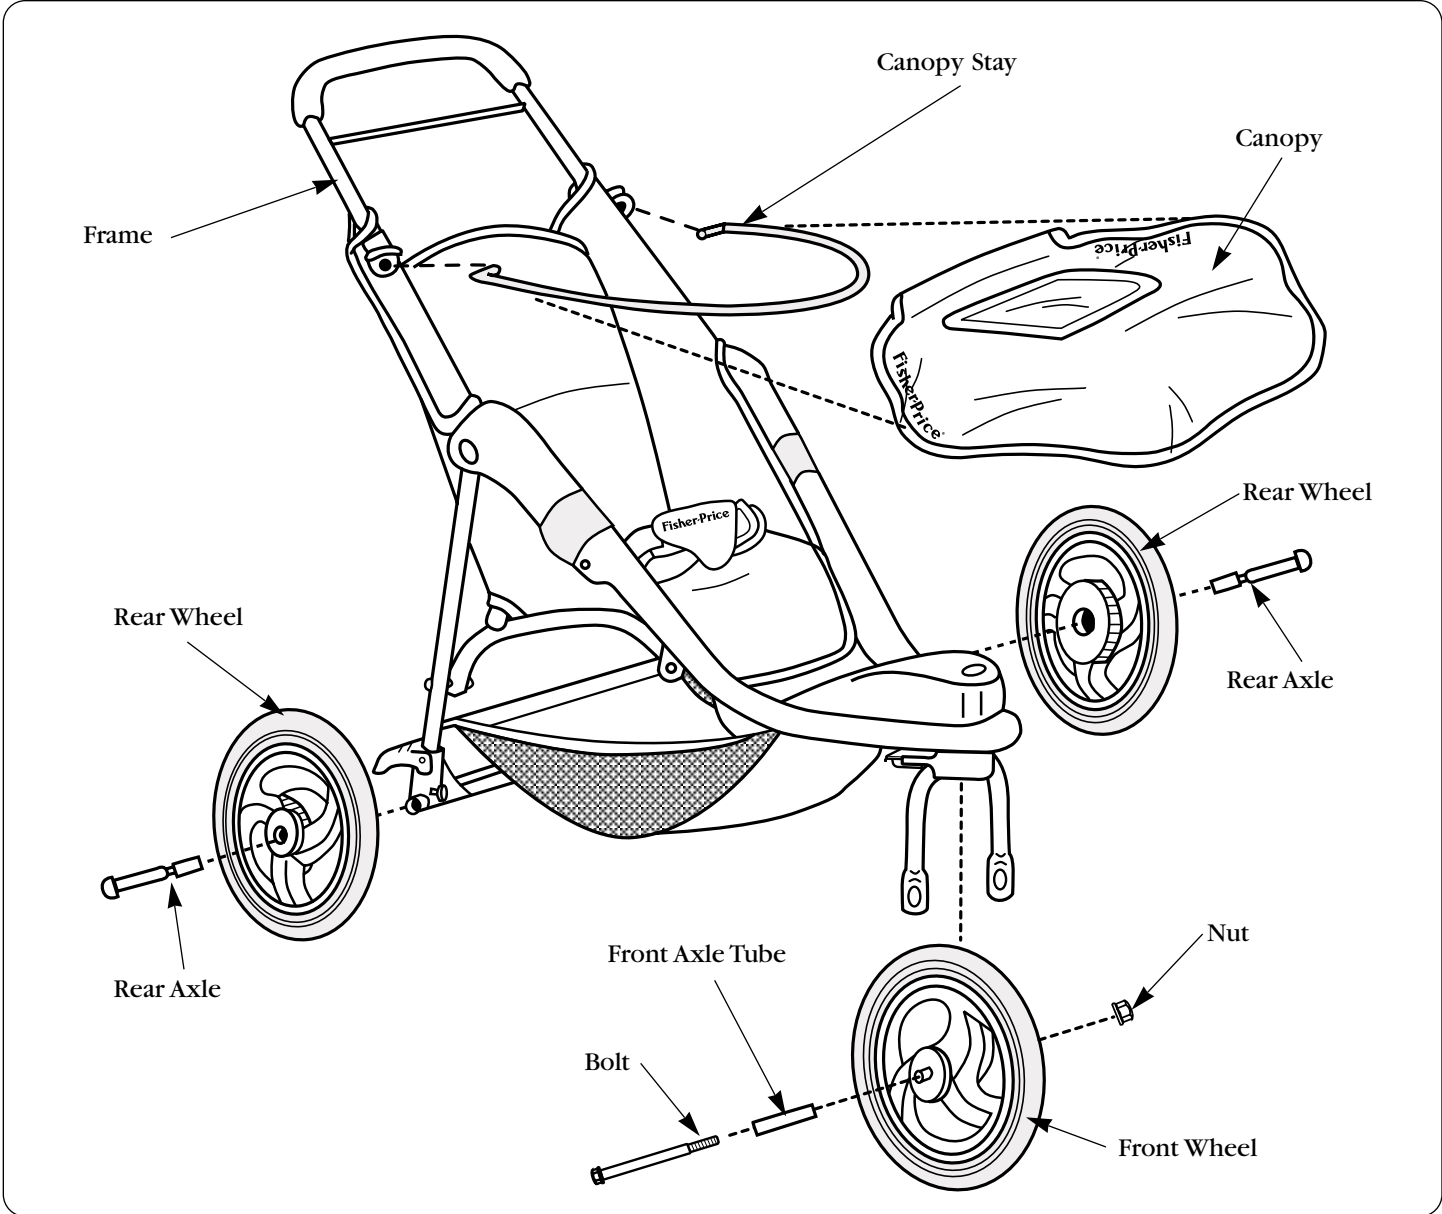


CAUTION

Please keep small parts and plastic bags out of children's reach.

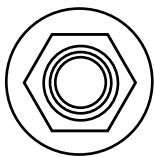

Nut

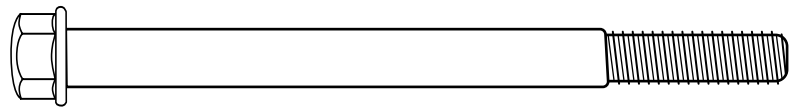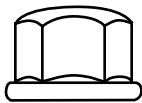


Bolt - $\frac{3}{8}$ " x $3 \frac{13}{16}$ "


BOTH SHOWN ACTUAL SIZE

Assembly


To Unfold

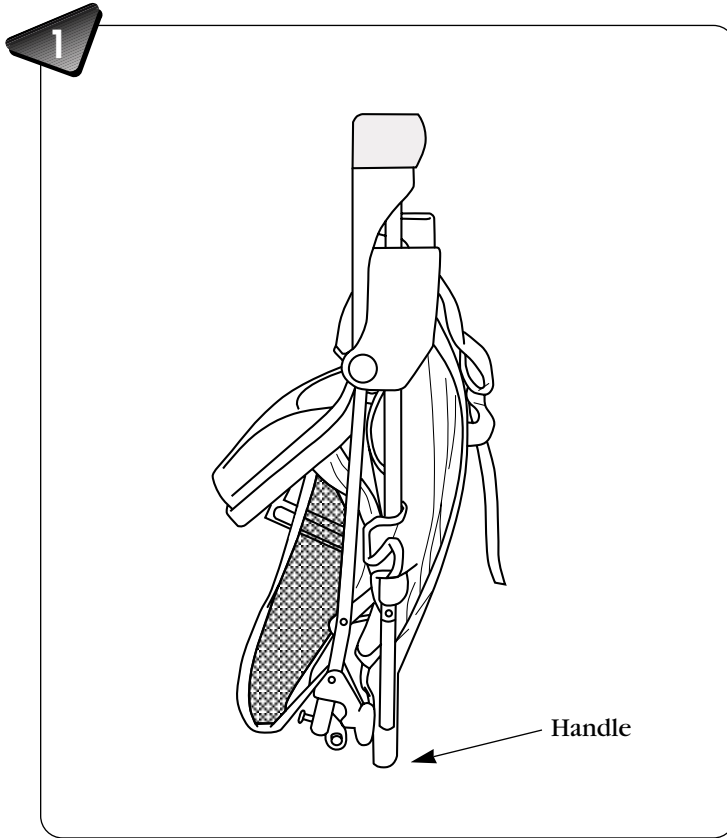


- Position the stroller with the handle on the floor.

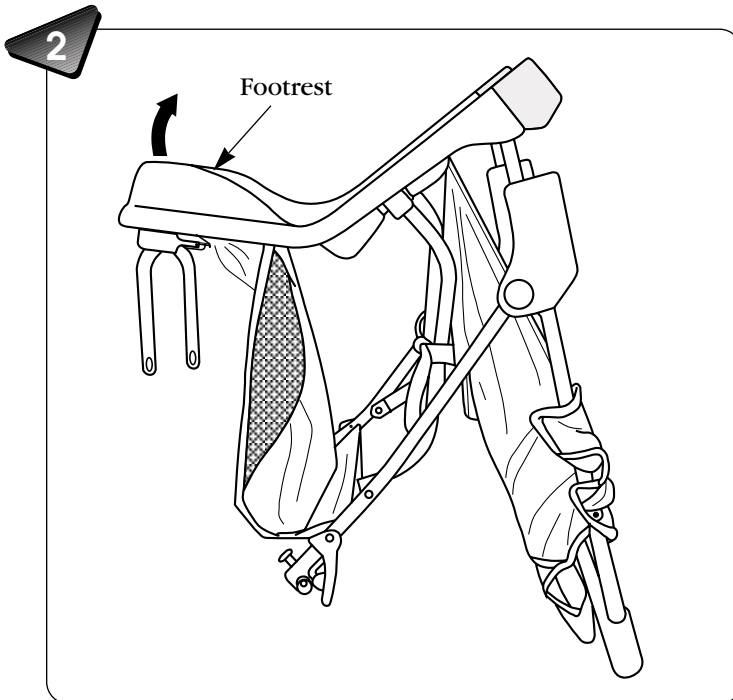

- Lift the footrest.

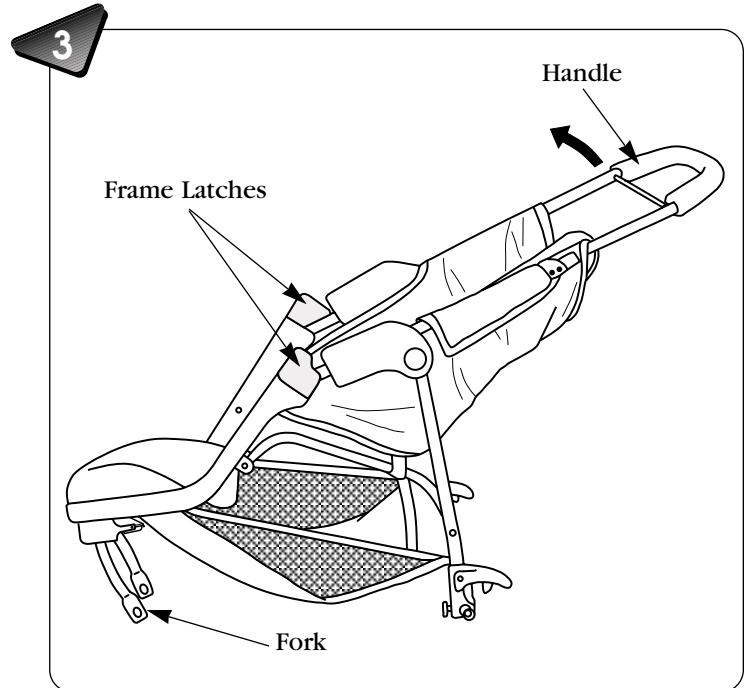


- Rest the fork on the floor.
- Lift the handle up until the frame latches “snap” into position.

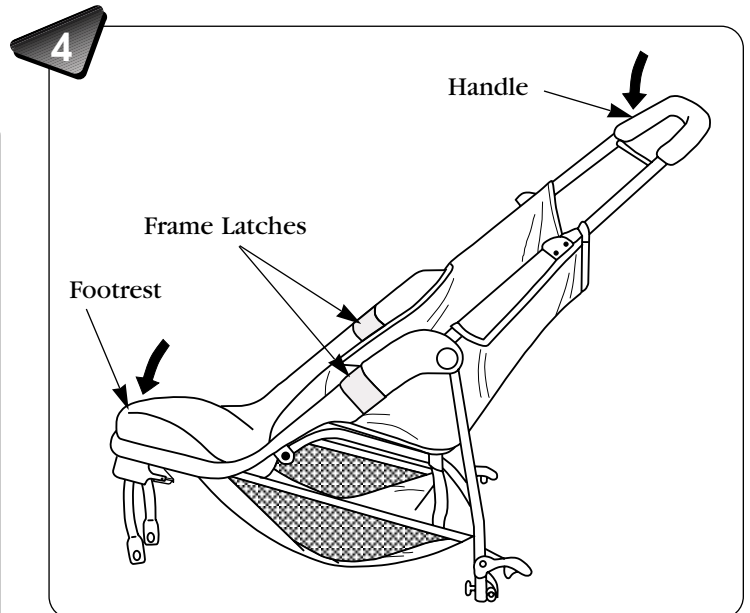


- Test to be sure both frame latches are secure by lightly pushing down on the handle while holding the footrest down. The frame latches should remain locked in position.


Front Wheel Assembly

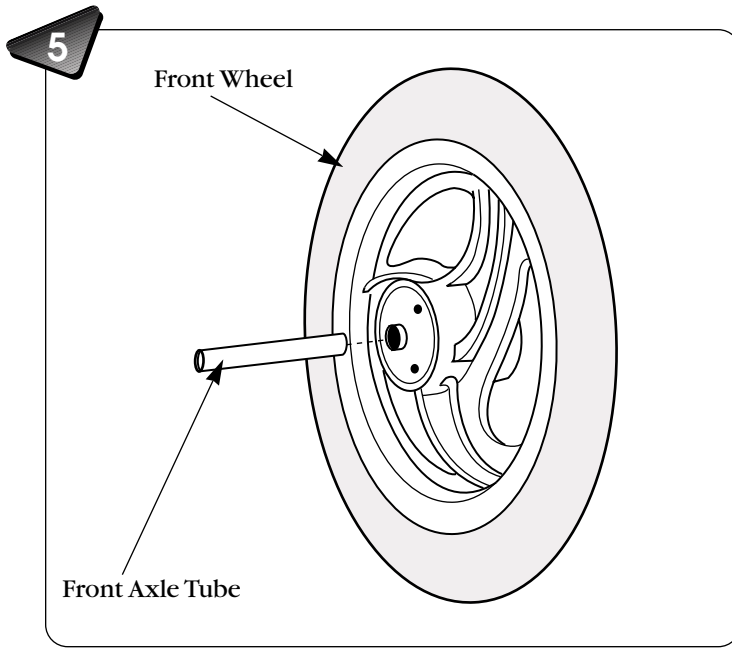

- Insert the front axle tube completely into the hole in the front wheel.

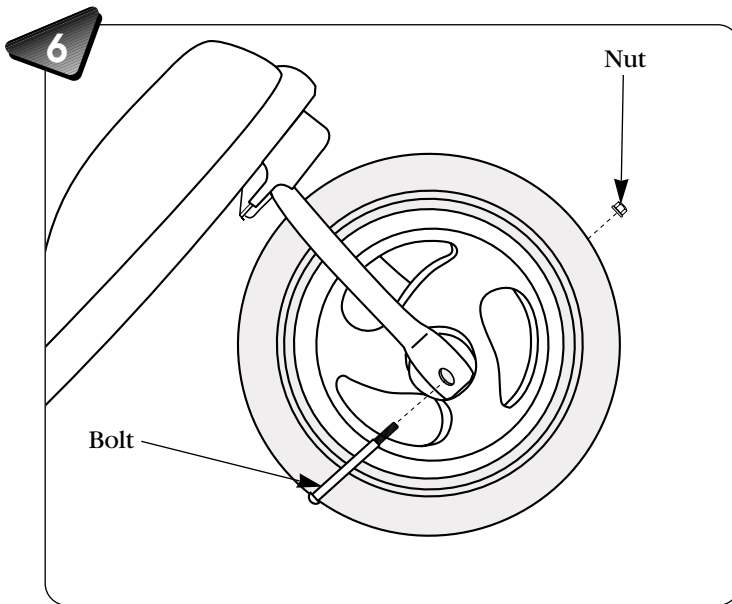


- Position the stroller with the handle on the floor.
- Place the front wheel between the fork.
- Insert the $3^{13}/16$ " bolt through the fork hole and into the front axle tube.
- Attach the nut onto the end of the bolt.

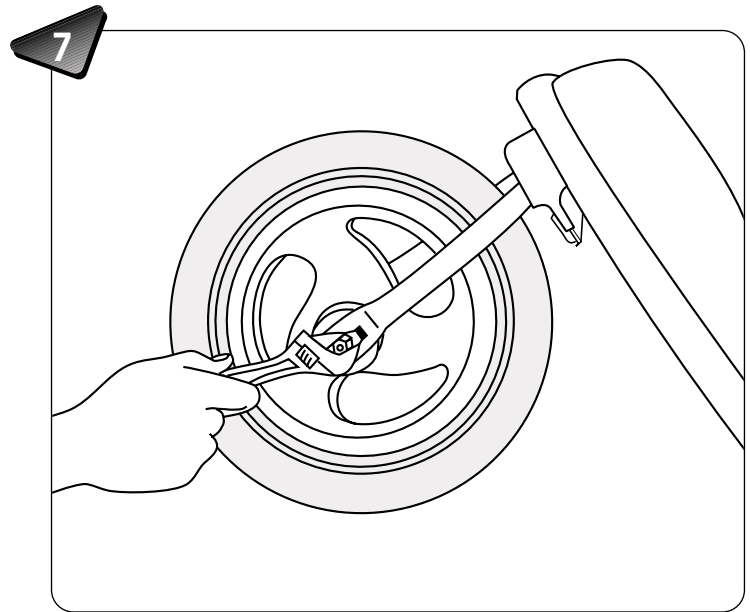


- Tighten the nut with an adjustable wrench.

Rear Wheel Assembly

Please Note: To reduce friction and prevent excessive heat build-up, lubricate the rear axles with a light oil before assembly and regularly during use.

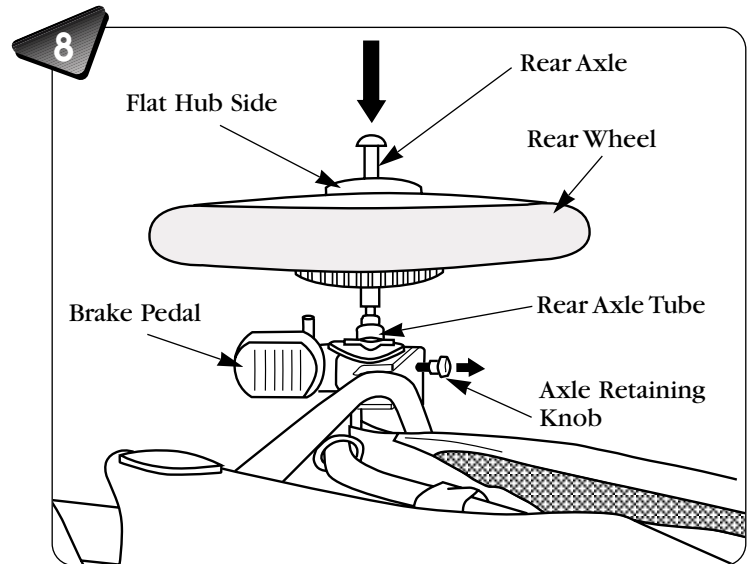


- Turn the stroller on its side.
- Make sure the brake pedals are in the unlocked (up) position.
- Position a rear wheel near the rear axle tube with the flat hub side outward.
- Insert a rear axle into the rear wheel.
- Insert the end of the rear axle (with rear wheel) into the rear axle tube.
- Pull the axle retaining knob out while pushing the rear axle into the rear axle tube.
- Release the axle retaining knob and push the rear axle in until you hear a "click".

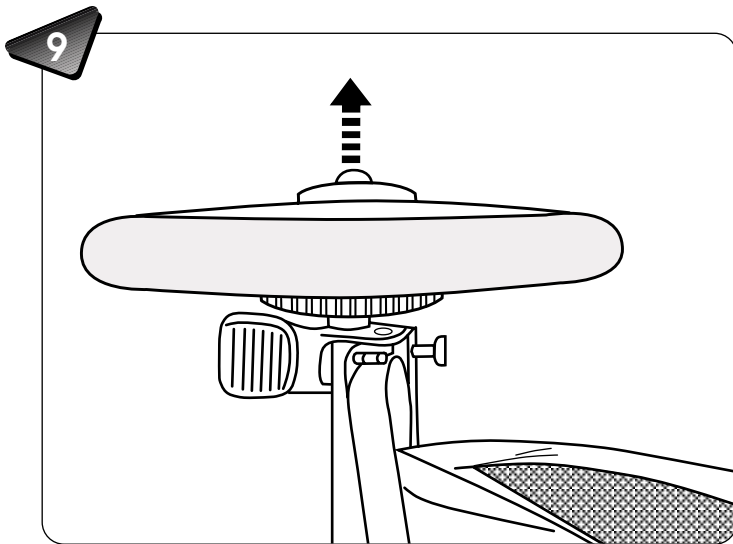


- Test to be sure the rear wheel is secure by pulling on it.
- Repeat this procedure to attach the other rear axle and rear wheel.


Canopy Assembly

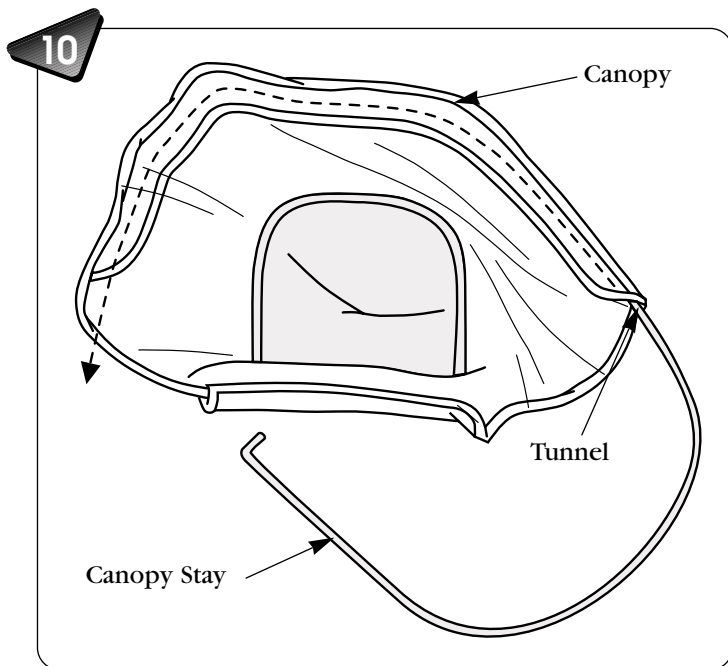

- Insert and slide the canopy stay through the canopy tunnel.

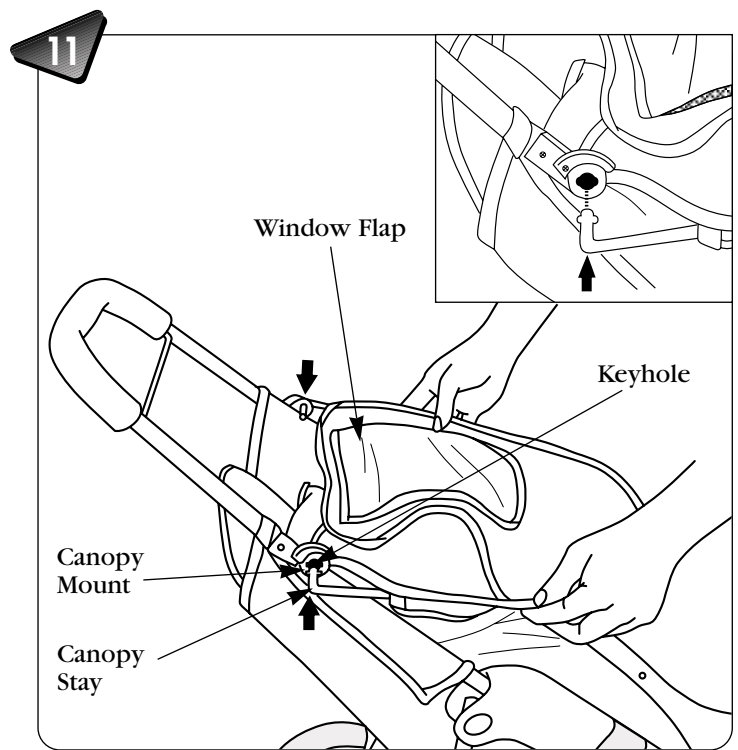

- Turn the stroller upright.
- Position the canopy over the stroller, with the window flap upward.
- Align and insert the tabs on one end of the canopy stay into the keyhole in the canopy mount.
- Repeat this procedure to attach the other end of the canopy stay to the stroller.

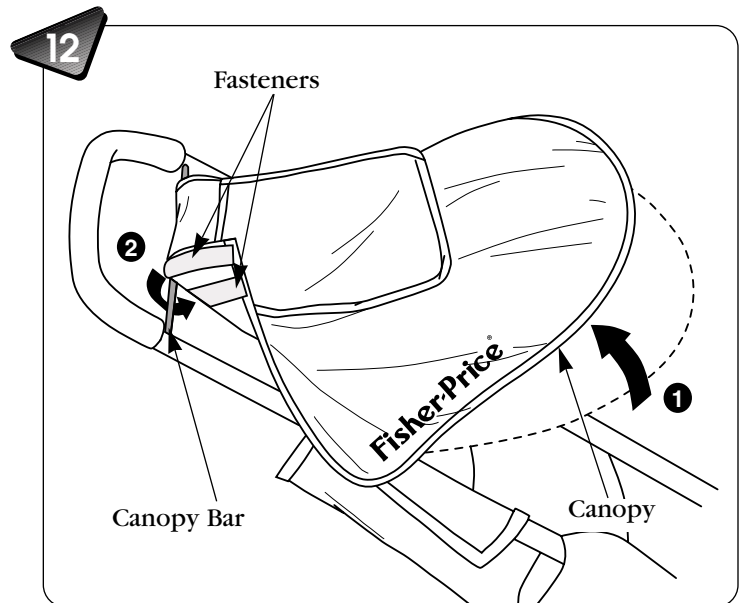


- Lift the canopy ①.
- Wrap the back of the canopy around the canopy bar and press the fasteners together ②.

One-time assembly is now complete.

Operation and Use


To Unfold

1

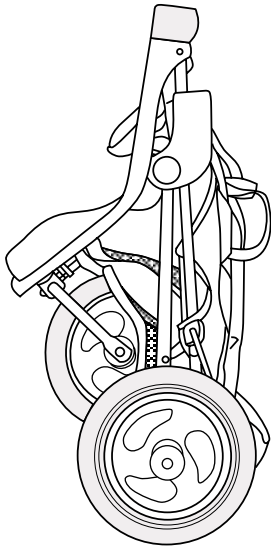


- Position the stroller with the rear wheels on the floor.

4

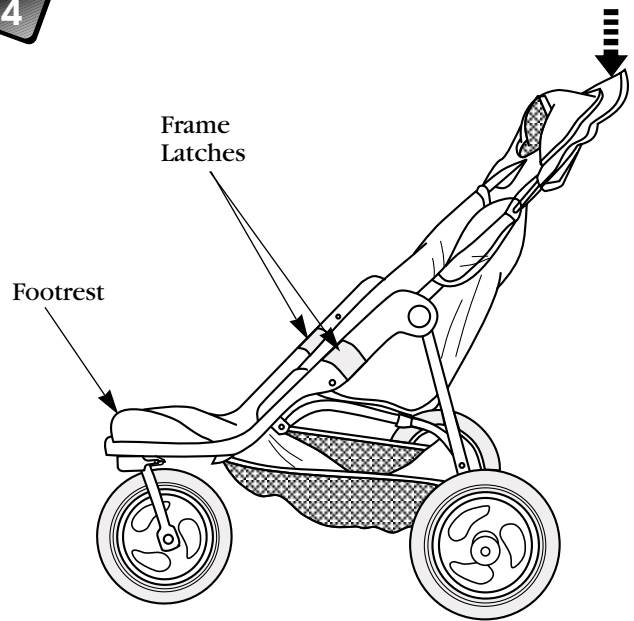


- Test to be sure both frame latches are secure by lightly pushing down on the handle while holding the footrest down. The frame latches should remain locked in position.

2

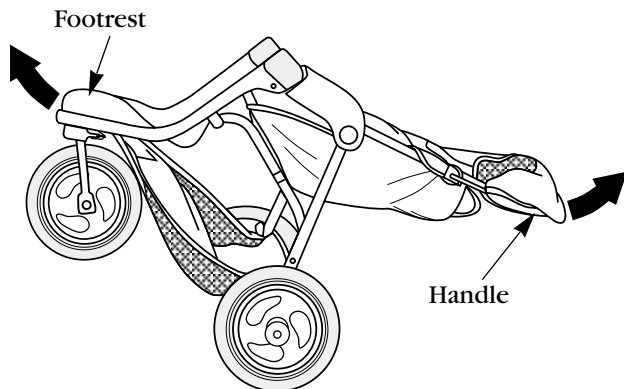


- Lift the footrest and the handle.

3

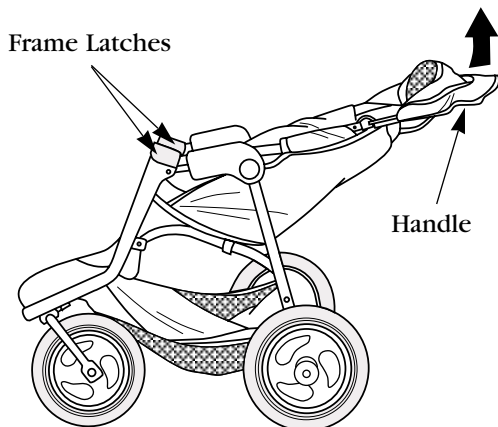


- Rest the front wheel on the floor.
- Lift the handle up until the frame latches “snap” into position.

5

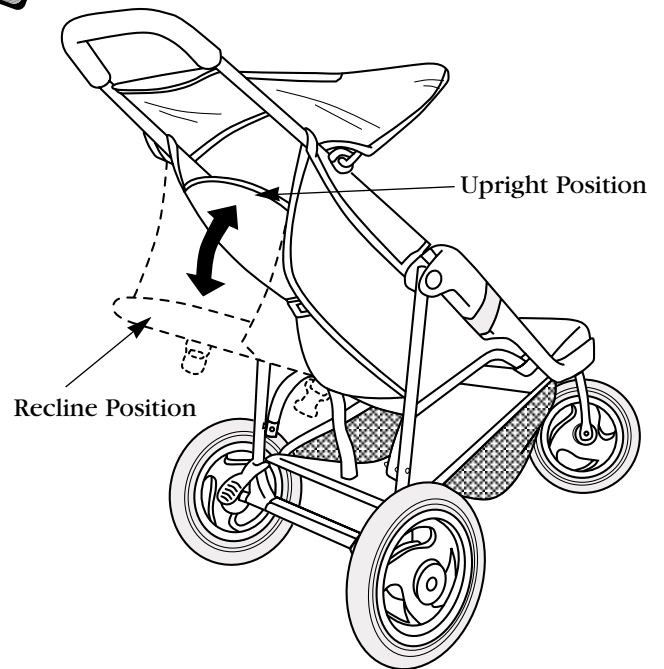

- For baby's comfort, the seat back can be adjusted to an upright or a recline position.

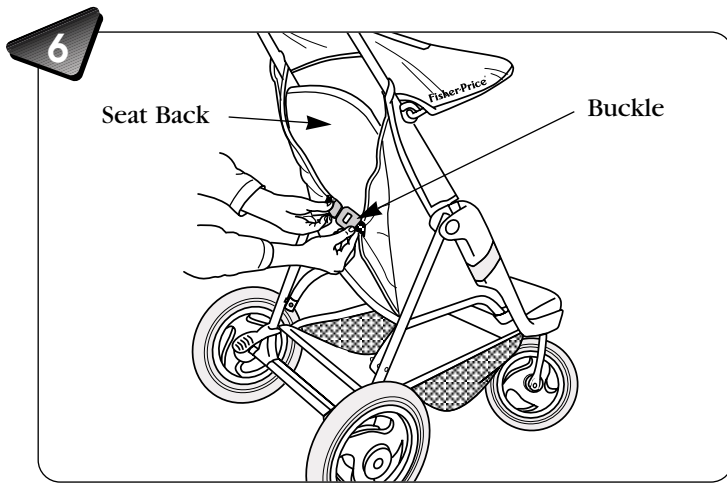

To adjust the seat back:


- Turn the stroller so that the back is facing you.
- For the recline position, unsnap the buckle and guide the seat back down.
- For the upright position, lift the seat back and then snap the buckles together. Make sure you hear a “click”.

Please Note: Push down (from the front of the stroller) on the seat back to be sure it is secure.


Restraint Belts

⚠ WARNING

To prevent serious injury or death from falls or sliding out, **always use the restraint belts.**

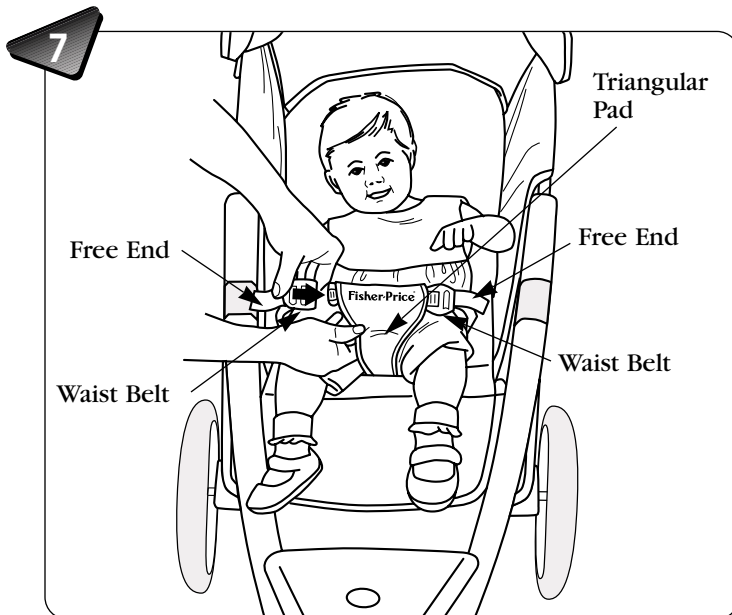


- Place your child in the stroller.
- Pull the triangular pad up between your child’s legs.
- Fasten both waist belts to the buckles on each side of the triangular pad. **Make sure you hear a “click” on both sides.**
- Make sure the waist belts are properly adjusted to fit your child.

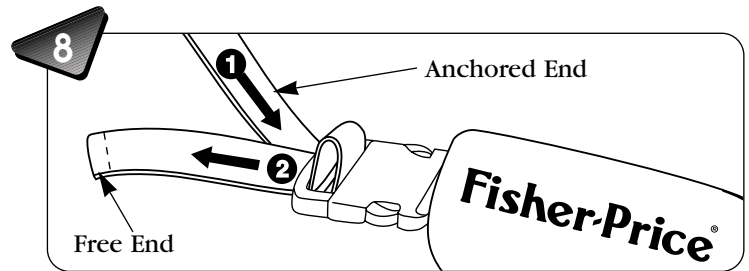

To tighten the waist belts:

- Feed the anchored end of the waist belt up through the buckle to form a loop **1**.
- Pull the free end of the waist belt **2**.
- Repeat this procedure to tighten the other waist belt.

Please Note: After adjusting the waist belts to fit your child, make sure you pull on them to be sure they are securely fastened.

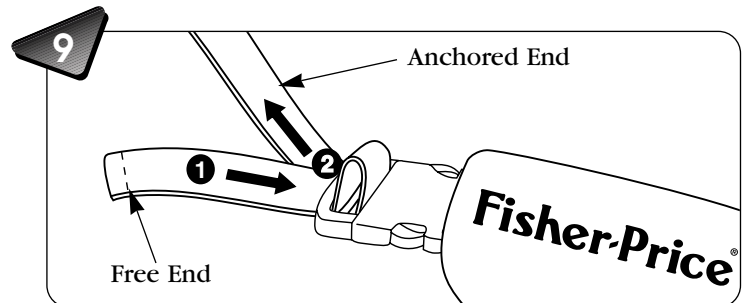


To loosen the waist belts:

- Feed the free end of the waist belt up through the buckle to form a loop **1**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the waist belt to shorten the free end of the waist belt **2**.
- Repeat this procedure to loosen the other waist belt.

Please Note: After adjusting the waist belts to fit your child, make sure you pull on them to be sure they are securely fastened.


Canopy Adjustment

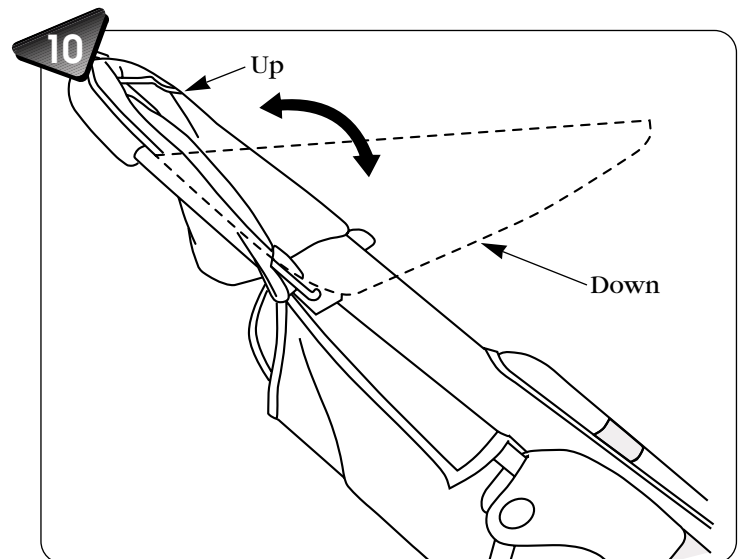

- The canopy can be adjusted up or down.


Front (Swivel) Wheel

Please Note: Lock the front (swivel) wheel to prevent wobbling at higher speeds, or to keep the front (swivel) wheel straight when strolling over sand, grass or gravel.

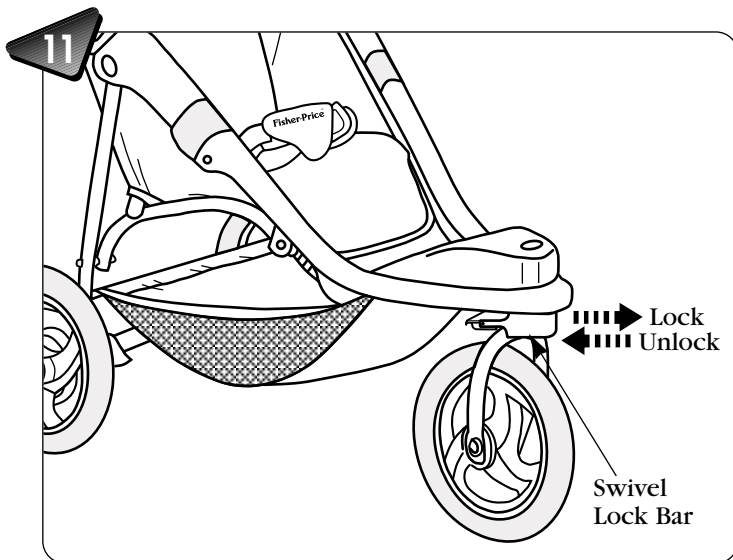


- To lock, pull the swivel lock bar out.
- To unlock, push the swivel lock bar in.

To Fold for Storage

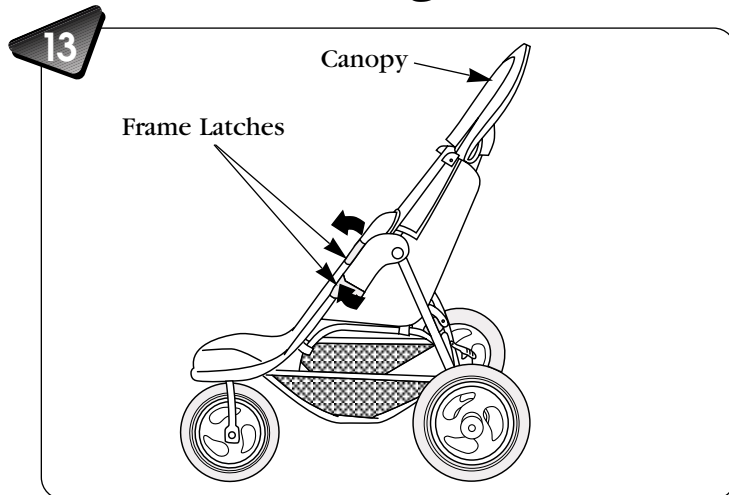


- Face the front of the stroller.
- Make sure the canopy is in the up position.
- Rotate the bottom of the frame latches outward.

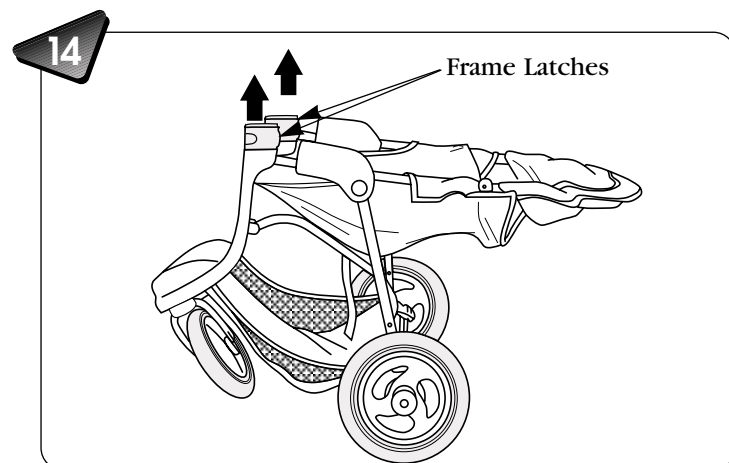

- Pull up on the frame latches so that the frame rotates to the folded position.

Rear Wheel Brakes

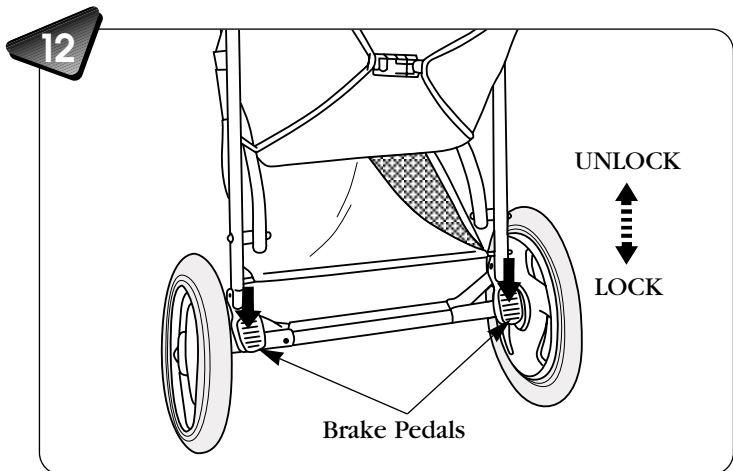


To lock the rear wheel brakes:

- Press **both** brake pedals down until they click into the locked position. Make sure the brake pedals are pressed down completely.
- Always set both brake pedals whenever you park the stroller.

To unlock the rear wheel brakes:


- Lift **both** brake pedals until they click into the unlocked position.

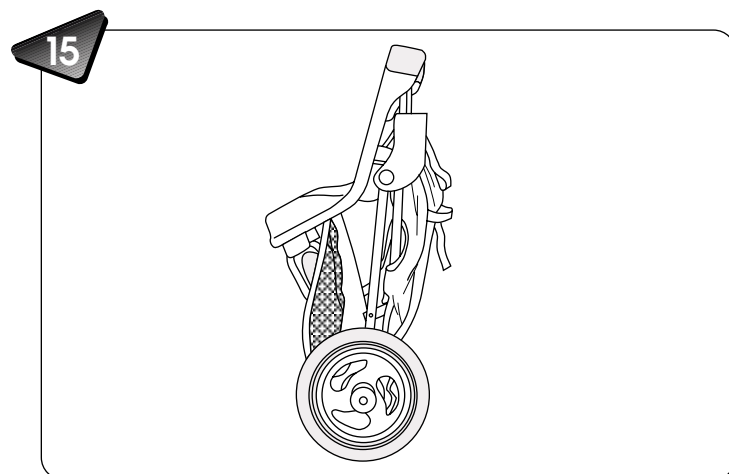


Please Note: When folding the stroller, the handle will automatically push the brake pedals down and lock them so that the stroller can be stored upright.

Maintenance


Over time, the fork may loosen causing the front of the stroller to wobble. To eliminate wobbling, please follow maintenance steps 1 through 10.

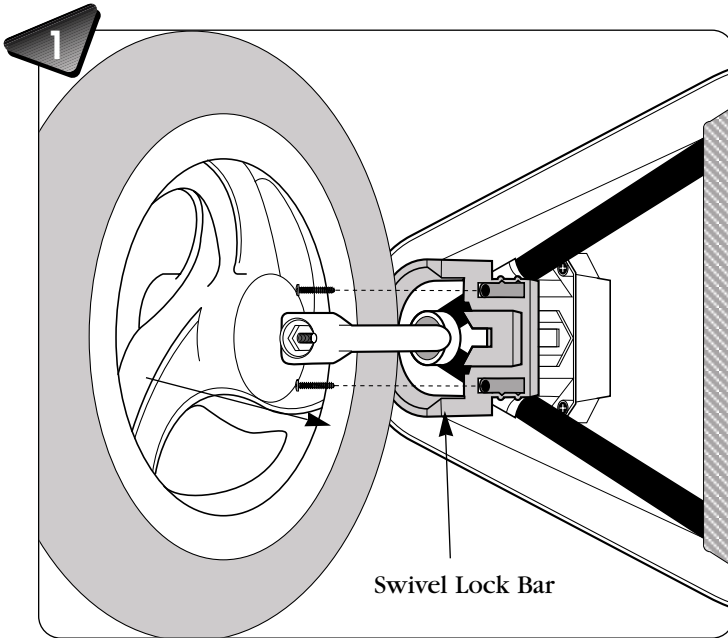


- Position the stroller with the handle on the floor.
- Remove the two screws in the swivel lock bar with a Phillips screwdriver. Put the screws aside for re-assembly step 10.

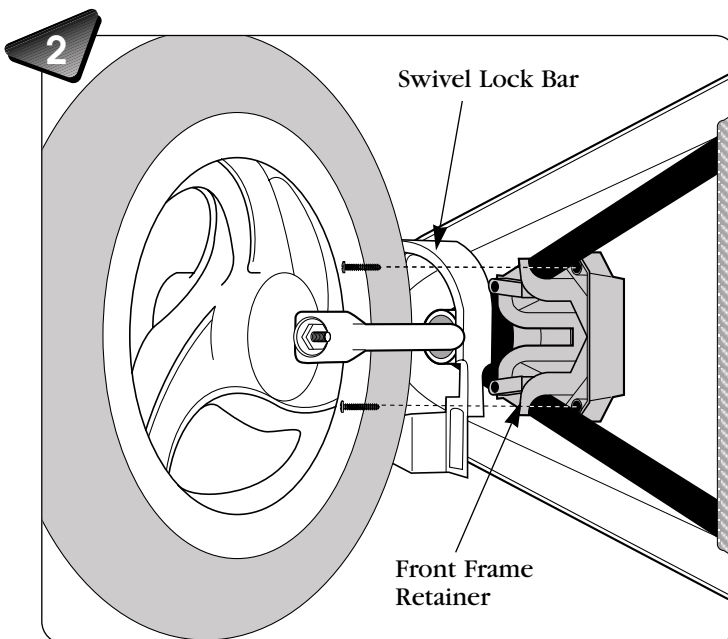

- Turn the swivel lock bar to the side.
- Remove the two screws in the front frame retainer with a long shaft Phillips screwdriver.
- Remove the front frame retainer and put it and the two screws aside for re-assembly steps 8 and 9.

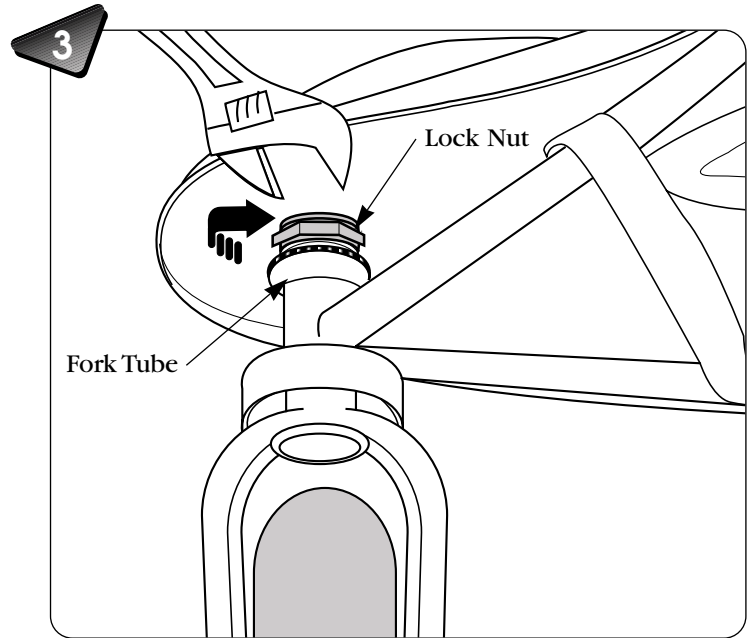


- Loosen the lock nut on the fork tube clockwise with an adjustable wrench. Remove the lock nut and put it aside for re-assembly step 7.

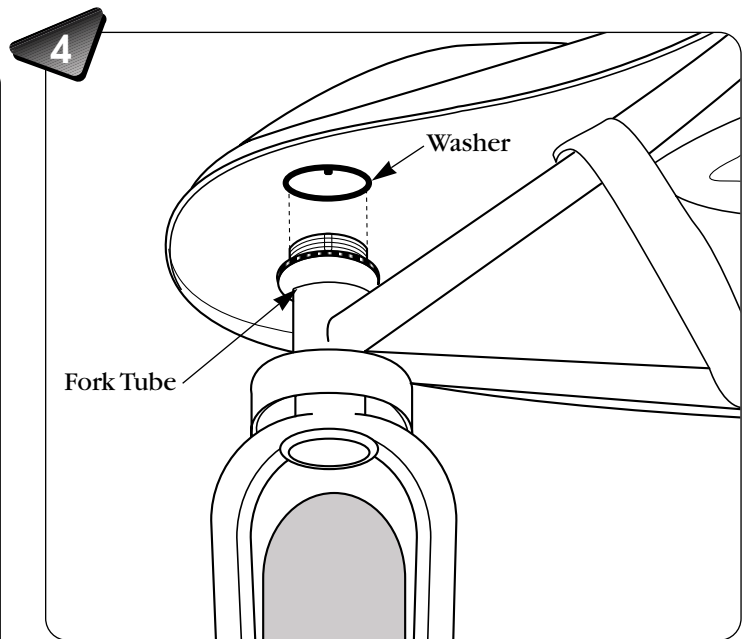


- Remove the washer from the fork tube. Put the washer aside for re-assembly step 6.


Please Note: Your stroller may be equipped with more than one washer. Remove all washers.

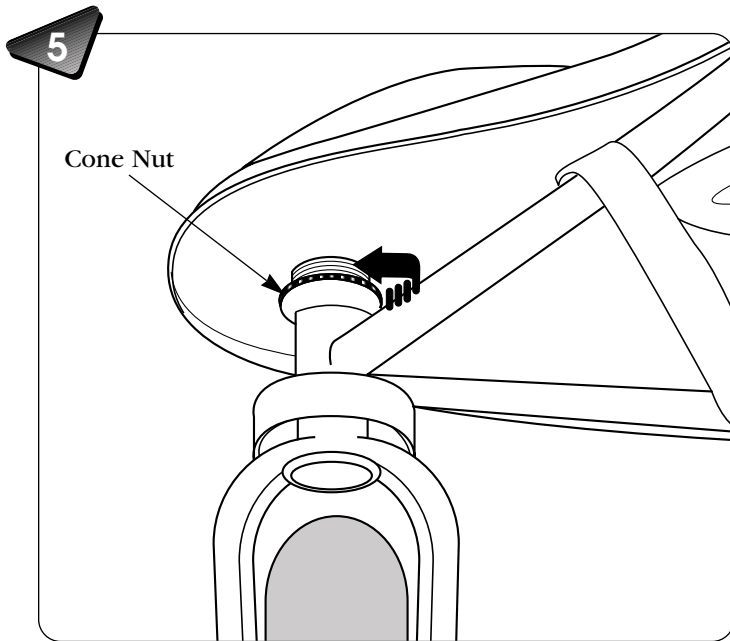


- With your hand, tighten the cone nut counter-clockwise a $\frac{1}{4}$ turn.

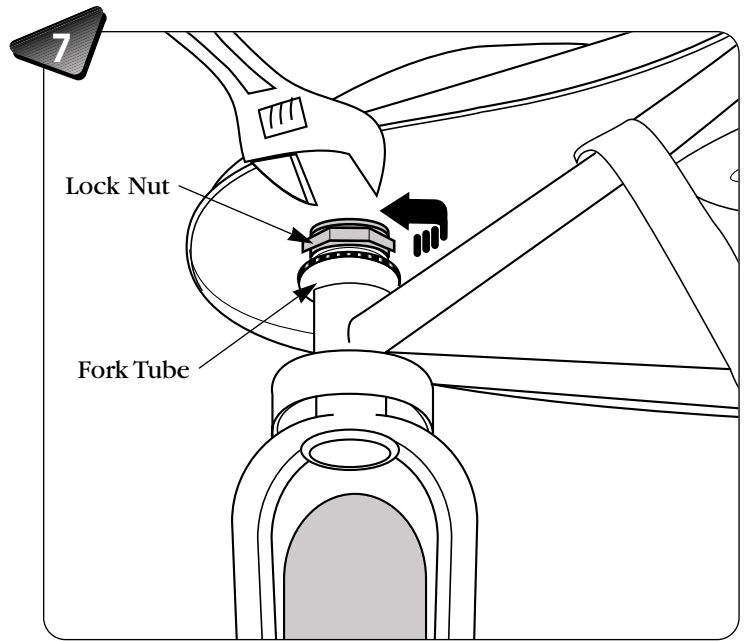


- Replace the lock nut onto the fork tube.
- Tighten the lock nut counter-clockwise with an adjustable wrench. Do not over-tighten.

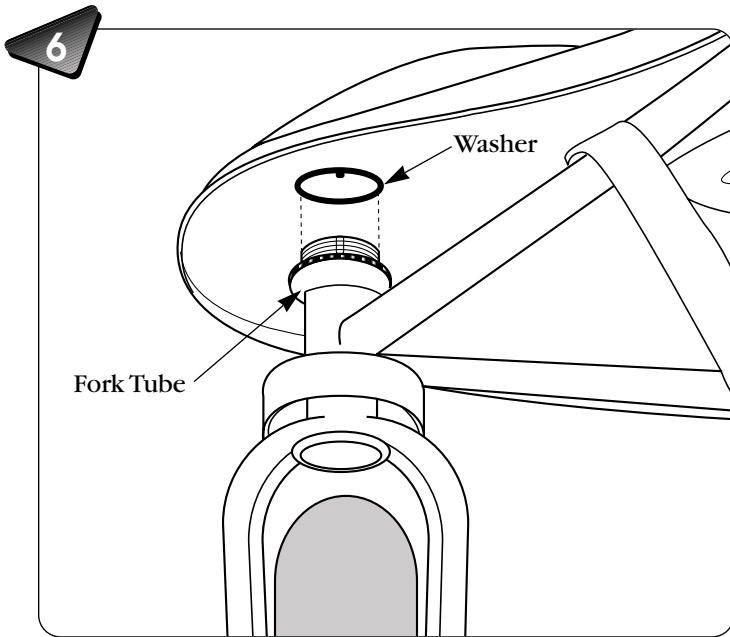


- Fit the tab on the washer into the notch in the fork tube.
- Please Note:** If your stroller is equipped with more than one washer, replace all washers.

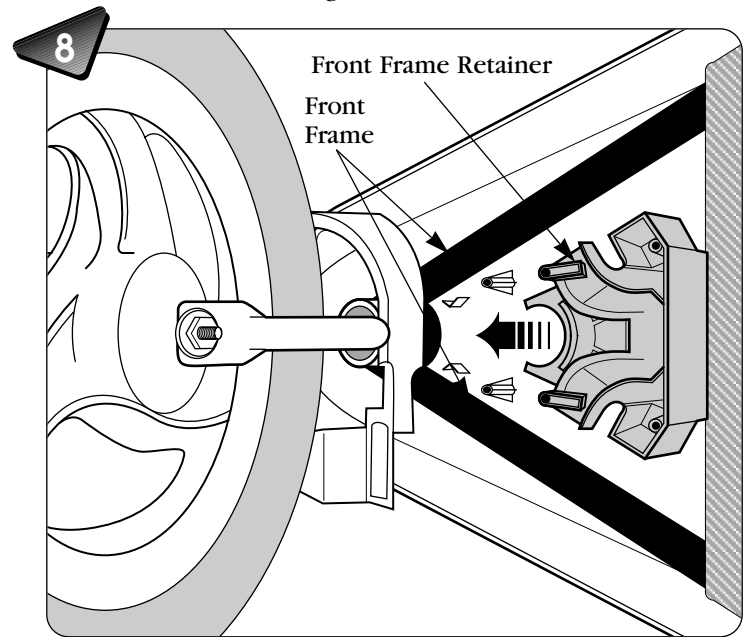

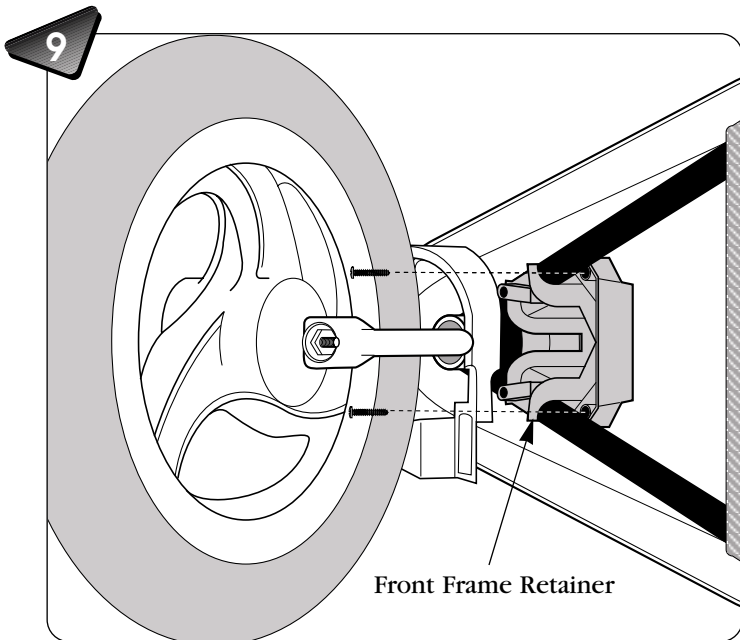


- Slide the front frame retainer under the front frame.
- Make sure the pegs and tabs on the footrest fit into the front frame retainer.

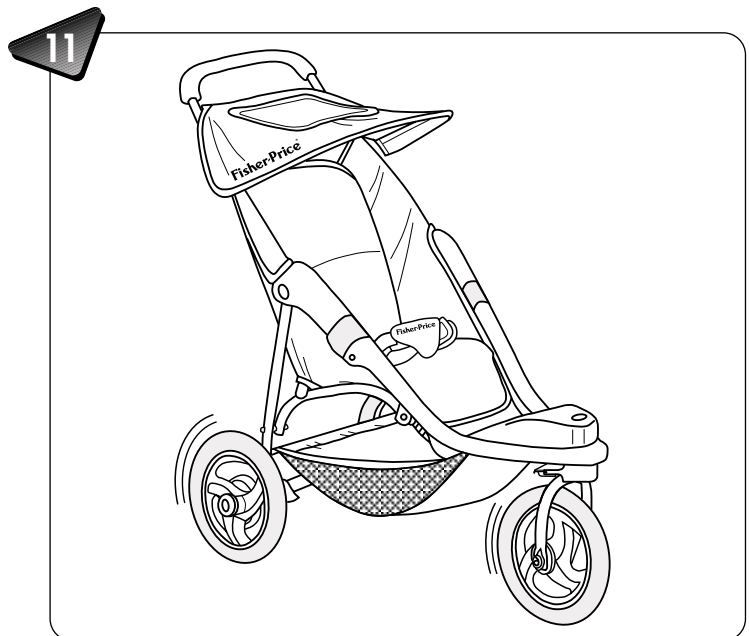

- Insert two screws into the front frame retainer and tighten with a long shaft Phillips screwdriver. Do not over-tighten.



- Turn the stroller upright.
- Push the stroller forward and check to see if the fork is still too loose (wobbles) or perhaps too tight (hard to pivot front wheel).
- If the fork is too loose, repeat Maintenance steps through .
- If the fork is too tight, repeat Maintenance steps through , but be sure to **loosen** the cone nut $\frac{1}{4}$ turn.

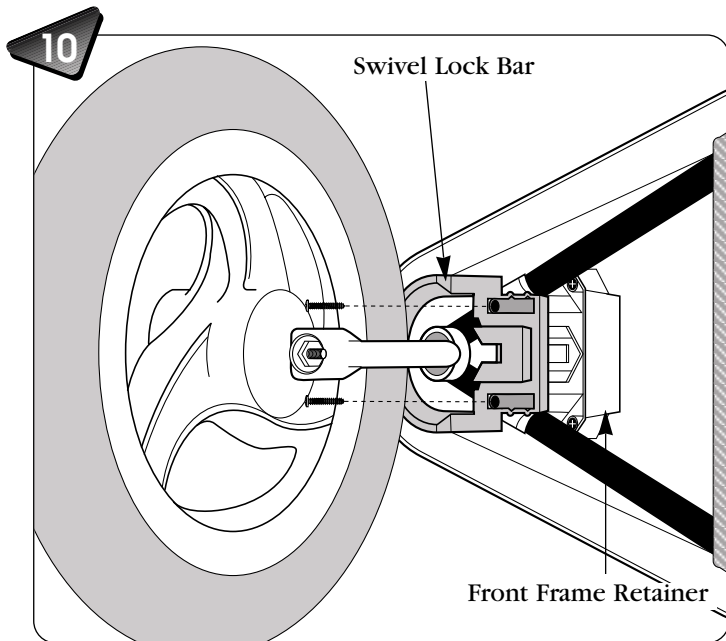

- Reposition and fit the swivel lock bar onto the front frame retainer.
- Insert two screws into the swivel lock bar and tighten with a Phillips screwdriver. Do not over-tighten.

Cleaning

The Town & Country Stroller is surface washable with a damp cloth and a mild cleaning solution. Do not use bleach. Rinse clean with water to remove soap residue.

If you have any questions about this product:

In Canada, call 1-800-567-7724, or write to: Mattel/Fisher-Price, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01734 770488.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.