



## Installation Instructions

# 3-in-1 Cradle Swing Handle Lock Kit


Model Numbers: 79321, 79322

## WARNING


### Prevent head injuries.

The Cradle Swing seat handle can unlatch suddenly during use.  
Do not use as a carrier until the handle is repaired.


## Handle Lock Kit Parts

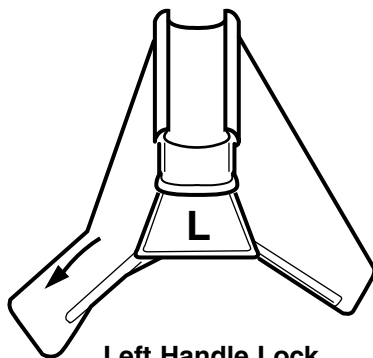

Left Handle Lock

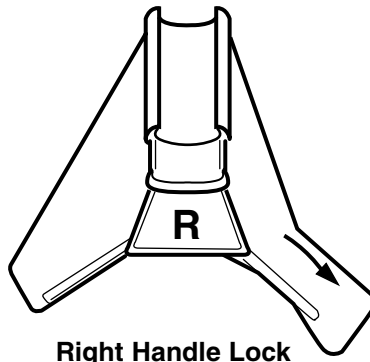

Right Handle Lock

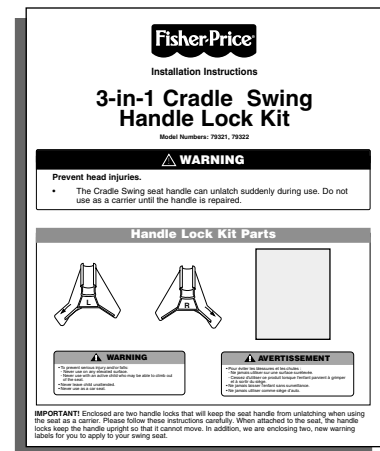

Instruction Sheet

## WARNING

- To prevent serious injury and/or falls:
  - Never use on any elevated surface.
  - Never use with an active child who may be able to climb out of the seat.
- Never leave child unattended.
- Never use as a car seat.

English Warning Label





## AVERTISSEMENT

- Pour éviter les blessures et les chutes :
  - Ne jamais utiliser sur une surface surélevée.
  - Cessez d'utiliser ce produit lorsque l'enfant parvient à grimper et à sortir du siège.
- Ne jamais laisser l'enfant sans surveillance.
- Ne jamais utiliser comme siège d'auto.


French Warning Label

**IMPORTANT!** Enclosed are two handle locks that will keep the seat handle from unlatching when using the seat as a carrier. Please follow these instructions carefully. When attached to the seat, the handle locks keep the handle upright so that it cannot move. In addition, we are enclosing two, new warning labels for you to apply to your swing seat.

# Handle Lock Installation

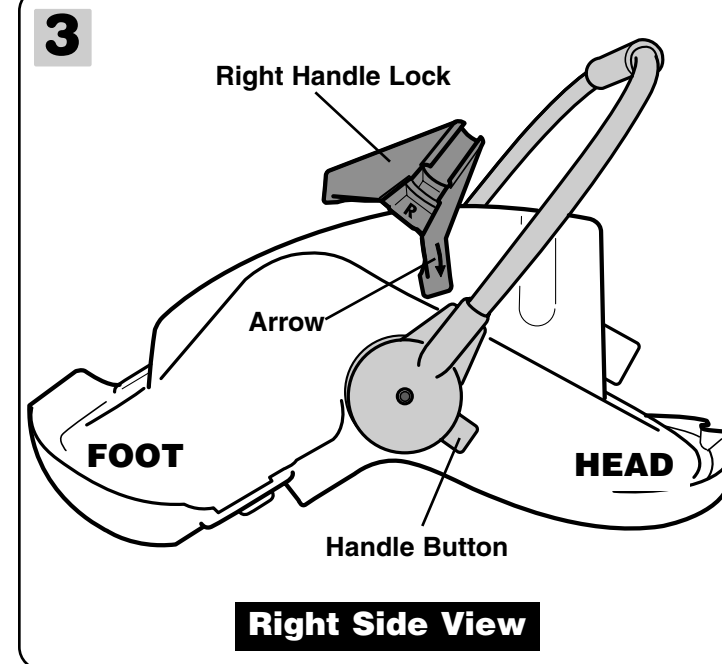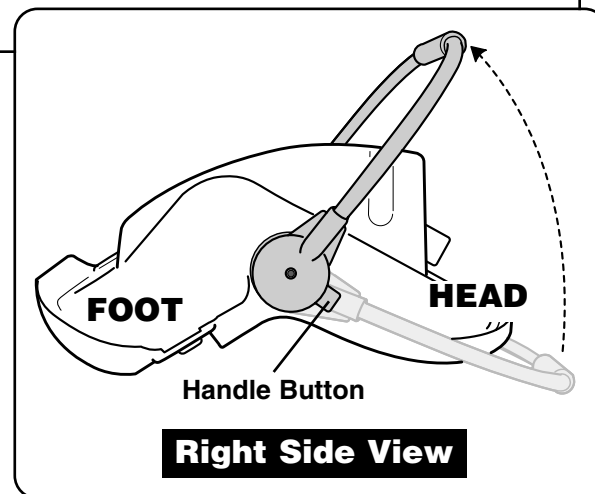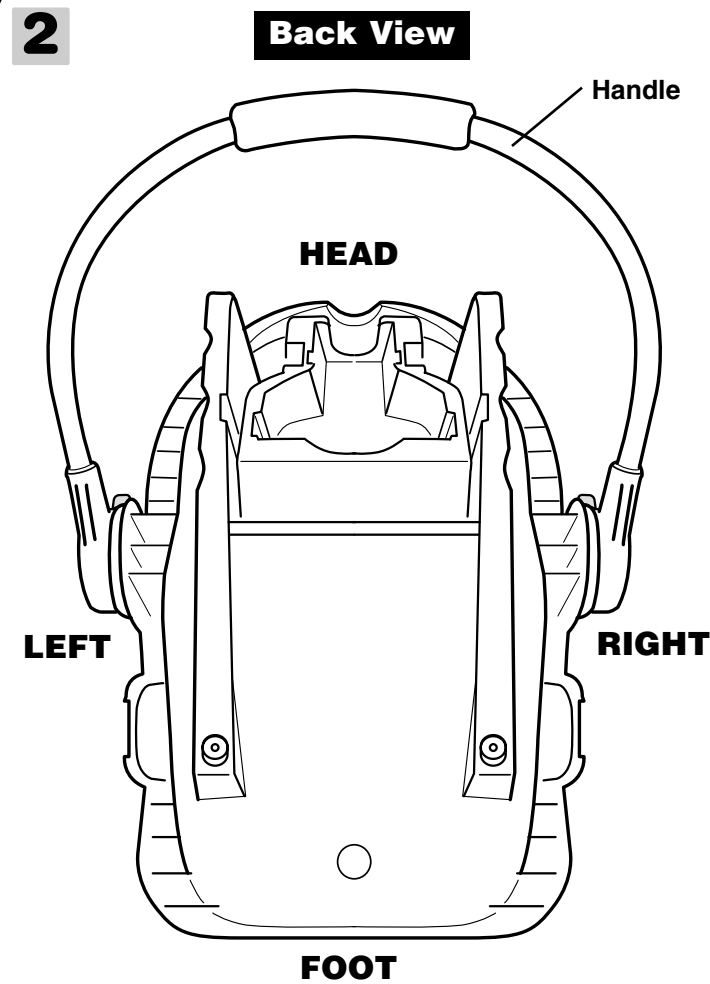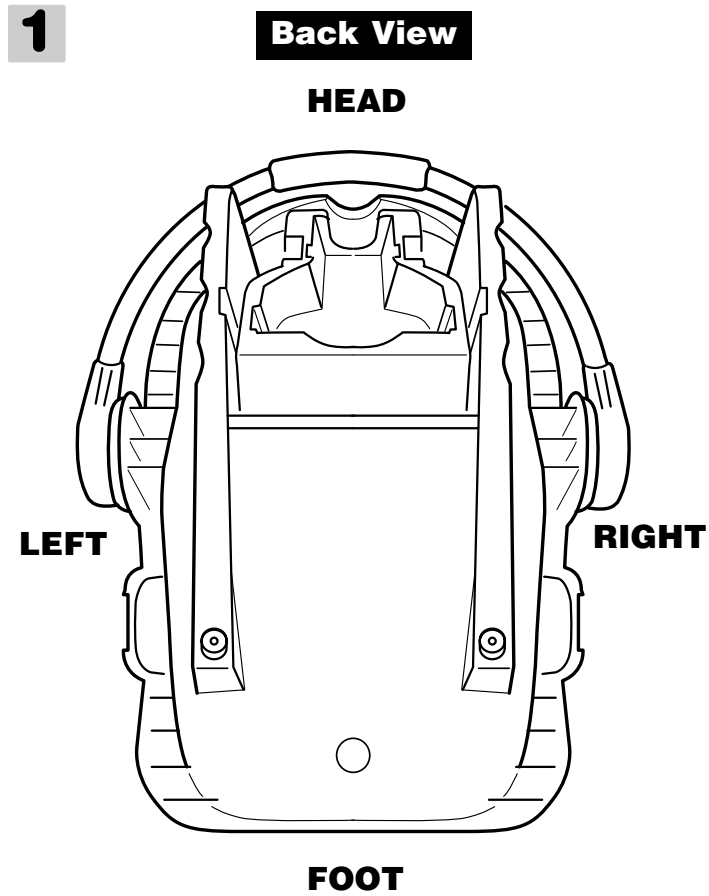


- With the seat face down, position the right handle lock so that the arrow is pointing toward the handle button.

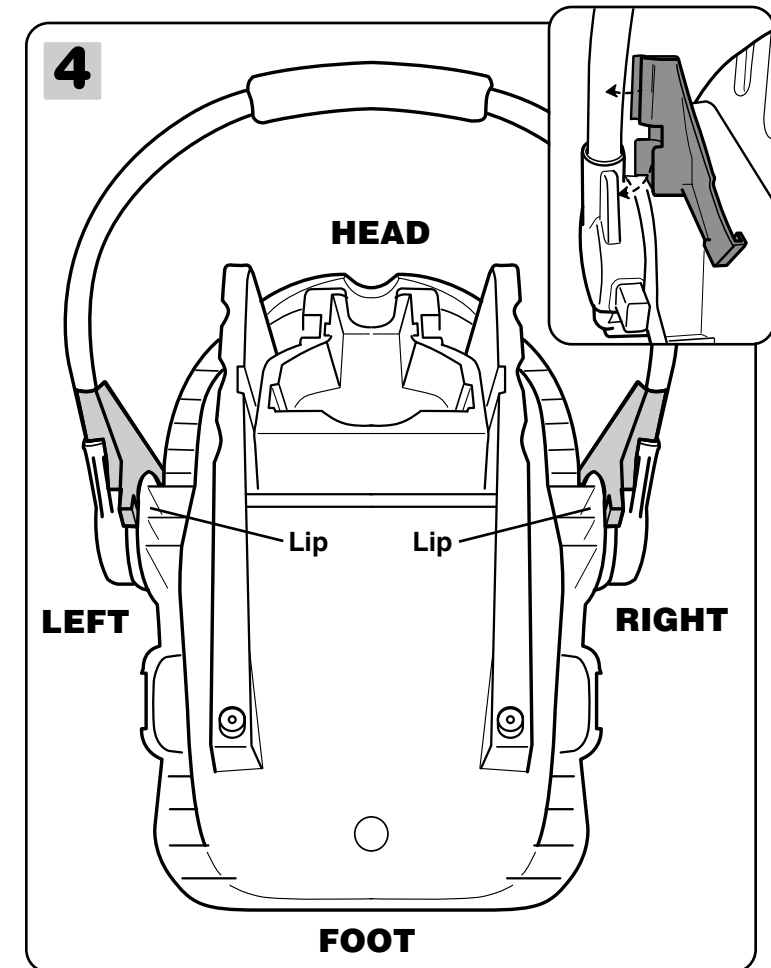


- Fit the right handle lock into the area **between the lip of the seat and the handle**.
- Push the handle lock to “snap” it to the handle.

**IMPORTANT! Repeat this procedure to attach the left handle lock to the left side of the seat.**

- Turn the seat face down on a flat surface.
- Identify the head, foot, left and right sides of the seat.
- Identify the left and right handle locks. The left handle lock is stamped with L; the right handle lock is stamped R.

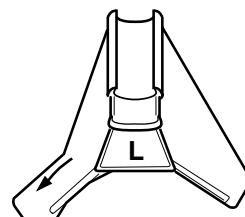

Left Handle Lock

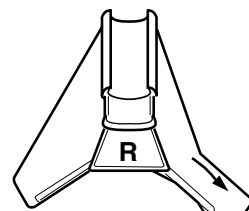


Right Handle Lock

**IMPORTANT! The handle must be in the back position before you begin attaching the handle locks to the seat.**


- Press the handle buttons on each side of the seat and rotate the handle all the way back, as shown.

# Handle Lock Installation

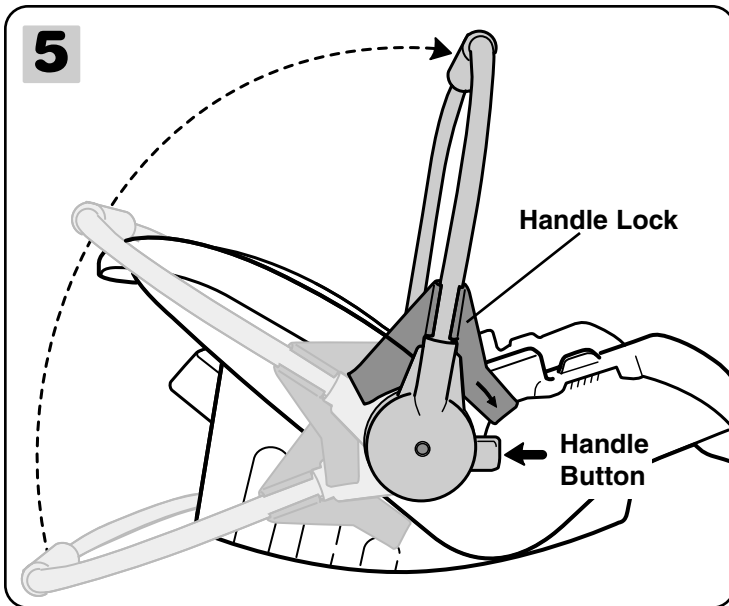

- Turn the seat upright.
- Press the handle button on each side of the seat and rotate the handle completely up into position. The handle locks will “snap” into position on both sides of the seat.


**Hint:** If either handle lock does not “snap” into position, simply press near the arrow on the handle lock until it “snaps” into place.

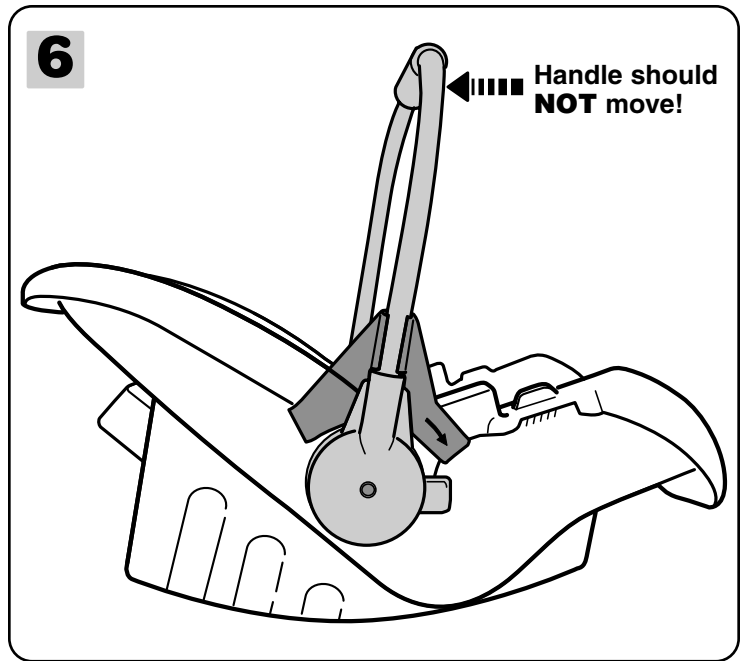

**IMPORTANT! Test to be sure the handle locks are correctly assembled to the seat.**

Press the handle buttons on each side of the seat and attempt to rotate the handle down. **The handle should NOT move!**

## Label Application

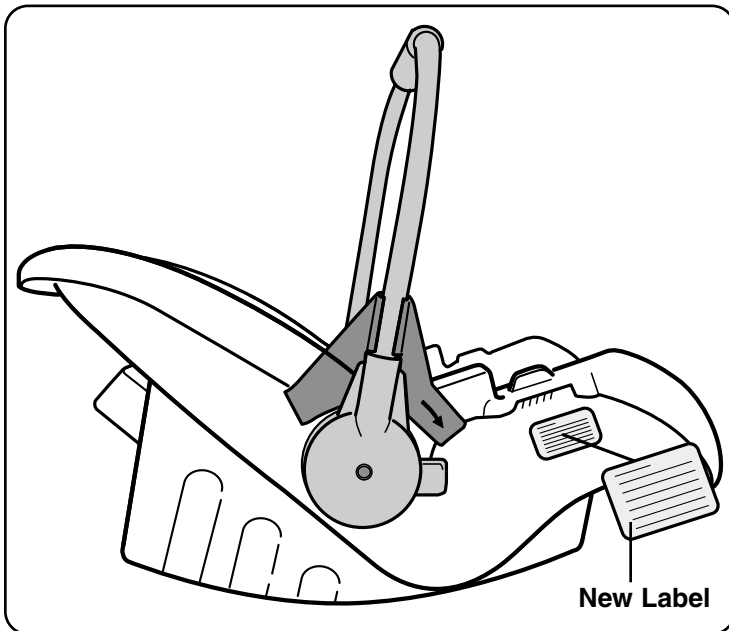

- Locate the warning labels (English and French) on both sides of the seat.
- Make sure areas where these labels are applied to the seat are clean and dry.
- Apply the new English warning label over the existing English warning label.
- Apply the new French warning label over the existing French warning label

## Consumer Information

If you have further questions regarding the installation of the handle locks, please call Fisher-Price® Consumer Affairs, toll-free at **1-800-233-4004**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Affairs  
636 Girard Avenue  
East Aurora, New York 14052.