

Sit 'n Soothe Portable Bassinet

Instructions

Model Number: 79338



Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver.

Requires one size "C" alkaline battery (not included).

Use only for a child who is unable to push up on hands and knees, pull up or sit unassisted.

⚠ WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death.


- Never leave child unattended.
- Never place product on an elevated surface.
- To prevent suffocation from entrapment, use only the Fisher-Price® pad provided. Never use additional padding or mattress.
- Never use plastic shipping bags or other plastic film as mattress covers.
 They can cause suffocation.
- To prevent falls, use only for a child who is unable to push up on hands and knees, pull up or sit unassisted.
- When used as an infant seat, to prevent falls, always use restraint.
- To prevent strangulation:
 - Never place items with a string, such as hood strings or pacifier cords, around child's neck.
 - Never place bassinet near a window where cords from blinds or drapes can strangle a child.
- The Sit 'n Soothe Portable Bassinet™ must be fully erected prior to use.

Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return the product to the store. Usually we can solve the problem over the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly.

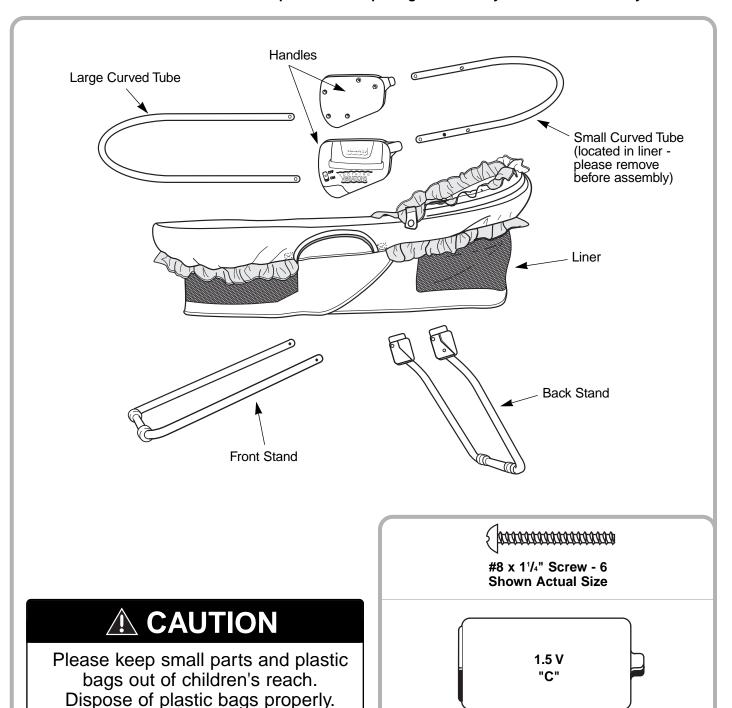


Shown Actual Size

Assembly


IMPORTANT! Before each usage or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges.

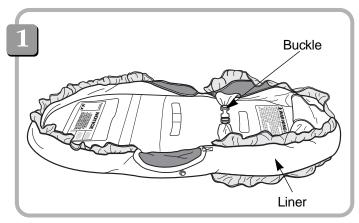


- Remove the small curved tube from the liner.
- Position the liner upside down on a flat surface.
- Unfasten the buckle.

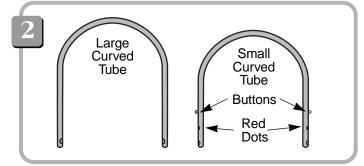


 Identify the large curved tube without buttons and the small curved tube with buttons and red dots.

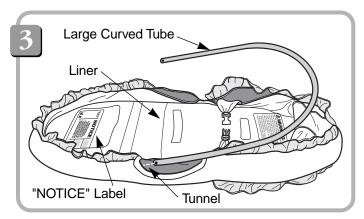

- Locate the tunnel in the liner near the "NOTICE" label.
- Insert the large curved tube through the tunnel in the liner near the "NOTICE" label.

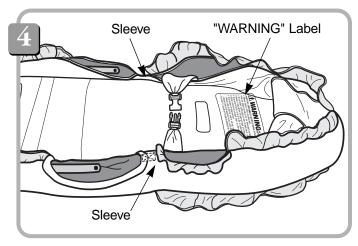


• Note the locations of the sleeves on each side of the liner, near the "WARNING" label.

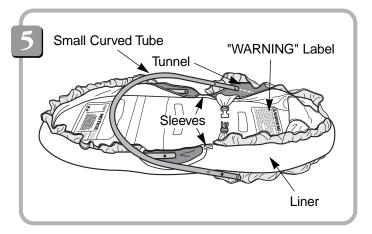


- Locate the tunnel in the liner near the "WARNING" label.
- Insert the small curved tube through the tunnel in the liner near the "WARNING" label.

IMPORTANT! DO NOT insert the small curved tube through the sleeves in the liner.


Assembly

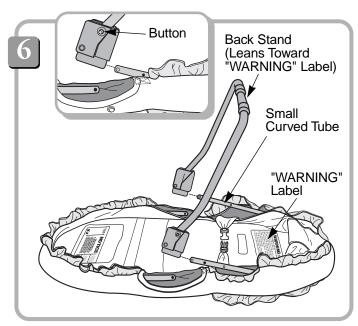


- Position the back stand so that it leans toward the "WARNING" label on the liner. Make sure the buttons on the plastic ends of the back stand are toward the "WARNING" label.
- Slide the ends of the back stand onto the ends of small curved tube.

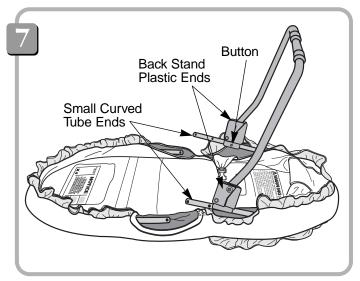

 Push the buttons on the ends of the small curved tube while sliding the back stand over the buttons. Make sure the buttons "snap" into the holes in the plastic ends of the back stand.

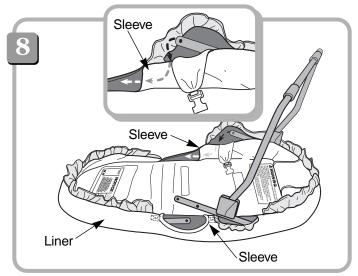

 Insert the ends of the small curved tube through the sleeves on each side of the liner.

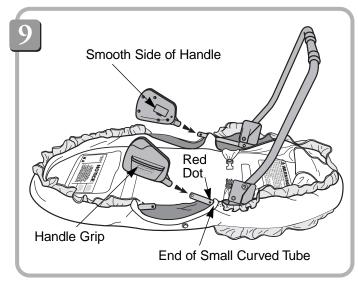


- Position a handle so that the handle grip is toward you. (The smooth side of the handle should be facing the liner.)
- Fit the end of the handle onto one of the ends of the small curved tube. Make sure the handle covers the red dot on the small curved tube.


Helpful Hint: The red dot on the small curved tube may be hidden by the liner. Adjust the liner for a clearer view of the red dot.

Repeat this procedure to assemble the other handle.


Assembly

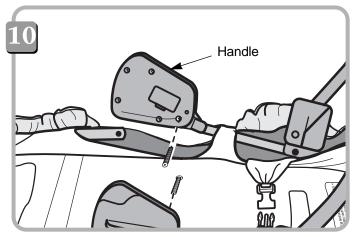

 Insert a screw through each handle and into the small curved tube. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

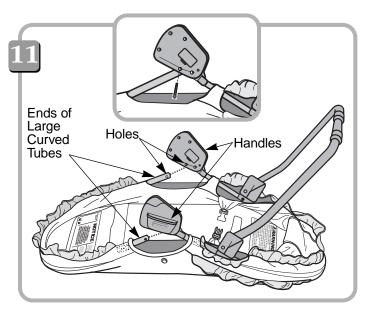


- At an angle, fit the ends of the large curved tubes into the handles. Align the holes in the ends of the large curved tube with the holes in the handles.
- Insert a screw through the inside of each handle and into the large curved tube. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

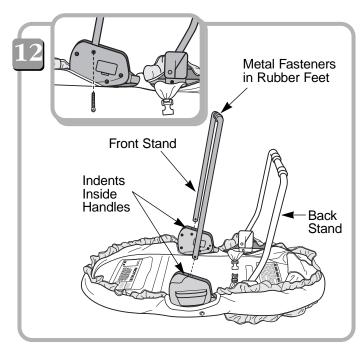

- Position the front stand so that the metal fasteners in the rubber feet face the back stand.
- Fit the ends of the front stand into the indent inside each handle.
- Insert a screw through each handle and into the ends of the front stand. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

Assembly is now complete.

Battery Installation

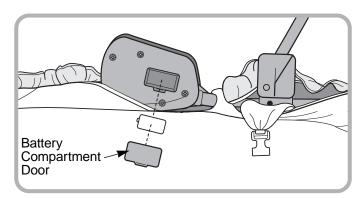

- Insert a coin (or the end of a flat end screwdriver) and open the battery compartment door on one of the handles.
- Insert one size "C" alkaline battery as shown inside the battery compartment.
- Close the battery compartment door.

Battery Tips:

- Remove the battery during long periods of non-use.
 Always remove an exhausted battery from the product.
 Battery leakage and corrosion can damage the product.
- · Never short circuit the battery terminals.
- A non-rechargeable battery is not to be recharged.
- Only a battery of the same or equivalent type as recommended in the "Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Operation and Use

IMPORTANT! Before each usage or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. Do not use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.


⚠ WARNING

- Never place product on an elevated surface.
- To prevent strangulation:
 - -Never place items with a string, such as hood strings or pacifier cords, around child's neck.
 - -Never place bassinet near a window where cords from blinds or drapes can strangle a child.


To Unfold

WARNING


The Sit 'n Soothe Portable Bassinet™ must be fully erected prior to use.

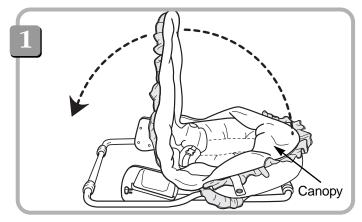


 Place the Sit 'n Soothe Portable Bassinet™ on a flat surface to open it.

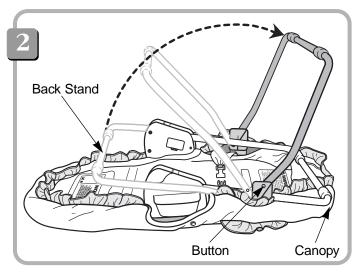

- Turn the Sit 'n Soothe Portable Bassinet™ face down.
- Pull the back stand toward the canopy until the buttons "snap" into place.

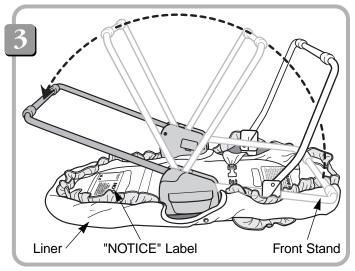

 Pull the front stand toward the "NOTICE" label on the liner.

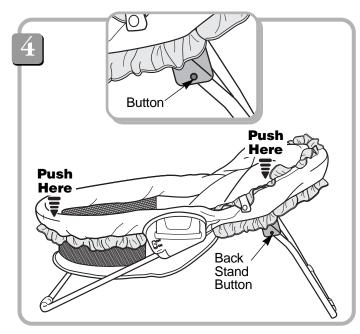


- Turn the Sit 'n Soothe Portable Bassinet[™] upright.
 Check to be sure the Sit 'n Soothe Portable Bassinet[™] is fully erect.
- Push down on the Sit 'n Soothe Portable Bassinet™.
- Make sure the buttons on the back stand are snapped into place.


Restraint System


MARNING

- Never leave child unattended.
- To prevent falls, use only for a child who is unable to push up on hands and knees, pull up or sit unassisted.
- When used as an infant seat, to prevent falls, always use restraint.

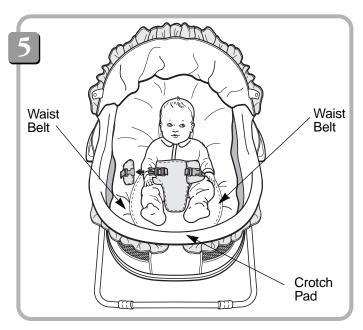

- Place your baby in the Sit 'n Soothe Portable Bassinet™.
- Pull the crotch pad up between your baby's legs.
- Fasten both waist belts to the crotch pad. Make sure you hear a "click" on both sides.
- Make sure the waist belts are properly adjusted to fit your baby.

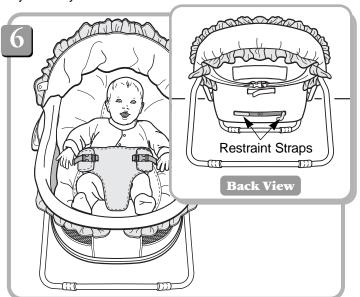


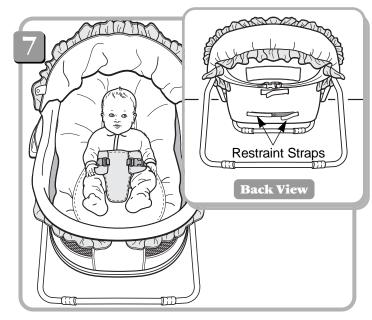

To adjust the restraint for a smaller baby:

· Pull the restraint straps on the back of the liner and fasten.


Bassinet Position Adjustment

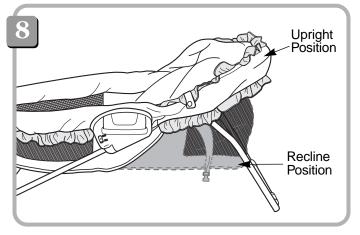

 You can adjust the Sit 'n Soothe Portable Bassinet™ to an upright or recline position for baby's comfort.


To adjust the restraint for a larger baby:

Pull the restraint straps on the back of the liner and fasten.

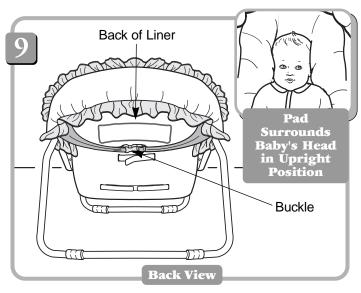

To adjust the bassinet to upright:


- Lift the back of the liner and then fasten the buckle.
 Make sure you hear a "click".
- When the bassinet is in the upright position, the pad automatically surrounds your baby's head.

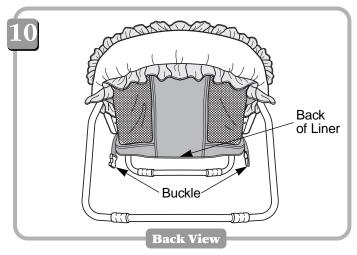

To adjust the bassinet to recline:


 Support the back of the liner with your hand, unfasten the buckle and guide the back of the liner down into position.

Canopy Adjustment

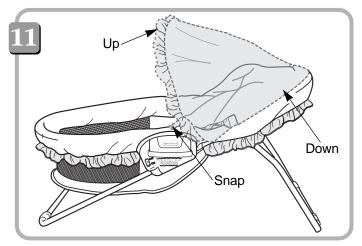

- The canopy can be adjusted up or down.
- Fasten the snap on each side of the canopy for the up position.

Soothing Vibrations

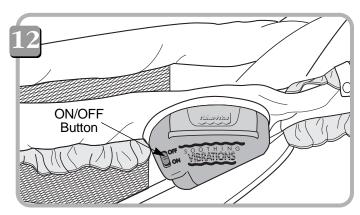

- Slide the ON/OFF button to the ON position to start soothing vibrations.
- Slide the ON/OFF button to the OFF position to turn off soothing vibrations.


IMPORTANT! If soothing vibrations become noticeably slower, replace the battery with a new, size "C" alkaline battery (see page 7, Battery Installation).

Portability




 Grasp the handles on each side of the Sit 'n Soothe Portable Bassinet™ to carry.


To Fold

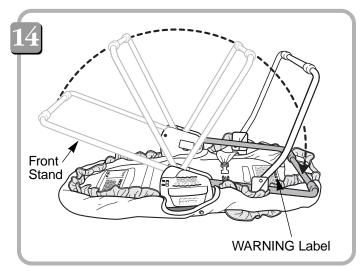


- Turn the Sit 'n Soothe Portable Bassinet[™] face down on a flat surface.
- Rotate the front stand toward the "WARNING" label on the liner.
- Push down on the front stand to snap it into place.

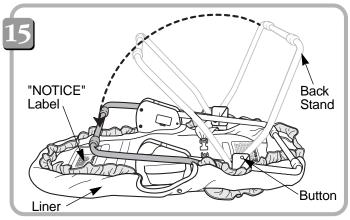

- Press the button on each side of the back stand and push the back stand toward the "NOTICE" label on the liner.
- Push down on the back stand to snap it into place.

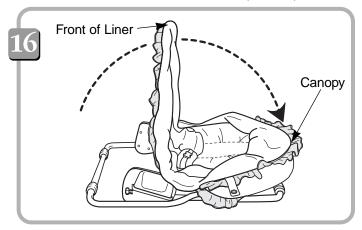


- Turn the Sit 'n Soothe Portable Bassinet™ upright.
- Fold the front of the liner toward the canopy.

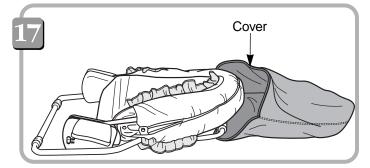


- Remove the cover from the pocket on the back of the liner
- Fit the Sit 'n Soothe Portable Bassinet™ into the cover.

- Machine wash the pad and cover in cold water and a mild detergent. Do not use bleach. Tumble dry on low heat and remove promptly.
- Surface wash the frame, liner and restraint system with a mild detergent and water. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.

To Remove the Pad

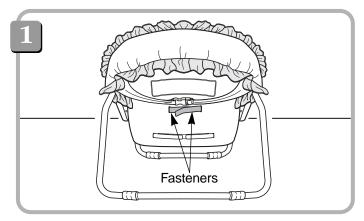

Unfasten the pad fasteners on the back of the liner.

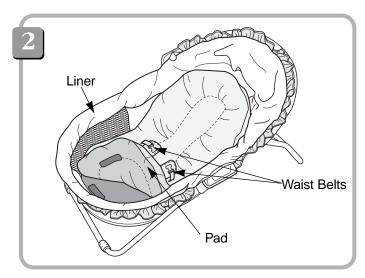

- Feed the waist belts down through the slots in the pad.
- Remove the pad from the liner.

To Re-assemble the Pad

⚠ WARNING

- To prevent suffocation from entrapment, use only the Fisher-Price® pad provided. Never use additional padding or mattress.
- Never use plastic shipping bags or other plastic film as mattress covers.
 They can cause suffocation.
- Position the pad into the liner with the "WARNING" label toward the front of the liner.
- Insert the fasteners on the back of the pad through the slots in the liner. Fasten the fasteners on the back of the liner.
- Feed the waist belts up through the slots in the pad.
- Press to fasten the fasteners on the front of the pad to the liner.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Sit 'n Soothe Portable Bassinet™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Fisher-Price Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.