

**Fisher-Price®**



# *Infant-to-Toddler Soothing Rocker*

Model Number: 79381



Please save these instructions for future reference.

Adult assembly is required. No tools necessary.

Requires one size "D" (LR20) alkaline battery (not included).

Use the upright position only when your child has developed enough  
upper body control to sit without leaning forward.

Always use the restraint until your child is able to climb in and out of the chair unassisted.

Designed for use with children from birth to 40 lbs.


## ⚠ WARNING

### To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.
- Use the upright position only when child has developed enough upper body control to sit without leaning forward.


## Parts

**Note:** The seat back tube may have been packaged within the seat pad at the factory. Before beginning assembly, please remove the seat back tube from the seat pad.

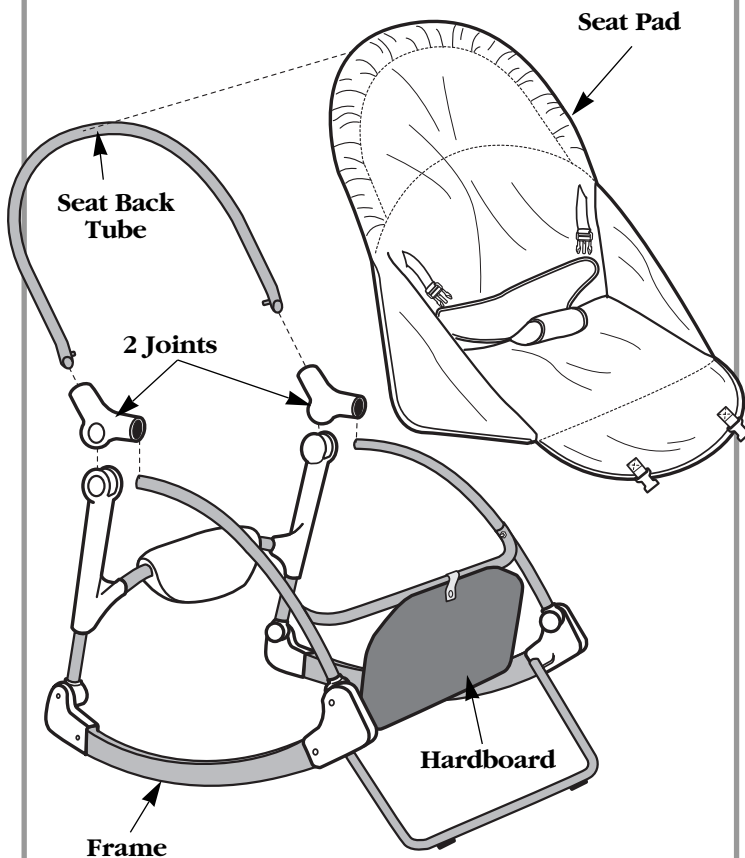


## Assembly

1

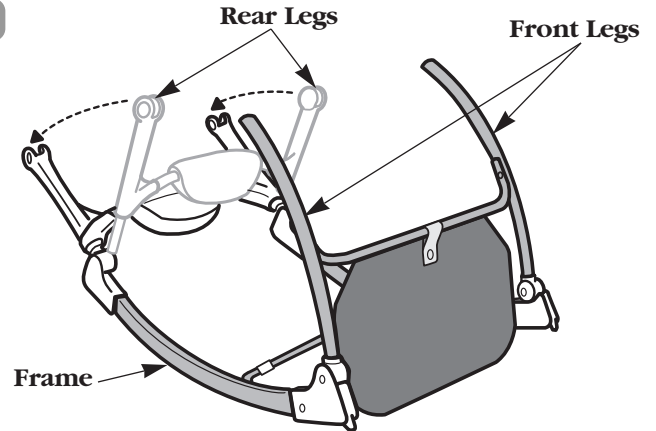


- Place the frame on a flat surface. Rotate the rear legs completely open.

2

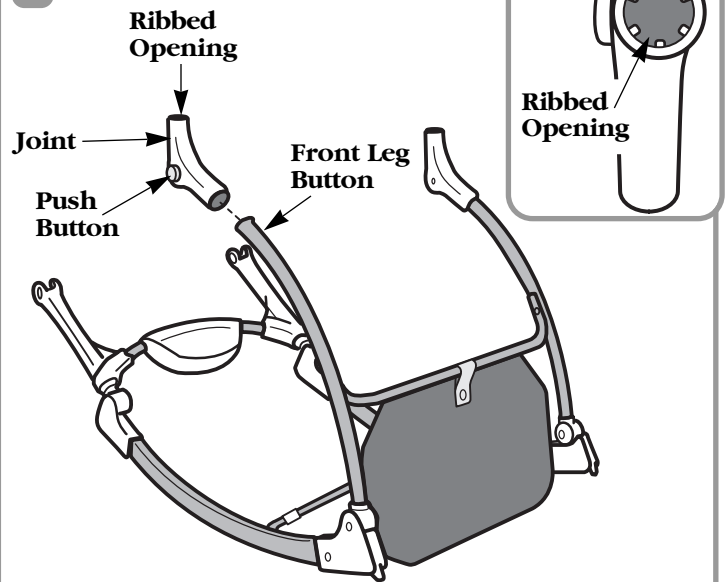


- Lift the front legs up slightly.
- Position one of the joints so the push button is **outward and the ribbed opening is upright**. Fit the joint onto the end of one of the front legs.
- Press the button on the inside of the front leg. Slide the joint down until the button “clicks” into place. **Make sure you hear a “click”**.
- Repeat this procedure to attach the other joint to the other front leg.


# Assembly

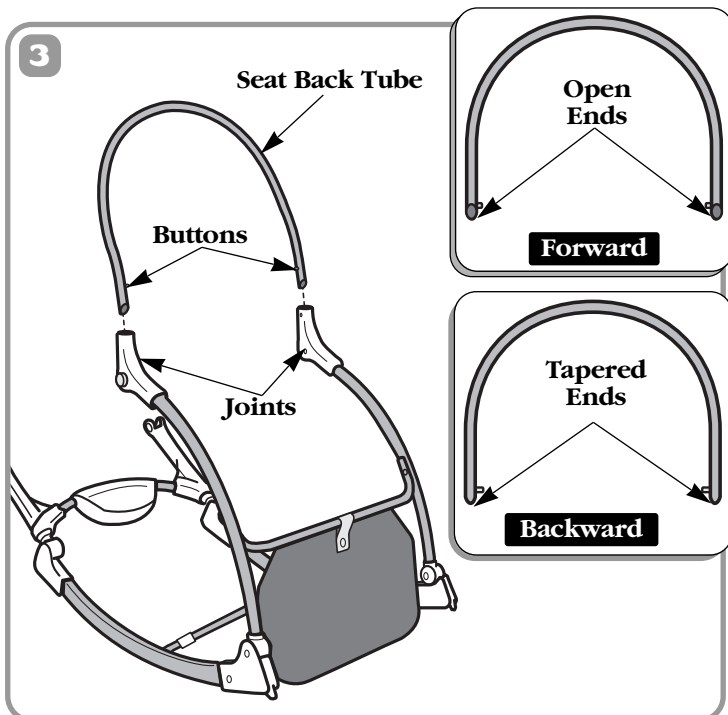


- Position the seat back tube so that the **open ends are forward**.
- Press the button on each end of the seat back tube and insert the ends of the seat back tube into the joints on the seat frame.
- Push the seat back tube into the joints until the buttons “click” into place. **Make sure you hear a “click” on each side.**
- Pull up on the seat back tube to be sure it is secure.

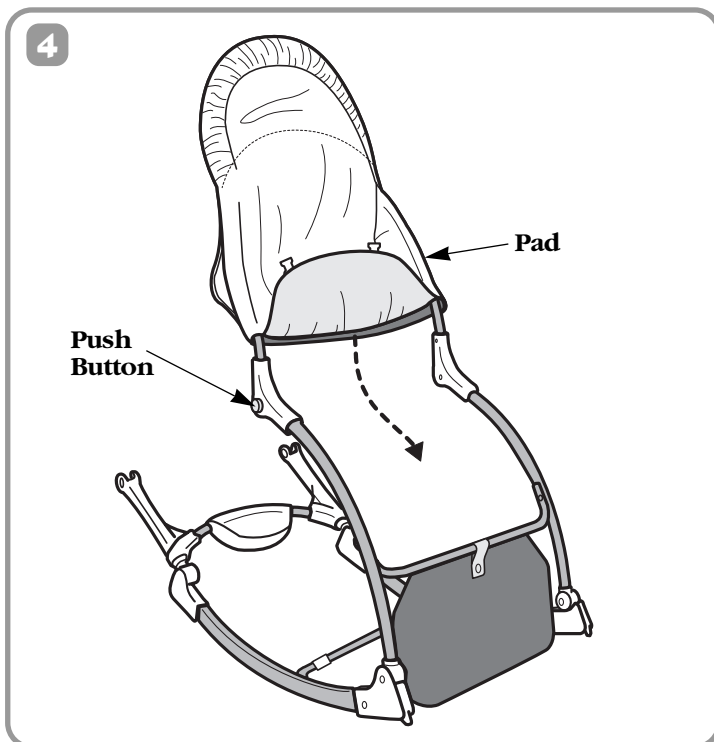


- Locate the large pocket on the back side of the pad.
- Fit the pad, upper pocket over the seat back tube. Pull the pad down completely.

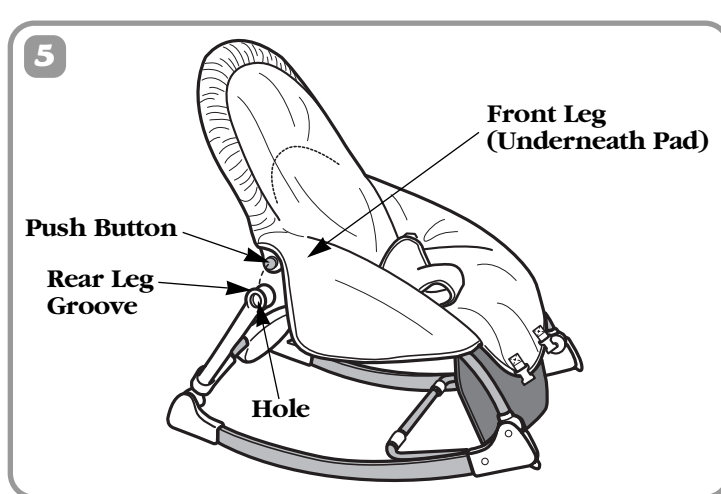

- Rotate the front and rear legs toward each other.
- Press the push button on each joint and fit each joint into the groove in each rear leg. **Make sure both push buttons “snap” into the hole in each rear leg.**
- Check to be sure the front and rear legs are assembled correctly, by pulling them away from each other. The legs should remain attached to each other.

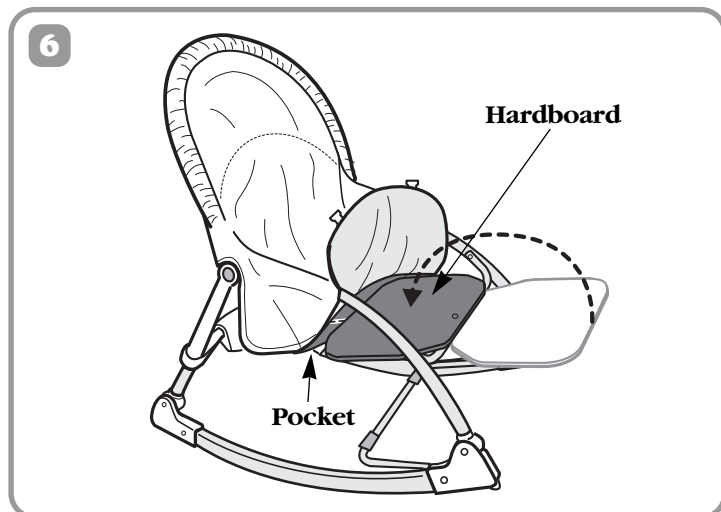


- Turn the hardboard over and insert it into the pocket in the bottom of the seat pad.

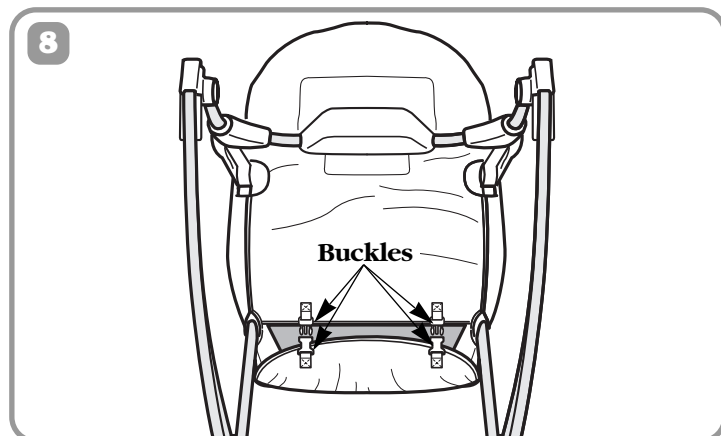

- Turn the seat face down.
- Fasten **both** buckles together. **Make sure you hear a “click” on both sides.**

## Battery Installation

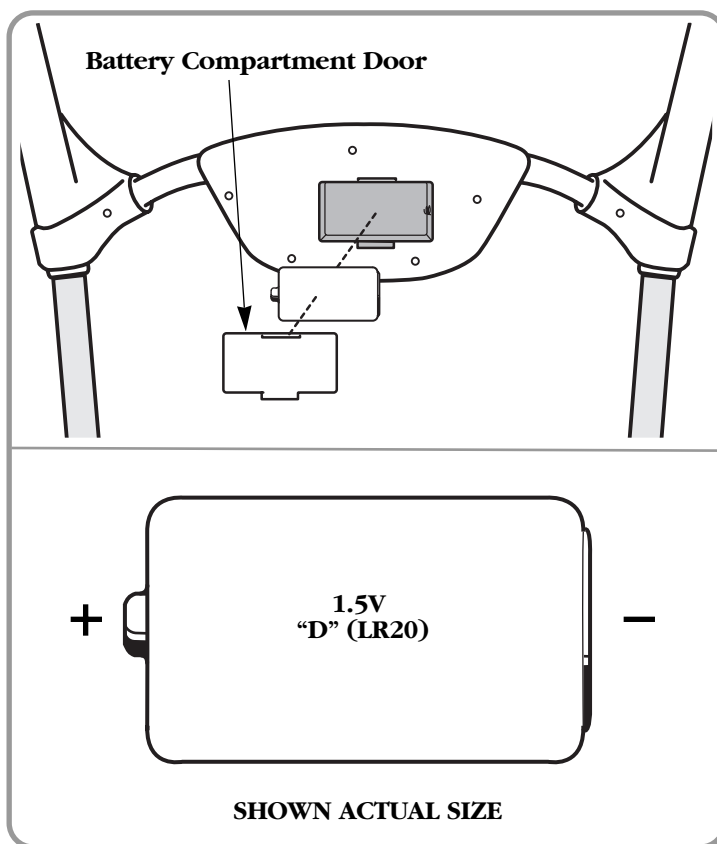

- Insert a coin into the slot in the battery compartment door. Pry the battery compartment door open.
- Insert one size "D" (LR20) alkaline battery, as indicated inside the battery compartment.
- Replace the battery compartment door and be sure it snaps securely closed.

### Battery Tips

- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage the product.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only a battery of the same or equivalent type as recommended in the "Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.


## Set-Up and Use

### Upright Position

#### **WARNING**

**To prevent serious injury and/or falls:** Use the upright position only when child has developed enough upper body control to sit without leaning forward.


**1**

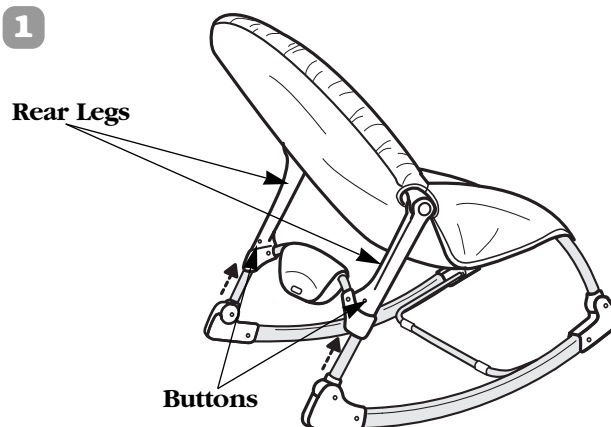

- Pull both rear legs up until the small buttons "click" into place. **Make sure you hear a "click" on both sides.**

### Semi-Recline Position

**2**

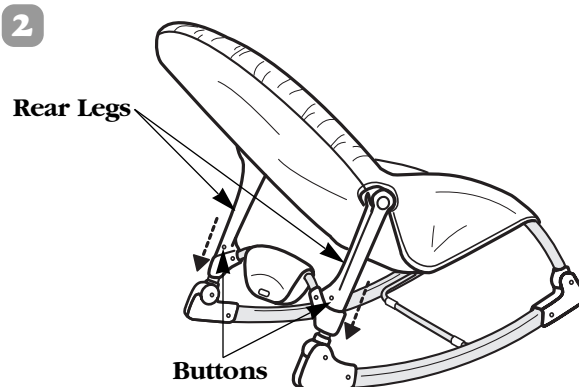

- Press the small button on each rear leg and push the rear of the seat down completely.


## Set-Up and Use

### Securing Your Infant


#### **WARNING**

##### To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.

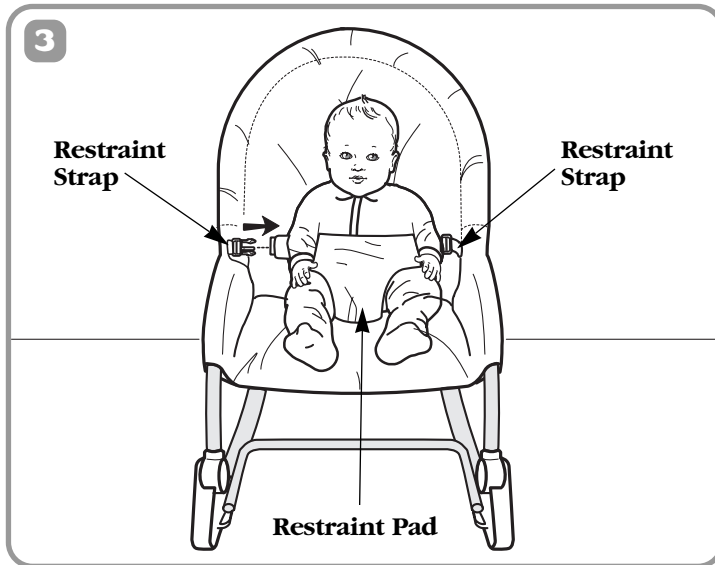

- Place your child in the seat. Position the restraint pad between your child's legs.
- Fasten the restraint straps to the restraint pad. **Make sure you hear a "click" on both sides.**
- Make sure the restraint is securely attached by pulling it away from your child. The restraint should remain buckled.

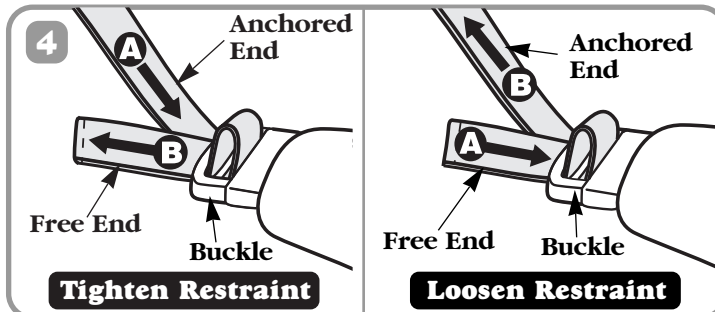

##### To tighten the restraint straps:

- Feed the anchored end of the restraint strap up through the buckle to form a loop **A**.
- Pull the free end of the restraint strap **B**.
- Repeat this procedure to tighten the other restraint strap.

##### To loosen the restraint straps:


- Feed the free end of the restraint strap up through the buckle to form a loop **A**.

- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the restraint strap to shorten the free end of the restraint strap **B**.
- Repeat this procedure to loosen the other restraint strap.

**Please Note:** After adjusting the restraint straps to fit your child, make sure you pull on them to be sure they are securely fastened.

### Soothing Vibrations

**IMPORTANT!** When soothing vibrations become slow or vibrations stop, it's time to replace the battery. Please refer to the "Battery Installation" section on page 4.

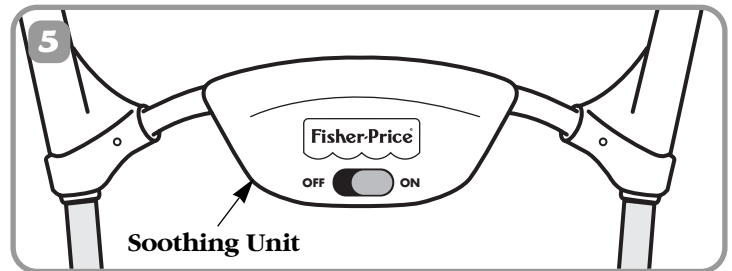


- Make sure your child is properly secured in the seat.
- Slide the ON/OFF switch on the soothing unit to the ON position. The seat will vibrate.
- Slide the ON/OFF switch on the soothing unit to the OFF position. The seat will not vibrate.

### Stationary Feeding Seat

#### **WARNING**

##### To prevent serious injury and/or falls:

- Never use on any elevated surface.
- Always use the restraint until child is able to climb in and out of the chair unassisted.
- Never leave child unattended.

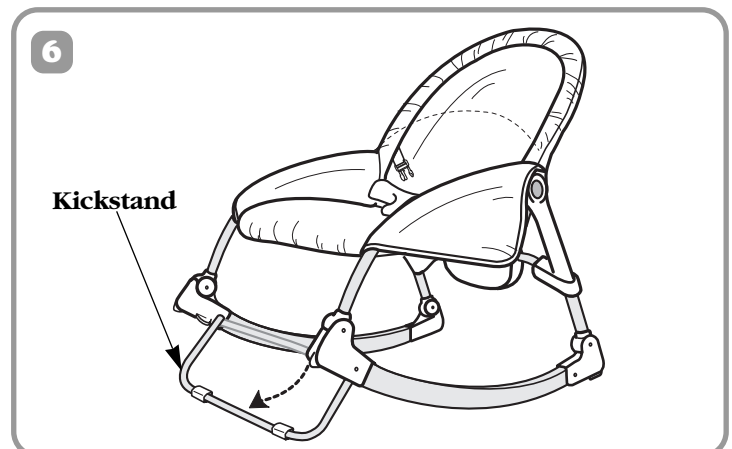


**5**

- Position the seat in the upright or semi-recline position.
- Rotate the kickstand out.



## Storing Restraint System for Toddler Use

**IMPORTANT!** Always use the restraint until your child is able to climb in and out of the chair unassisted.

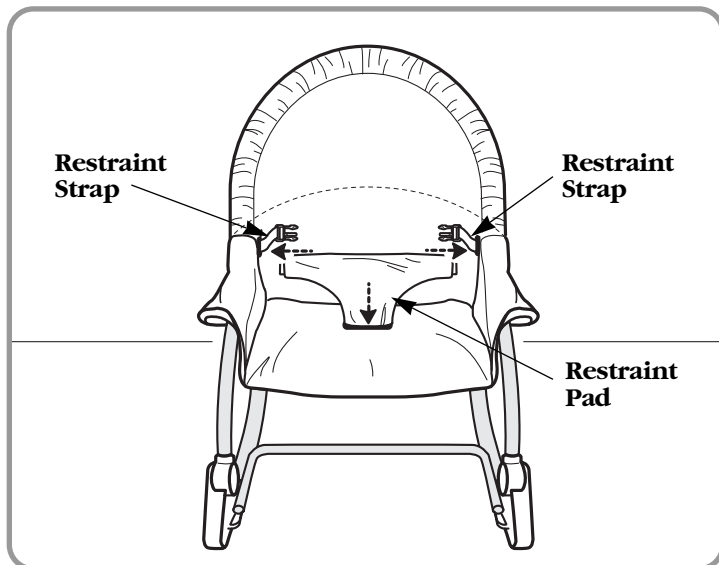

- Insert restraint straps through the small slots in the pad.
- Insert the restraint pad down through the large slot in the pad.
- Tuck the restraint pad into the pocket in the seat pad bottom.

## Care

*The seat pad is machine washable. Wash the seat pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame may be wiped clean using a mild cleaning solution and a damp cloth.*

- Unfasten the buckles on the bottom of the seat pad.
- Remove the hardboard from the pocket in the seat pad.
- Press the push buttons on each joint to disassemble the front and rear legs.
- Remove the pad.
- After washing, re-assemble the seat pad to the frame and hardboard (see Assembly steps 4 - 8).

## One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Infant-to-Toddler Soothing Rocker is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

## Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price Consumer Affairs  
636 Girard Avenue  
East Aurora, New York 14052

If you have any questions about this product:

**In Canada**, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**In Great Britain**, telephone 01628 500303.

**In Australia**, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,  
East Aurora, New York, 14052 U.S.A.  
©1999 Mattel, Inc. All Rights Reserved  
® and ™ designate U.S. trademarks of Mattel, Inc.