

Fisher-Price®

Installation Instructions

Bounce 'n Play Activity Dome Bracket Kit

Model Number: 79534


⚠ WARNING

Suffocation Hazard


- The straps supporting the product can fail and cause the floor to tip.
- Do not use this product until you have repaired it.

Bracket Kit Parts

Tool required for assembly: Phillips screwdriver.

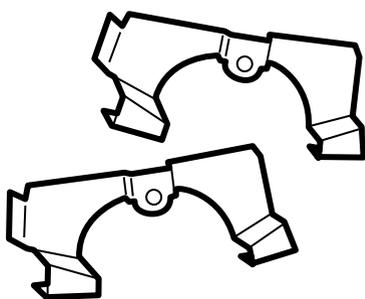


2 Brackets

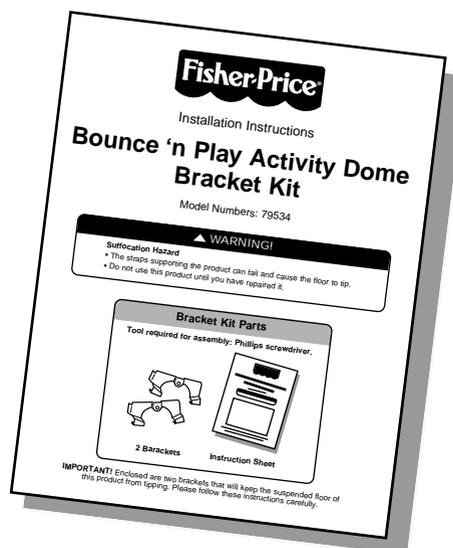

Instruction Sheet


IMPORTANT! Enclosed are two brackets that will keep the suspended floor of this product from tipping. Please follow these instructions carefully.

Bracket Installation

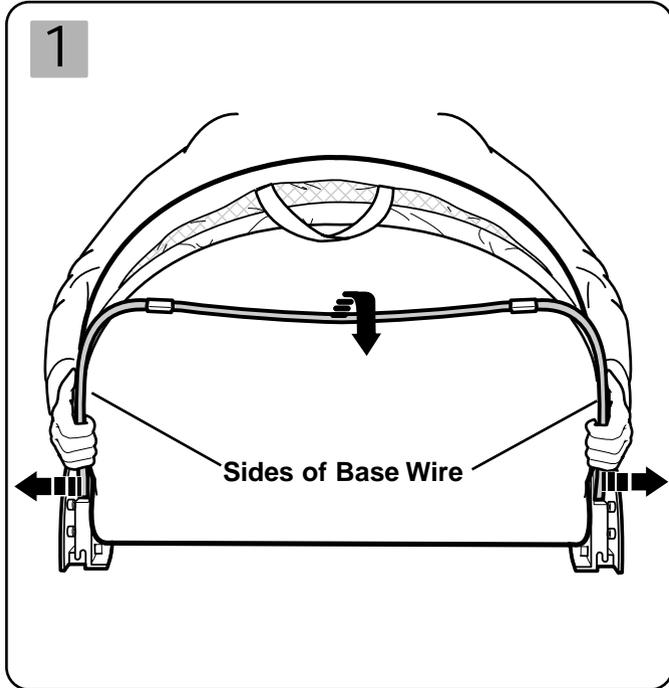

- Position the product upright on a flat surface.
- Grasp both sides of a base wire.
- Pull both sides of the base wire outward and then let the base wire rotate down.

Hint: If the base wire does not freely rotate down, pull the sides of the base wire further outward.

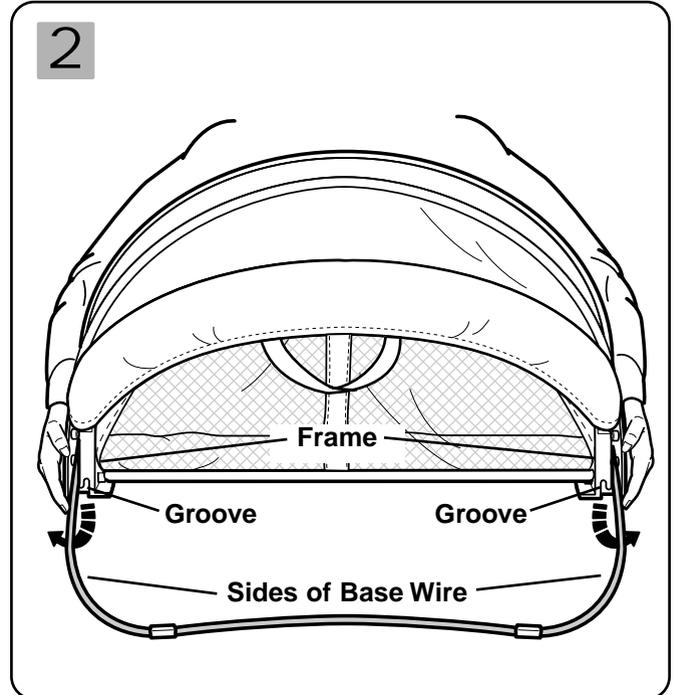

- Lift the product up slightly so that each side of the base wire "snaps" into the groove in each plastic cover. **Make sure you hear a "snap".**


Bracket Installation



CAUTION

Please keep small parts, such as the screws and lock nuts, away from children.

3

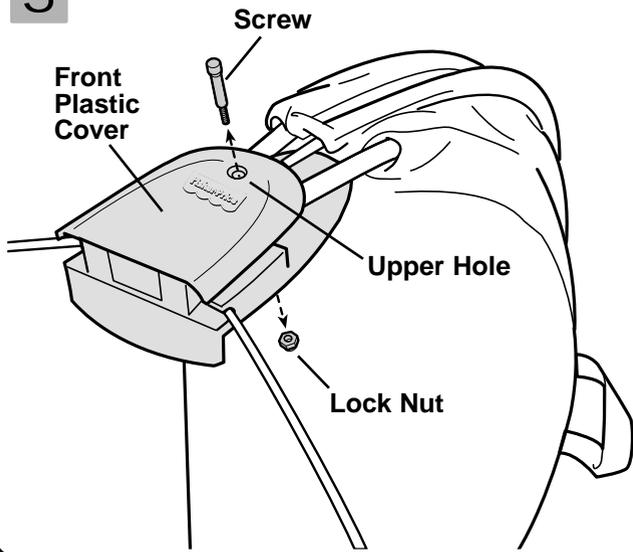


- Tip the product on one side.

Hint: You may want to lean the product against a wall or object to steady it.

- Loosen and remove the screw from the upper hole in the front plastic cover with a Phillips screwdriver.
- Hint:** When loosening the screw, the corresponding lock nut in the back plastic cover may drop. Place your hand behind the back plastic cover to catch the lock nut.
- Remove the corresponding lock nut from the hexagonal opening on the back plastic cover.
 - Repeat this step to remove the screw and lock nut from the upper hole in the front and back plastic covers on the other side of the product.


IMPORTANT! Please set the screws and lock nuts aside in a safe place. You will replace this hardware in step 8.

4

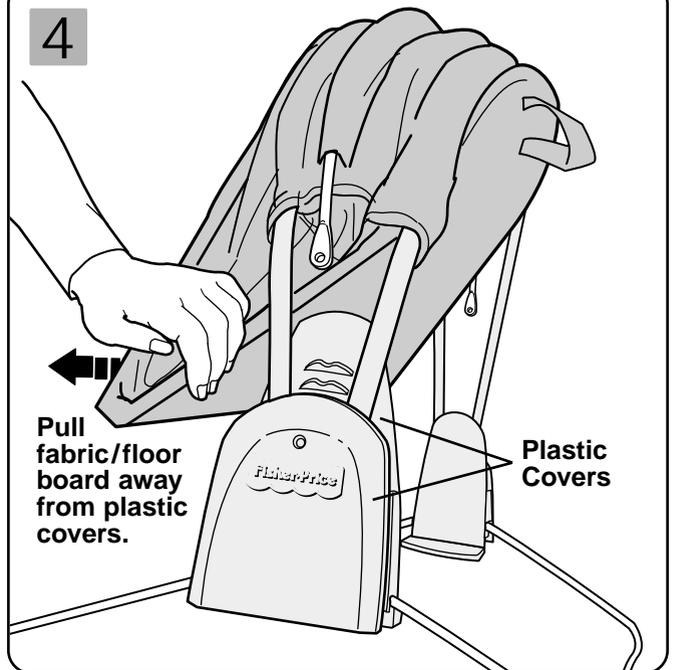

- With the product on its side, **pull the fabric/floor board away from the plastic covers.** This will allow you easy access to the back plastic cover.


Bracket Installation

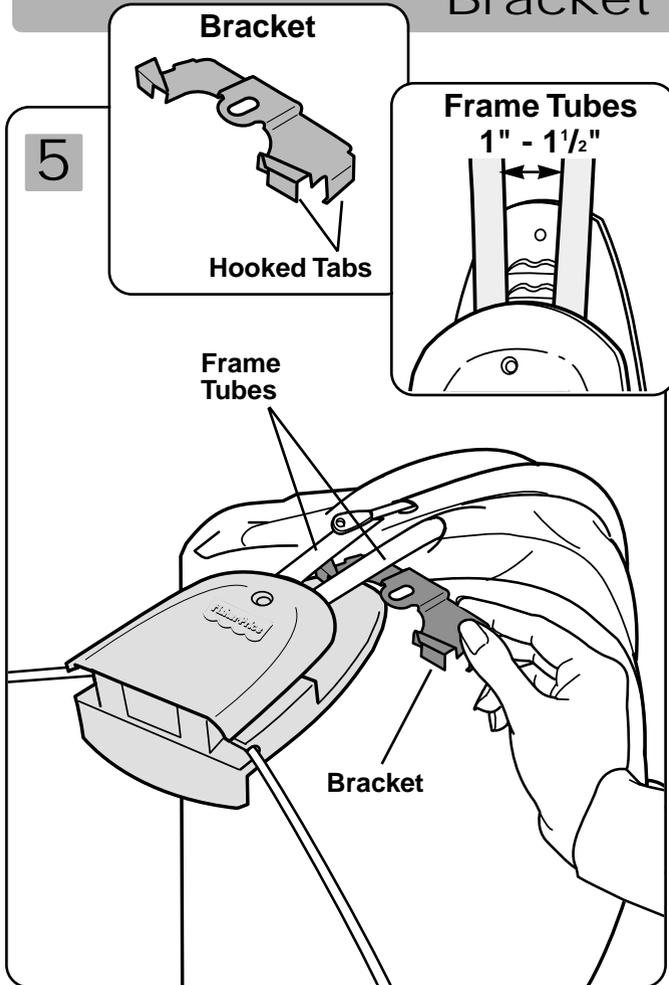

- Position a bracket so that the hooked tabs **curve away from you**.

Hints:


- Make sure the fabric/floor board is pushed away from the plastic covers.
- Make sure the frame tubes are about **1" - 1 1/2" apart**.
- Fit the bracket **behind the frame tubes**.

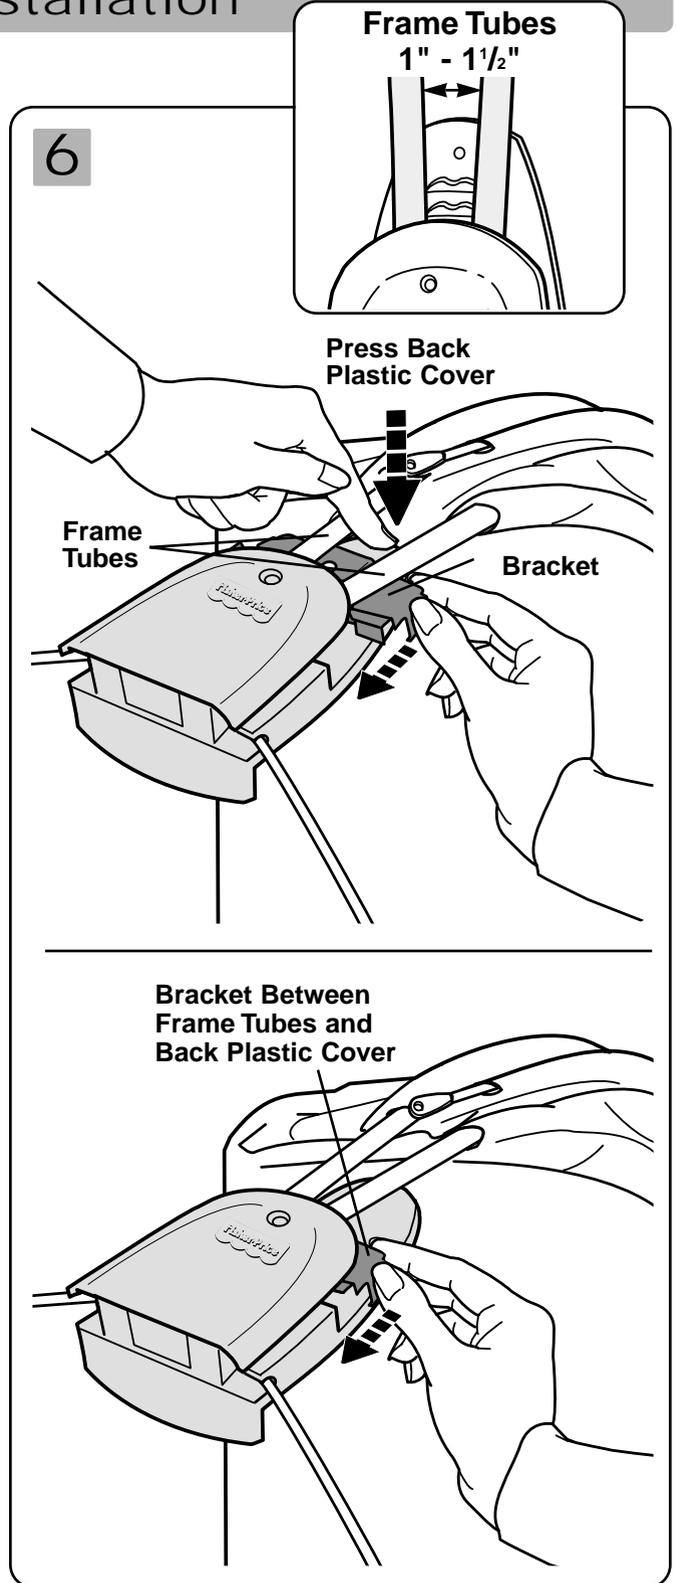


Hint: Make sure the frame tubes are about **1" - 1 1/2" apart**.

- While pressing the back plastic cover, slide the bracket down, **between the frame tubes and the back plastic cover**.

Bracket Installation

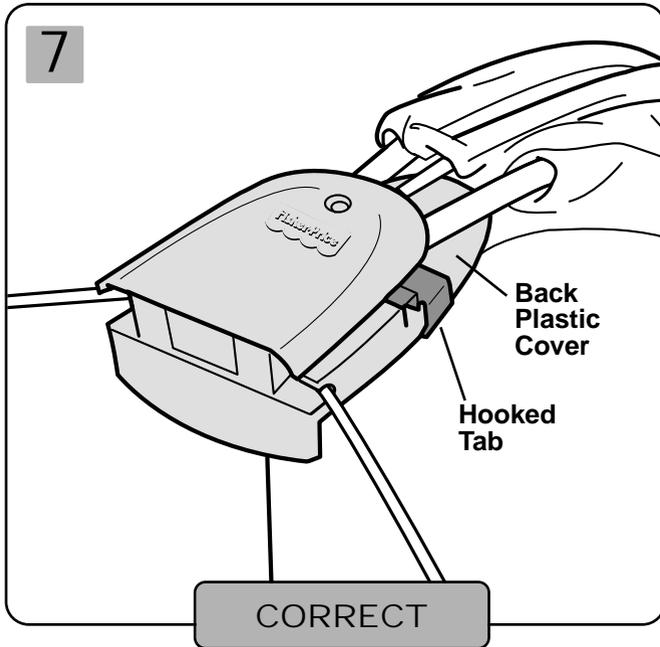

IMPORTANT! When correctly assembled, the hooked tabs on the bracket wrap around the back plastic cover, as shown.

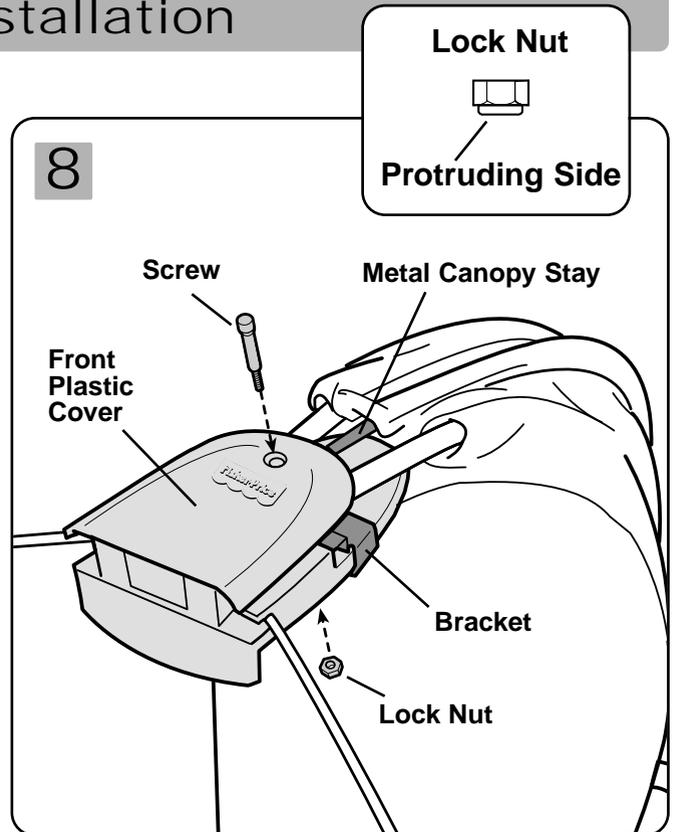

- While positioning the metal canopy stay against the hole in the bracket, replace the screw through the front plastic cover, metal canopy stay, bracket and into the back plastic cover.
- Replace the lock nut (so that the protruding side is toward the fabric) into the upper hexagonal opening on the back plastic cover.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.

IMPORTANT! Repeat steps 3 - 8 to assemble the other bracket to the other side of the product.

The Fisher-Price logo is centered on the page. It consists of the words "Fisher-Price" in a white, bold, sans-serif font, set against a black background that has a scalloped bottom edge.

If you have further questions regarding the installation of the brackets, please call Fisher-Price® Consumer Affairs, toll-free at **1-800-233-4004**, 8 AM-5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.
©2000 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.