

**Fisher-Price®**

# Soothe'n Snuggle™ Bouncer



**Model Number: 79632**

Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required. Tools required for assembly:  
Phillips screwdriver and adjustable wrench (both not included).

Requires one "D" (LR20) **alkaline** battery (not included).

[www.fisher-price.com](http://www.fisher-price.com)




## **WARNING**

### **To prevent serious injury and/or falls:**

- Never use on any elevated surface, since child's movement may cause bouncer to slide or tip over.
- Never use as a carrier or lift while child is seated.
- Always use the restraint system.
- Never leave child unattended.
- Never use as a car seat.
- Never use with a child able to sit up unassisted.

# Parts

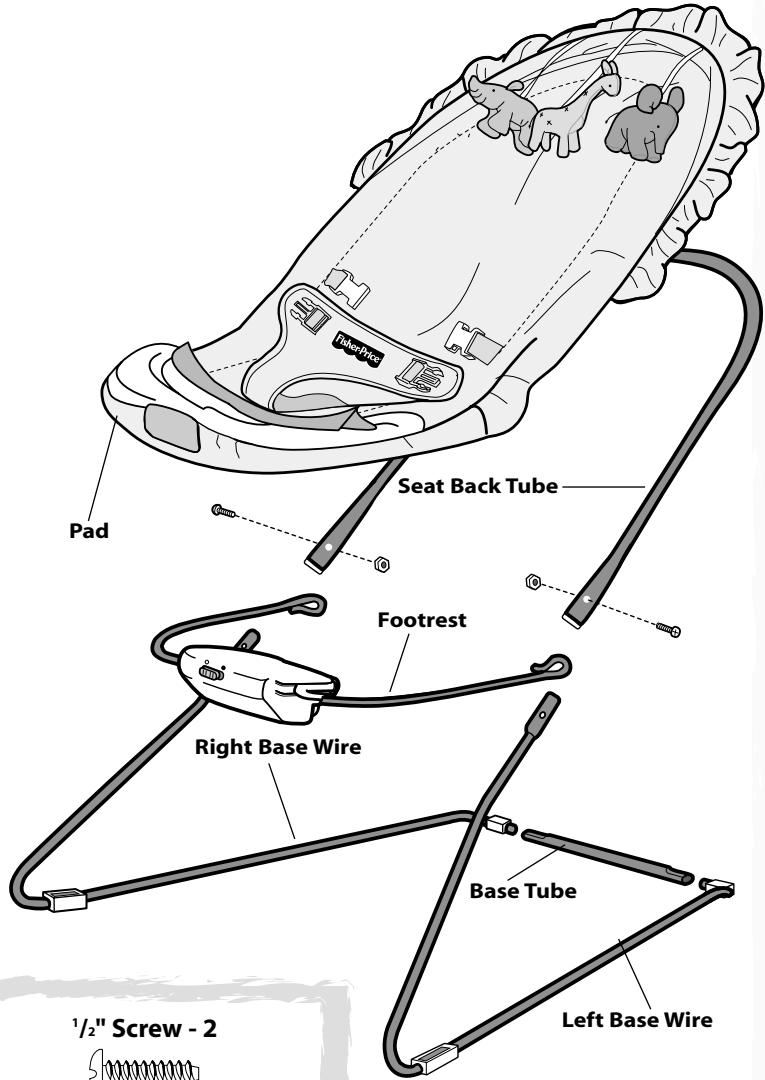

**1/2" Screw - 2**




**Lock Nut - 2**



**Both Shown Actual Size**

# Battery Installation

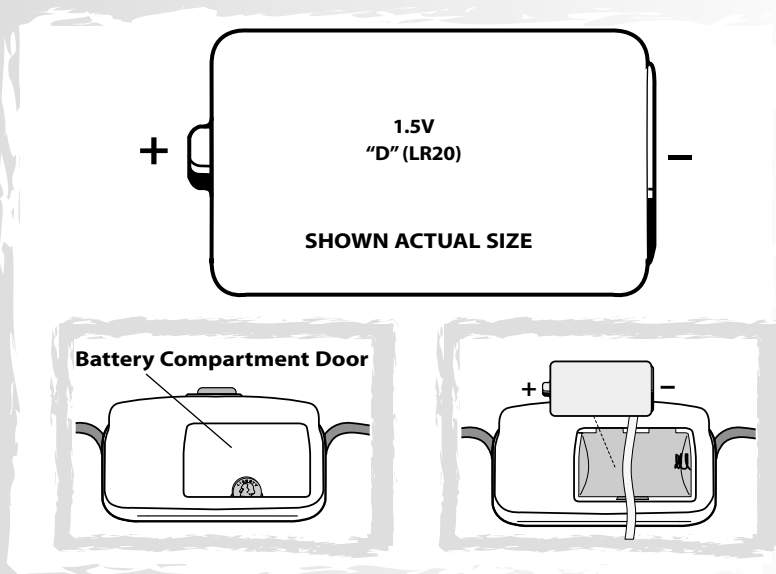

- Locate the soothing unit on the footrest.
- Insert a coin into the battery compartment door and pry the battery compartment door off.
- Insert one "D" (LR20) **alkaline** battery, as indicated inside the battery compartment. Be sure to place the battery on top of the ribbon.
- Replace the battery compartment door and be sure it snaps securely closed.

## Hints

- We recommend the use of an **alkaline** battery for longest battery life.
- For easy battery removal, simply lift the ribbon.

## Battery Tips


- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage the product. Dispose of the battery safely.
- Do not dispose of the battery in a fire. The battery may explode or leak.
- Never short circuit the battery terminals.
- A non-rechargeable battery is not to be recharged.
- Only a battery of the same or equivalent type as recommended in the "Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

# Assembly



## CAUTION


This package contains small parts  
in its unassembled state.  
Adult assembly is required.

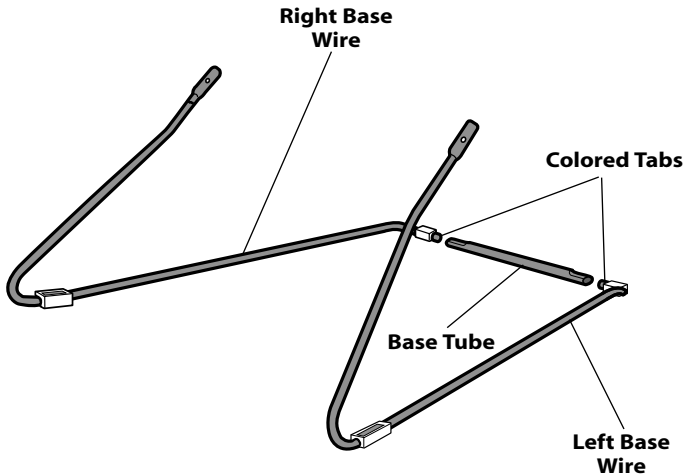

**1**


- Place the base tube on a flat surface as shown.
- Position the left and right base wires as shown. Note the location of the colored tabs on the left and right base wires.
- Fit the left base wire into the base tube.
- Fit the right base wire into the base tube.

# Assembly

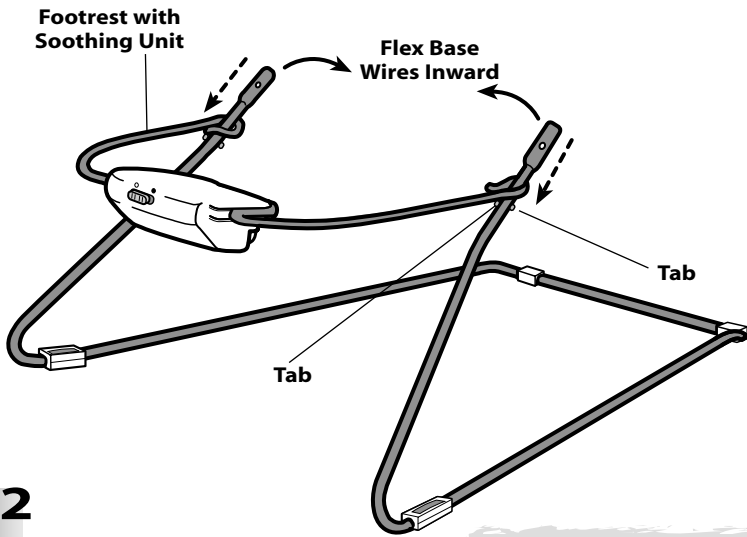


2

- Position the footrest so that the soothing unit is upright.
- While flexing the base wires toward each other, hook the footrest onto the ends of the base wires.
- Push the footrest **down completely to the tabs** on the base wires.
- Make sure the colored tabs on the left and right base wires are visible through the base tube holes (see inset). If the colored tabs are not visible through the base tube holes, you have assembled the base incorrectly. Disassemble all parts and refer back to Assembly Step 1.

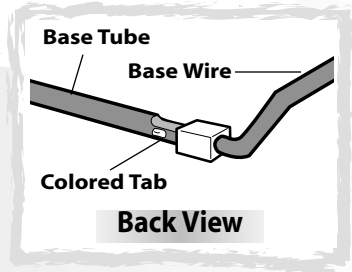


# Assembly

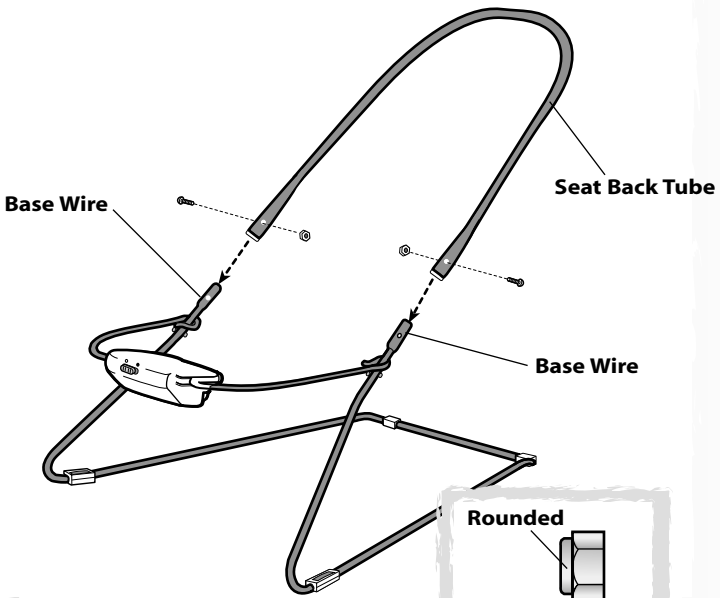


- Position the seat back tube above the base assembly.
- Fit the seat back tube completely onto the base wires.
- Insert a screw through the hole in the **outside** of the seat back tube.
- Attach a lock nut (rounded side outward) to the end of the screw on the **inside** of the seat back tube.
- While holding the lock nut in place with an adjustable wrench, tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to secure the other side of the seat back tube to the base assembly using the remaining screw and lock nut.

# Assembly

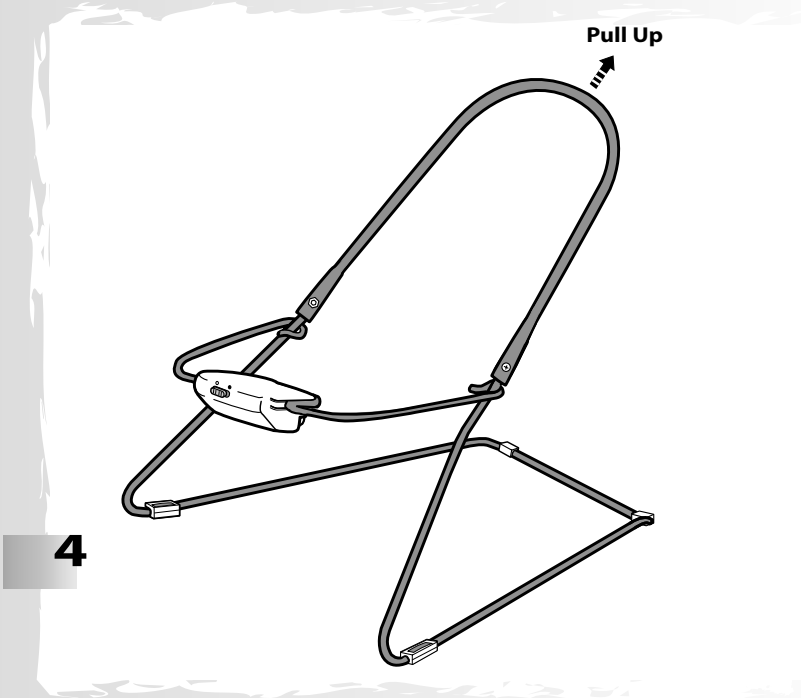

- Pull up on the seat back tube to be sure it is secure. If you can remove either end of the seat back tube, you have not assembled it correctly to the base assembly. Remove the screws and lock nuts. Re-read and repeat Assembly steps 3 and 4.

# Assembly

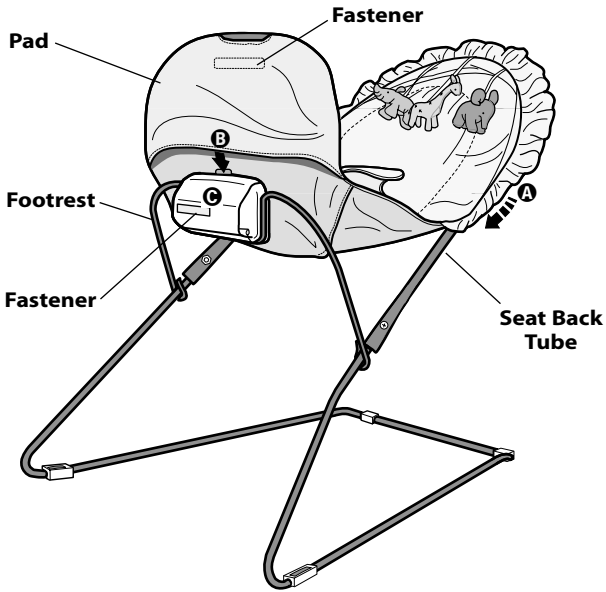

- Position the pad with the canopy up.
- Fit the upper pocket on the back of the pad onto the seat back tube **A**.
- Lift the footrest. Fit the lower pocket on the back of the pad onto the footrest **B**. Lower the footrest.
- Attach the pad fastener to the fastener on the soothing unit **C**.




## **WARNING**

### **To prevent serious injury and/or falls:**


- Never use on any elevated surface, since child's movement may cause bouncer to slide or tip over.
- Never use as a carrier or lift while child is seated.
- Always use the restraint system.
- Never leave child unattended.
- Never use with a child able to sit up unassisted.

# Set-Up & Use

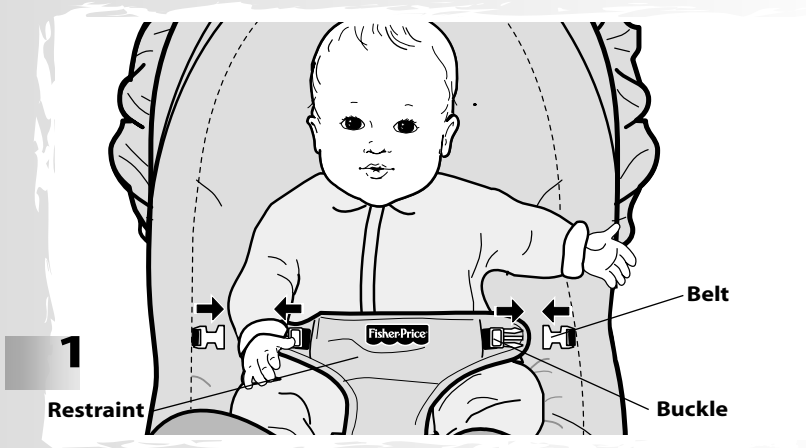

## Securing Your Child

- Place your child in the seat. Position the restraint between your child's legs.
- Fasten both belts to the buckles on each side of the restraint. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint is securely attached by pulling it away from your child. The restraint should remain attached.

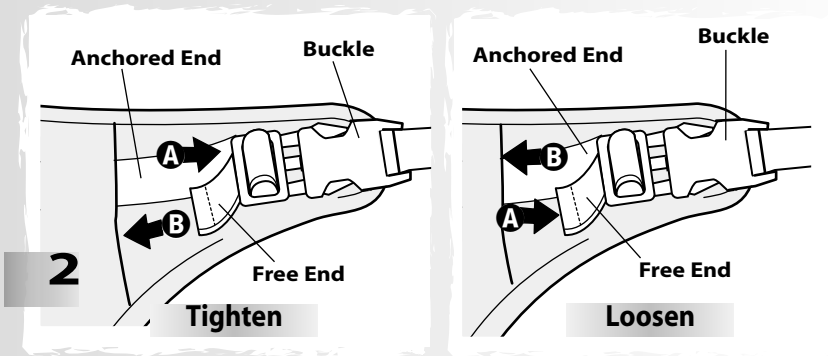

### To tighten the belts:


- Feed the anchored end of the belt up through the buckle to form a loop **A**.
- Pull the free end of the belt **B**.
- Repeat this procedure to tighten the other belt.

### To loosen the belts:

- Feed the free end of the belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the belt to shorten the free end of the belt **B**.
- Repeat this procedure to loosen the other belt.


**Please Note:** After adjusting the belts to fit your child, make sure you pull on them to be sure they are securely fastened.

# Set-up & Use

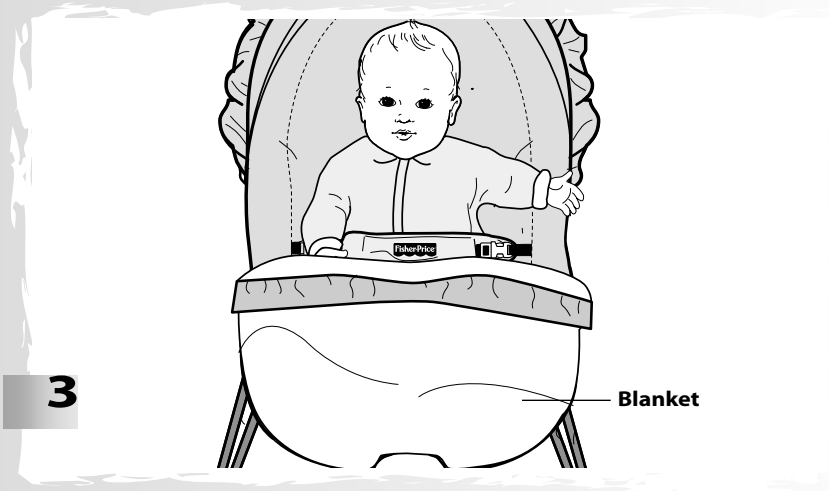

- Fold blanket up on baby's lap.

# Set-up & Use


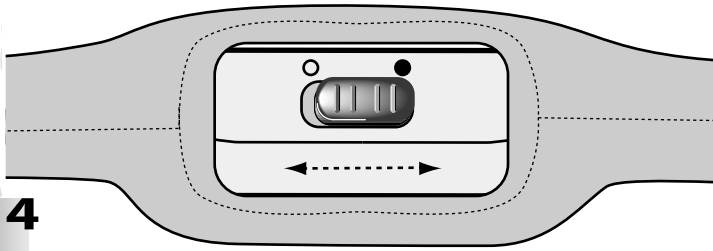


## Calming Vibrations

- Make sure your child is properly secured in the seat.
- To turn vibrations on, slide the power switch on the soothing unit to the on position ●.
- To turn vibrations off, slide the power switch on the soothing unit to the off position ○.

**IMPORTANT!** If vibrations from the soothing unit become faint, or if there are no vibrations, remove the battery from the soothing unit and dispose of it properly. Replace the battery with a new "D" (LR20) **alkaline** battery.


# Set-up & Use

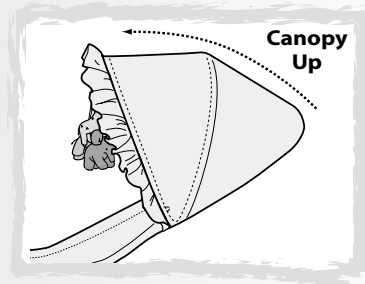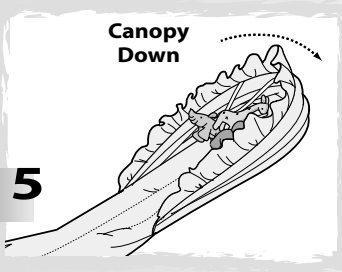

## Canopy Adjustment

The canopy can be adjusted up or down.


# Storing the Blanket

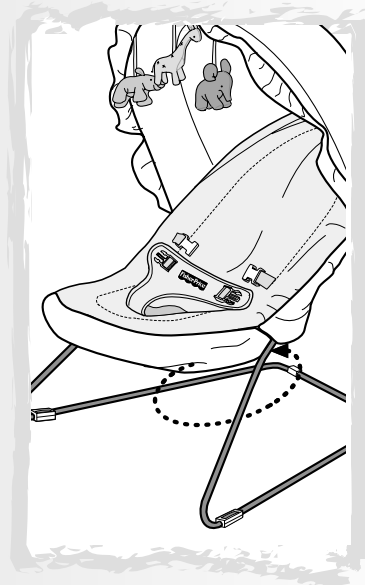

- Pull the blanket down completely.
- Fold the blanket under the footrest wire.
- Tuck the blanket into the pocket on the underside of the pad.

# Care

The pad with canopy and toys is machine washable. Wash it separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the soothing unit.

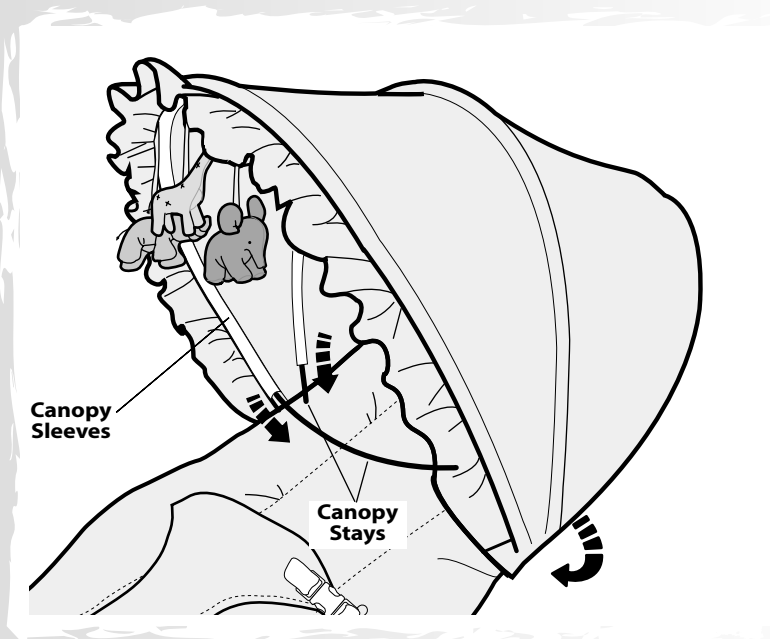

## To remove the pad:

- Remove both canopy stays from the canopy sleeves.
- Lift the footrest wire and remove the pad lower pocket.
- Slide the pad upper pocket off of the seat back wire.

## To re-assemble the pad:

- Replace the canopy stays into the canopy sleeves.
- Refer to Assembly step 5.

# FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM – 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500303.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2001 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

79632pr-0920