

**Fisher-Price®**

# Infant to Toddler High Chair



Product features and decorations may vary from the photo above.

**Model Numbers: 79666, B2109, B2110, B2111**

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tools needed for assembly: Phillips Screwdriver (not included).

Discover what's possible™...[www.fisher-price.com](http://www.fisher-price.com)

## Warning



### WARNING

#### **Prevent serious injury or death from falls or sliding out.**

- The child should be secured in the high chair at all times by the restraining system, either in the recline, semi-recline or upright position. The restraint belts must be adjusted to fit your child snugly. The tray is not designed to hold the child in the chair.
- Always keep child in view while in the high chair.
- Never leave child unattended.
- It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.

## Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts. Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:  
Fisher-Price®  
Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

For other countries, outside the United States:


**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

# Parts

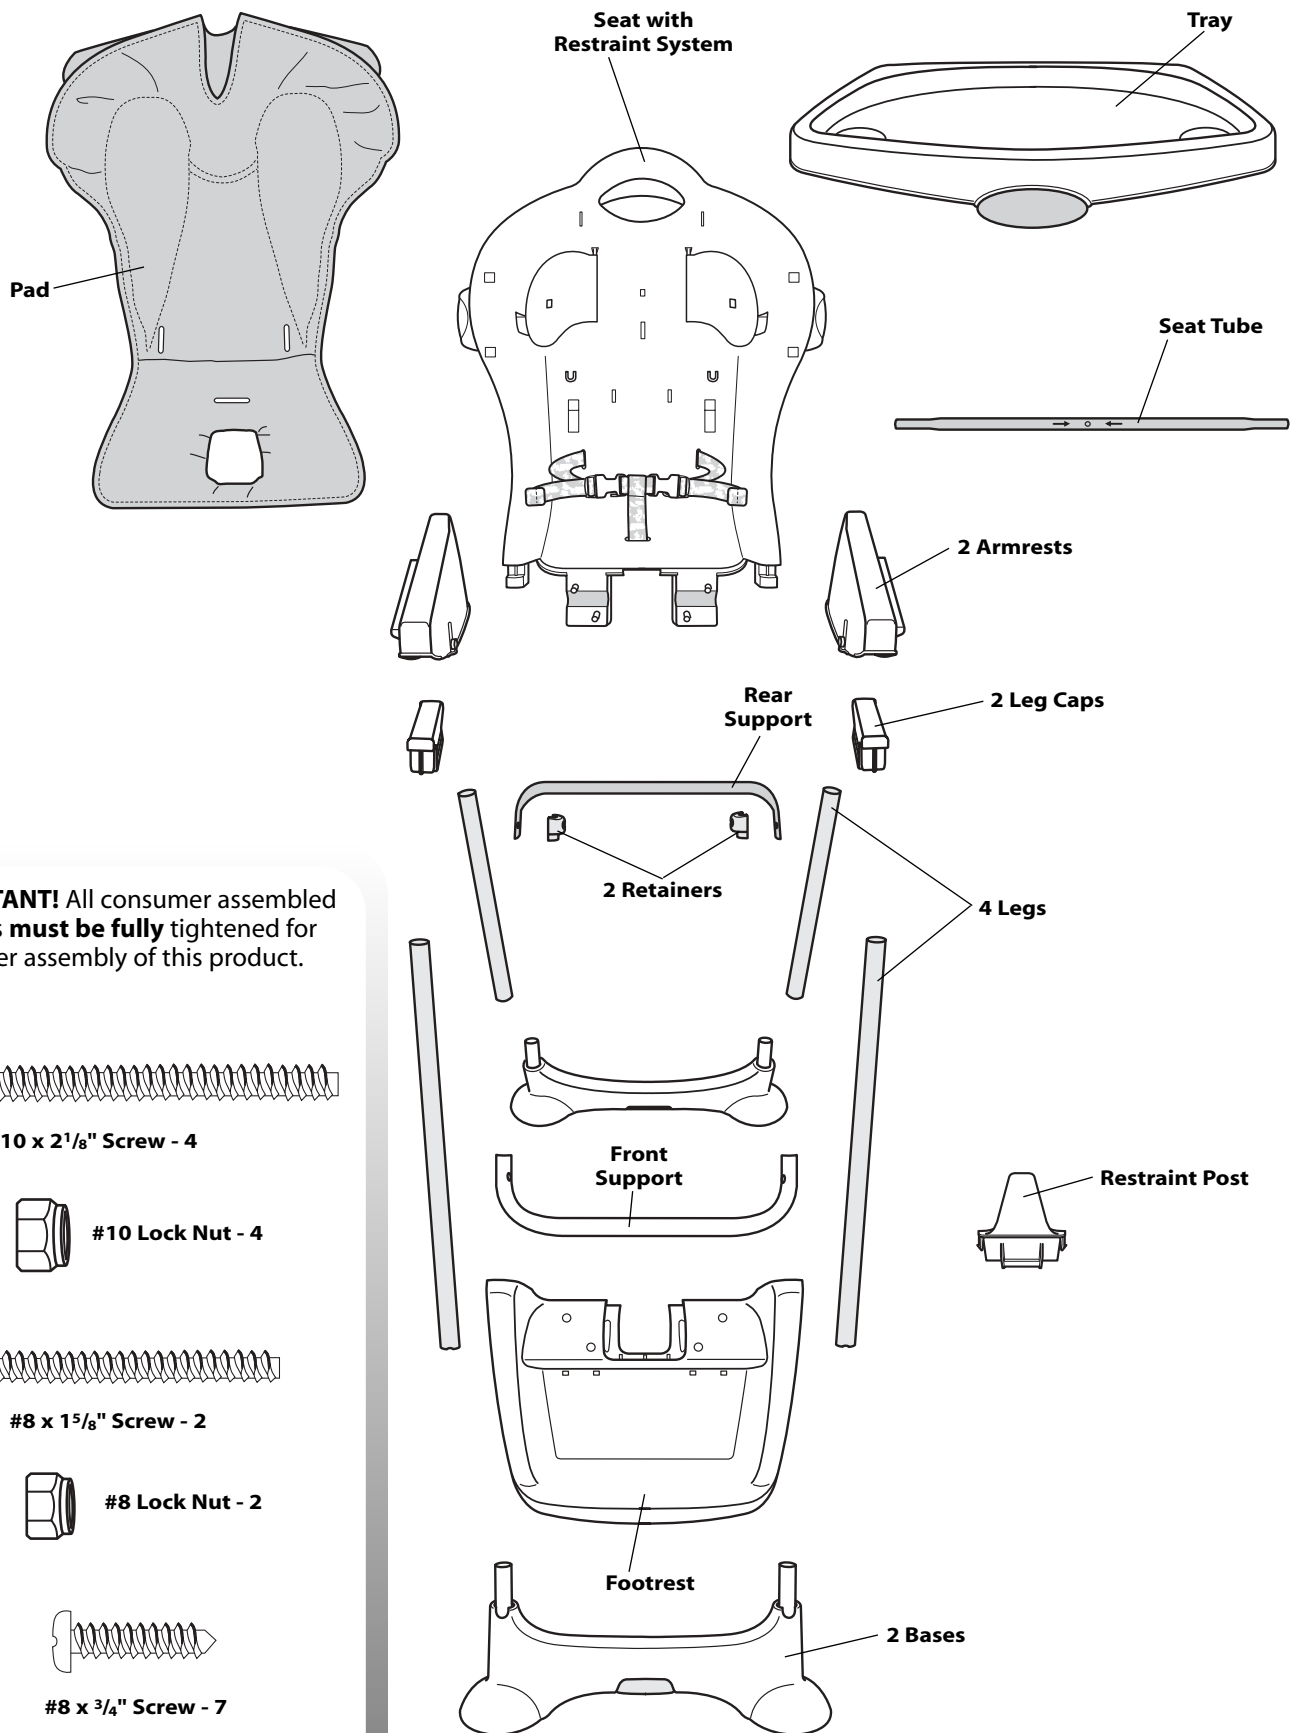


ALL SHOWN ACTUAL SIZE

# Assembly

## CAUTION


This product contains small parts in its unassembled state. Adult assembly is required.

**IMPORTANT!** Before each use or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

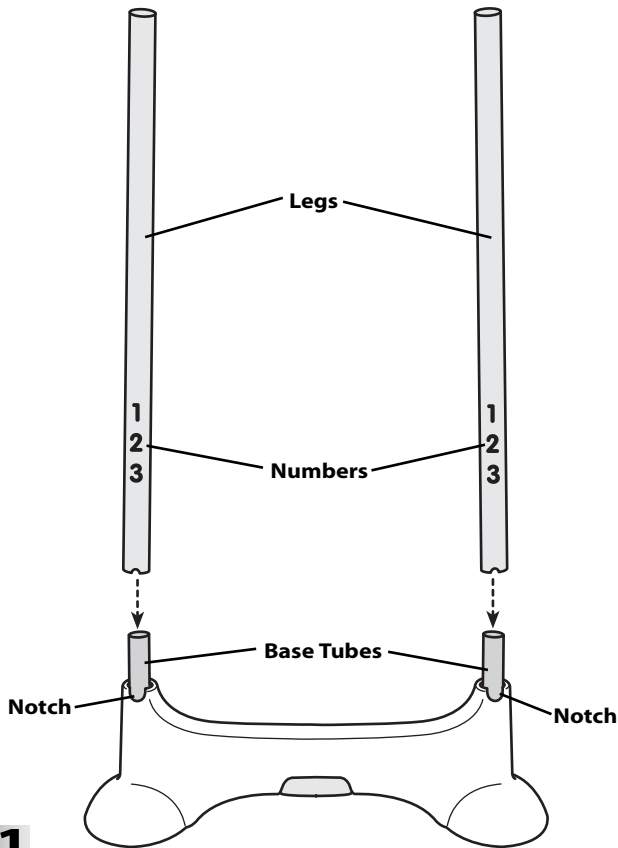


- Position a base so that the notches face you.
- Position two legs so that the numbers face you.
- Fit a leg onto each base tube.
- Twist and push each leg until it **"snaps"** into each base tube.
- Repeat this procedure to assemble the remaining two legs to the other base.

2

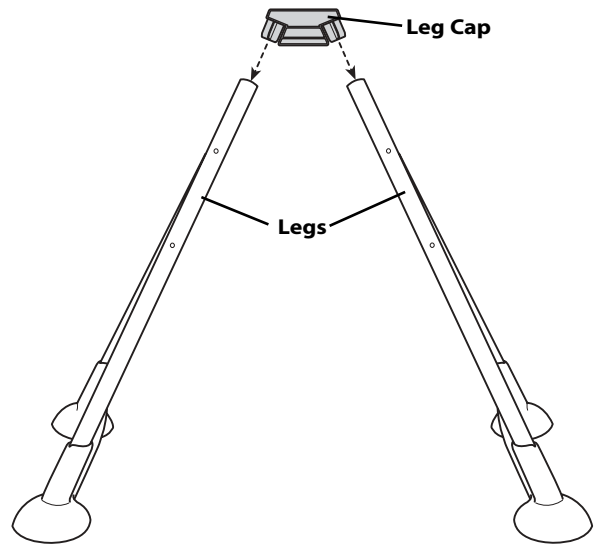


- Fit a leg cap into the openings of two legs, as shown.
- Push down on the leg cap to be sure it is secure, **and there is no gap between the top of the legs and the leg cap.**
- Repeat this procedure to attach the other leg cap to the other two legs.

3

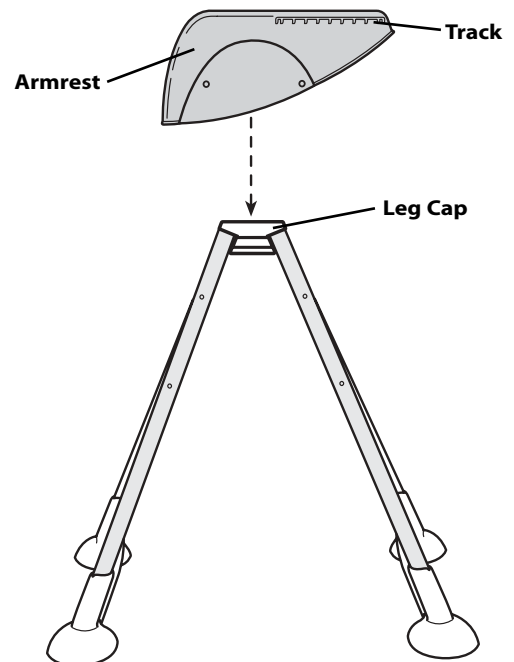

- Position an armrest so that the track is facing out.
- Fit the armrest onto a leg cap, as shown.
- Repeat this procedure to attach the other armrest to the other leg cap.


# Assembly

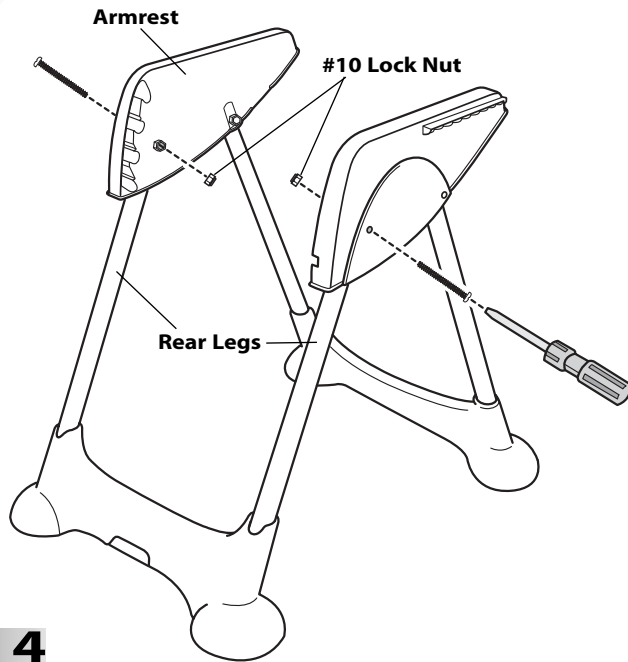

4




#10 x 2 1/8" Screw - 2

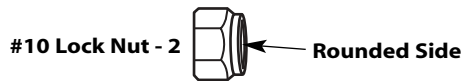


#10 Lock Nut - 2

Shown Actual Size

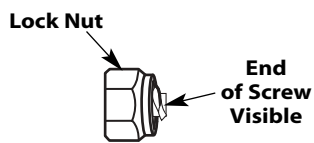

Shown Actual Size


- Insert a #10 x 2 1/8" screw through the outside of an armrest, a rear leg and then out through the inside of the armrest.
- Fit a #10 lock nut into the hexagonal opening on the inside of the armrest. **Make sure the rounded side is facing out.**
- **Fully tighten the screw** with a Phillips screwdriver. When properly tightened, the end of the screw will be visible, as shown above.
- Repeat this procedure to secure the other armrest with a #10 x 2 1/8" screw and a #10 lock nut.

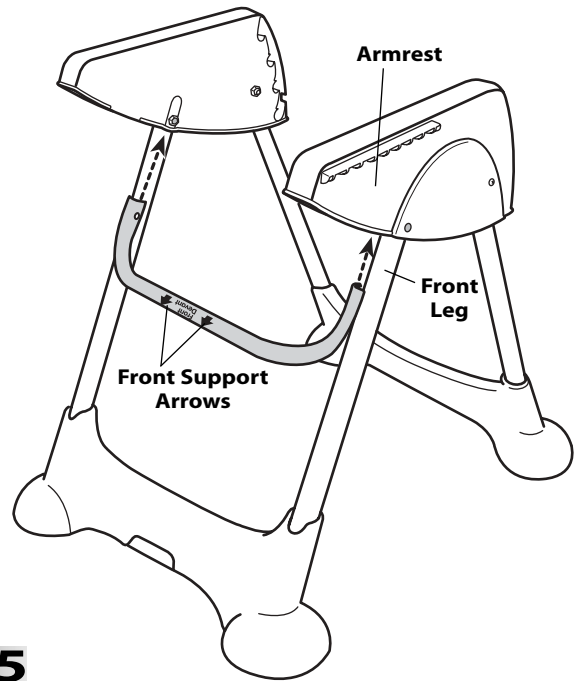


5

- Turn the leg assembly, as shown, so that the armrests point toward you.
- Position the front support so that the arrows are **pointing toward you**.
- Fit the ends of the front support up between the inside of the armrests and the front legs.

# Assembly

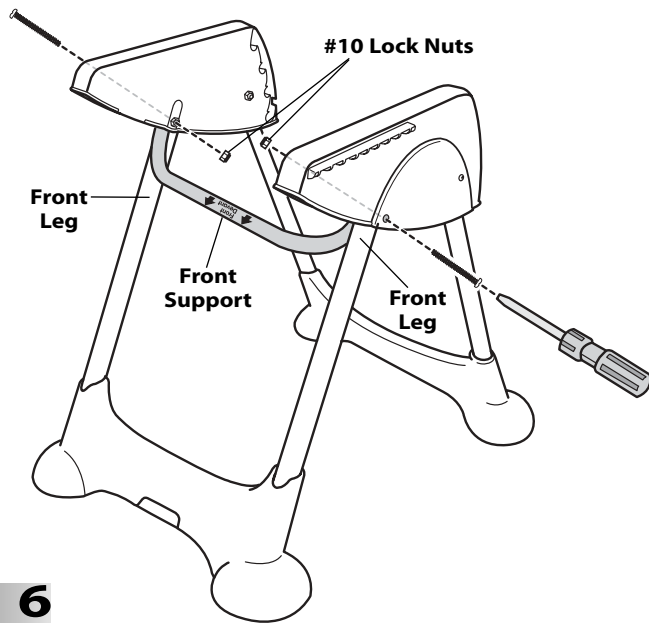


#10 x 2 1/8" Screw - 2

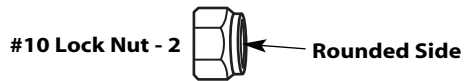


#10 Lock Nut - 2

Shown Actual Size


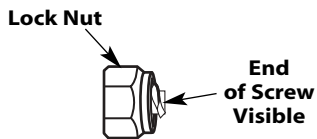


Shown Actual Size

- While holding the front support in place, insert #10 x 2 1/8" screw through the outside of an armrest, front leg, front support and then out through the inside of the armrest.
- Fit a #10 lock nut into the hexagonal opening on the inside of the armrest. **Make sure the rounded side is facing out.**
- **Fully tighten the screw** with a Phillips screwdriver. When properly tightened, the end of the screw will be visible, as shown above.
- Repeat this procedure to fasten the front support to the other armrest with a #10 x 2 1/8" screw and #10 lock nut.

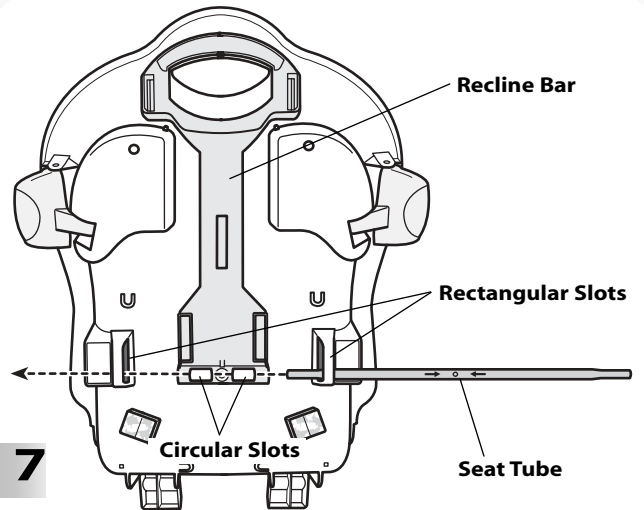


- Position the seat face down on a flat surface.
- Insert the seat tube through the a rectangular slot, the two circular slots in the recline bar and then out through the other rectangular slot.

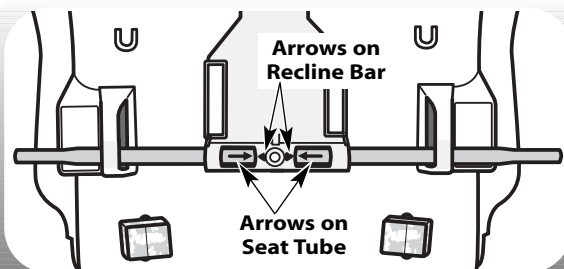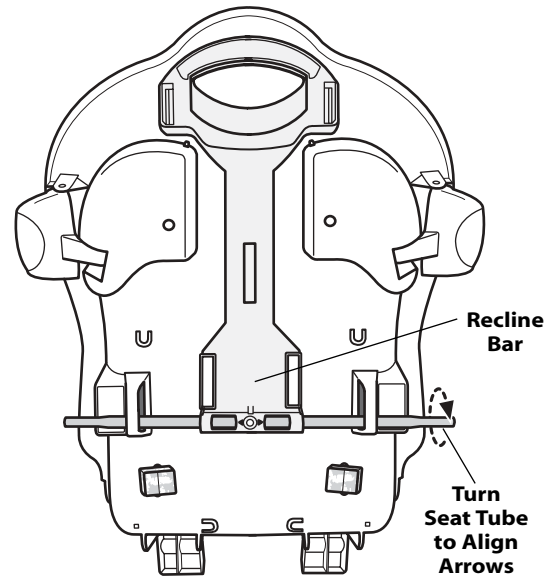


- Align the arrows on the seat tube with the arrows on the recline bar.

# Assembly

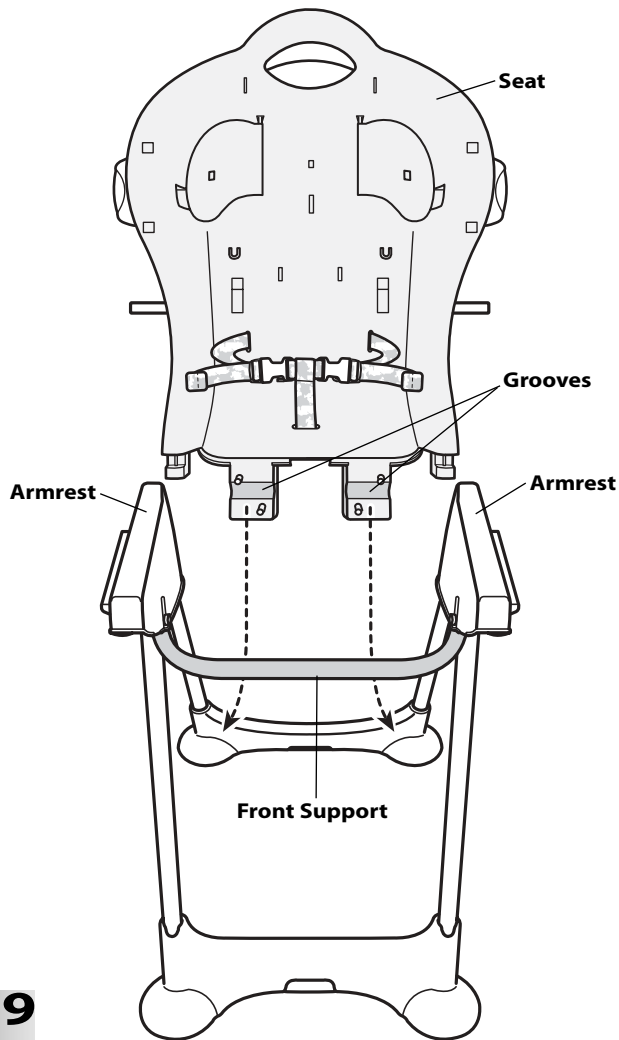

- At an angle, fit the seat between the armrests.
- Now, fit the grooves in the seat tabs to the front support.

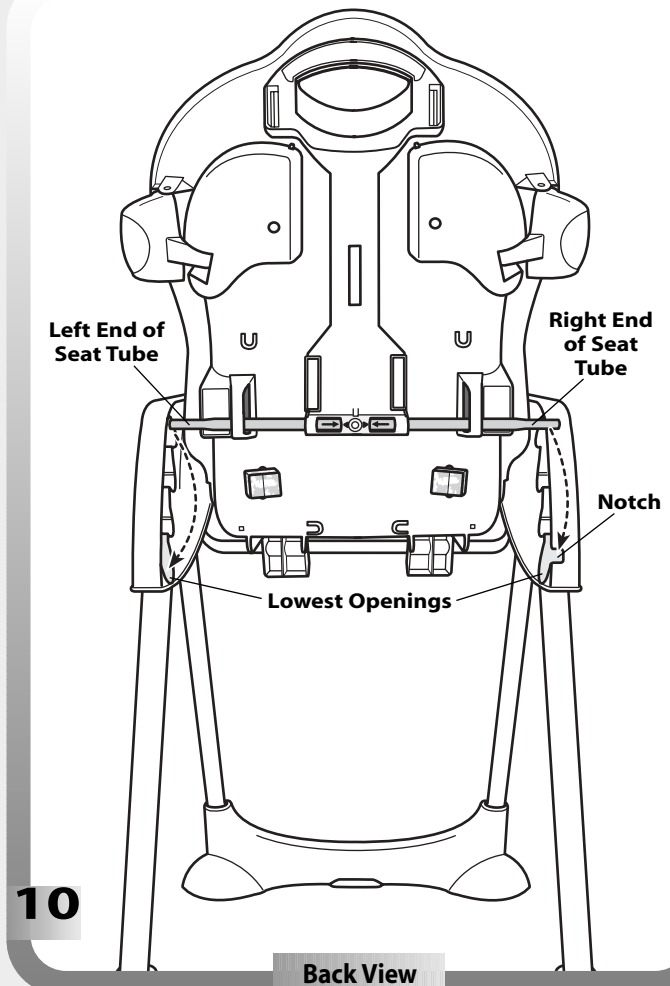


- Face the back of the seat assembly.
- First, fit the **left** end of the seat tube into the **lowest opening** in the left armrest.
- Then, fit the **right** end of the seat tube through the notch in the right armrest and then into the **lowest opening** in the armrest.


# Assembly



#8 x 3/4" Screw  
Shown Actual Size

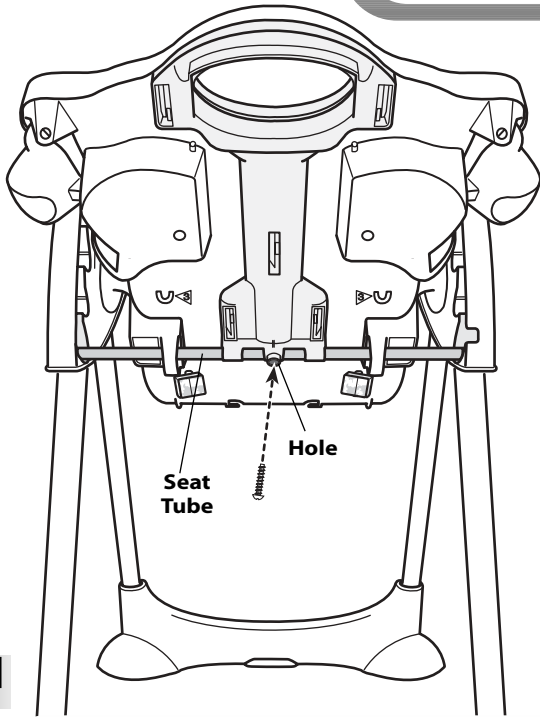

11

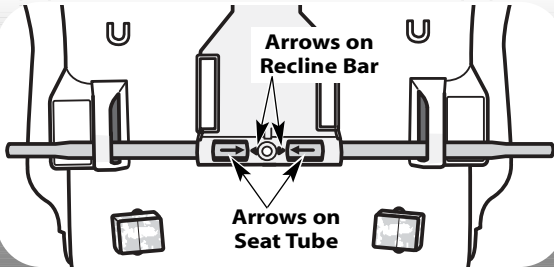


- Align the arrows on the seat tube with the arrows on the recline bar.
- Insert a #8 x 3/4" screw through the hole in the recline bar and into the seat tube. **Fully tighten the screw** with a Phillips screwdriver.




12

- Squeeze the seat recline and push the seat back forward to the most upright position.

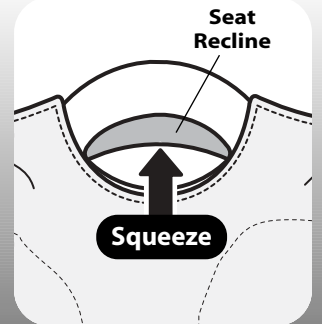


# Assembly

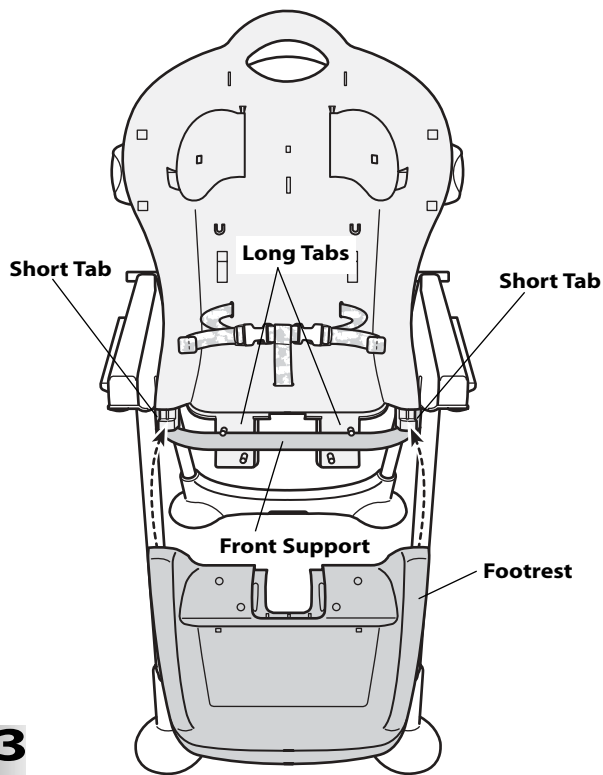

13

- Fit the footrest over the front support and onto the long and short tabs on the seat.

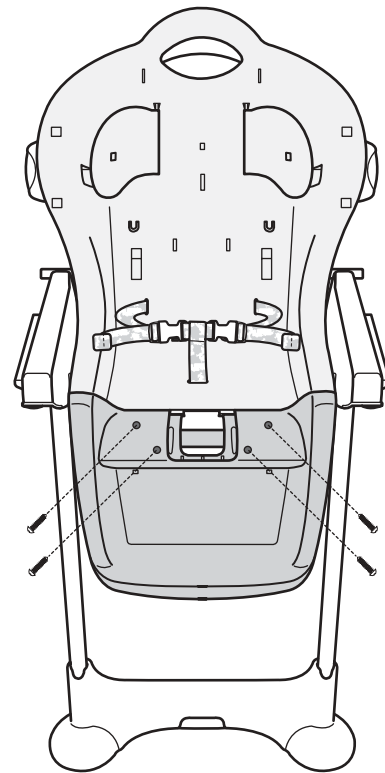


14

- Insert four #8 x  $\frac{3}{4}$ " screws through the footrest and into the seat tabs.
- **Fully tighten the screws** with a Phillips screwdriver.



#8 x  $\frac{3}{4}$ " Screw - 4  
Shown Actual Size

# Assembly

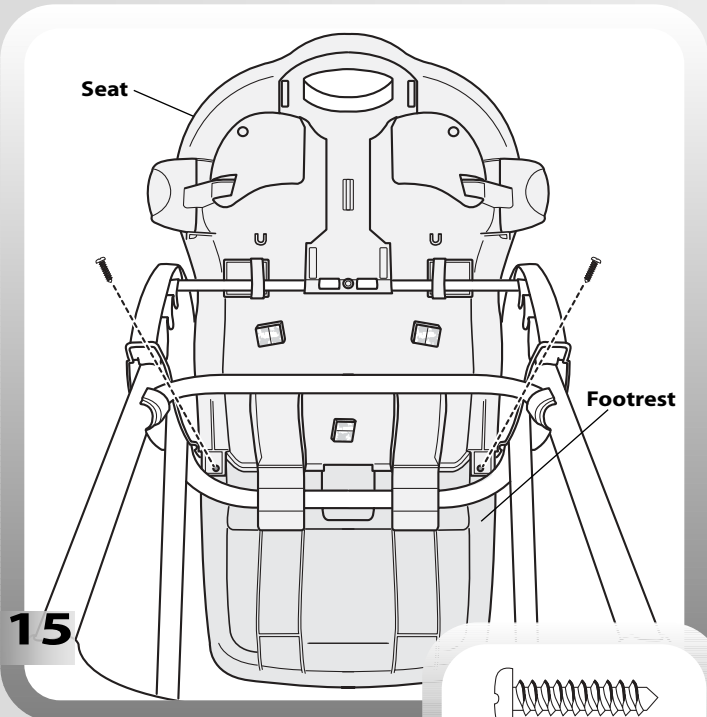


15

- Position the assembly face down.
- Insert a #8 x 3/4" screw through each end of the seat and into the footrest.
- **Fully tighten the screws** with a Phillips screwdriver.




#8 x 3/4" Screw - 2  
Shown Actual Size

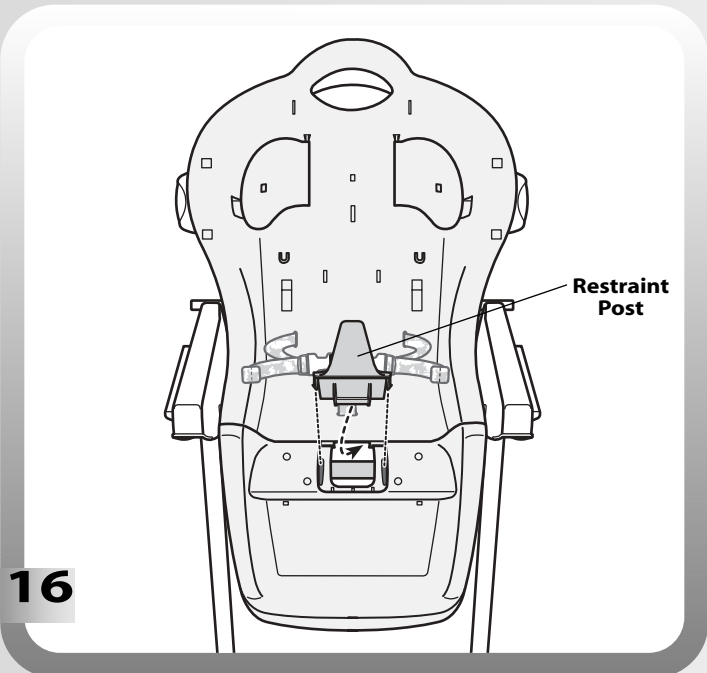

16

- Position the assembly upright.
- At an angle, insert the large tab on the restraint post into the slot between the seat and the footrest.
- Then, push to **"snap"** the restraint post into the large opening in the footrest.

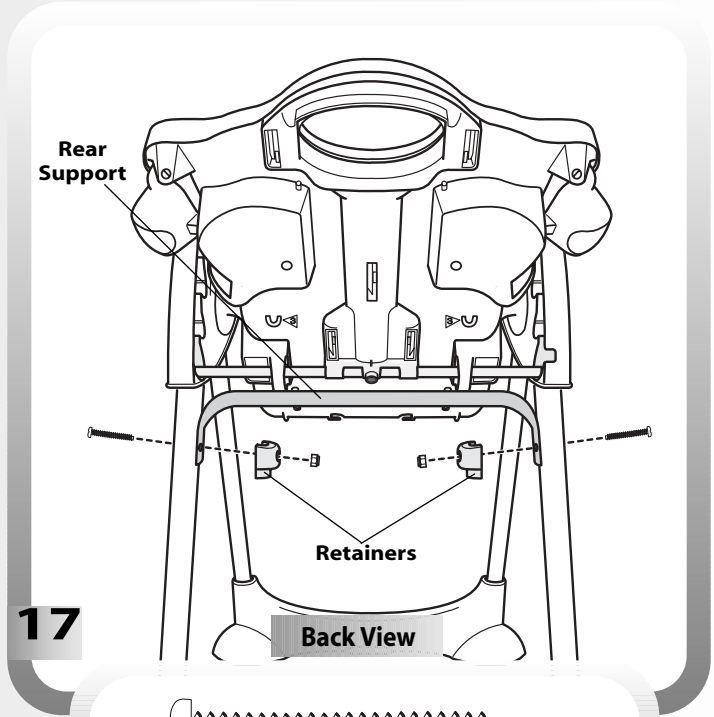


17

Back View




#8 x 1 5/8" Screw - 2

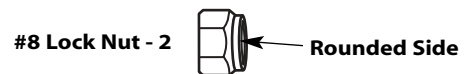

#8 Lock Nut - 2

Rounded Side

Shown Actual Size

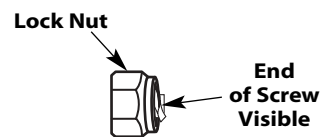


Lock Nut

End of Screw Visible


Shown Actual Size

- Face the back of the assembly.
- Position the rear support so that it bends upright.
- Align the screw holes in the rear support with the screw holes in the rear legs.
- Now, place a retainer over each end of the rear support.
- Insert a #8 x 1 5/8" screw through the outside of each rear leg, the rear support and into the retainer.
- Fit a #8 lock nut into the hexagonal opening in the retainers. Make sure the rounded side is facing out.
- **Fully tighten the screws** with a Phillips screwdriver. When properly tightened, the end of the screw will be visible, as shown above.


# Assembly

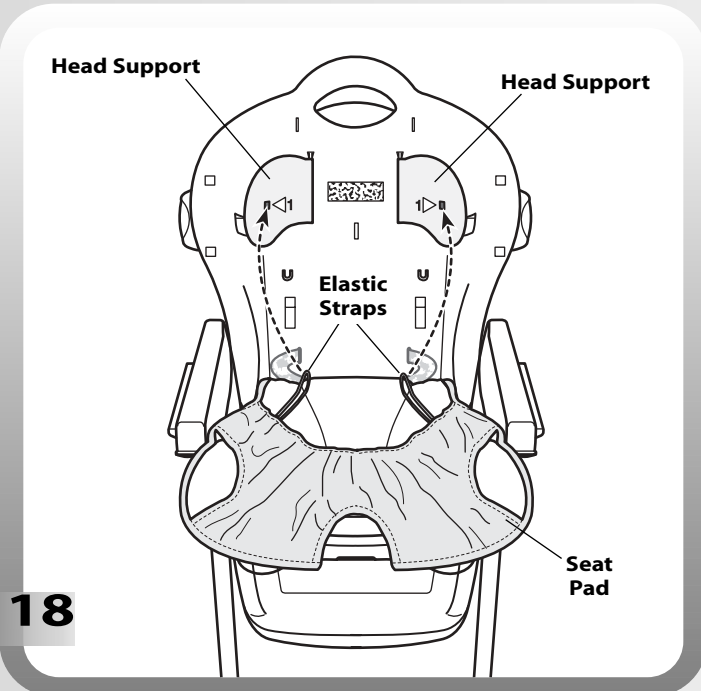


- Place the pad onto the seat
- Insert the two top elastic straps through the slots labeled 1 in the head supports.

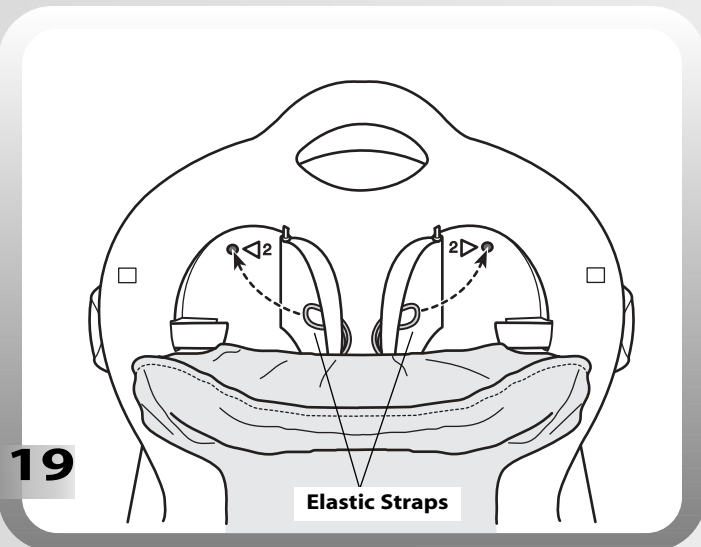

- Lift the head supports to locate the large hole in the seat back labeled 2.
- Insert the elastic straps through the large holes labeled 2.

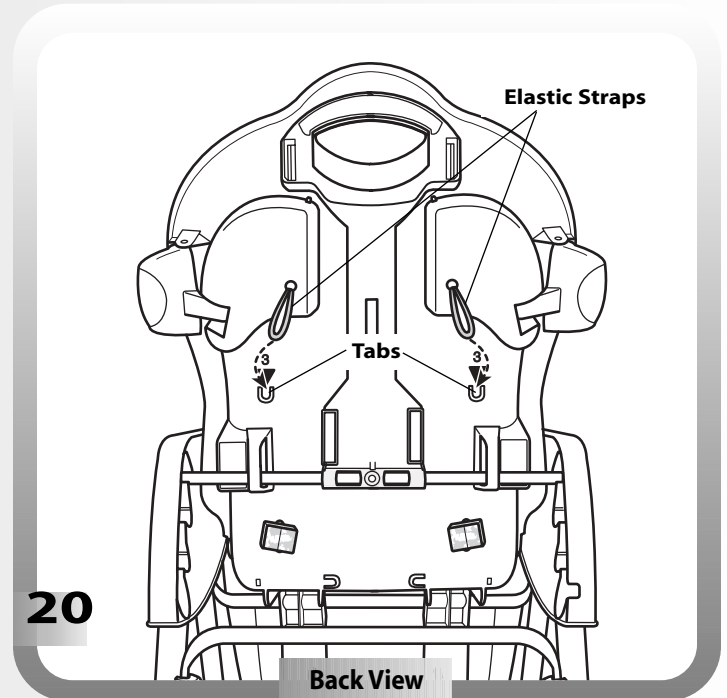


- From behind the seat, hook the elastic straps over the tabs labeled 3.

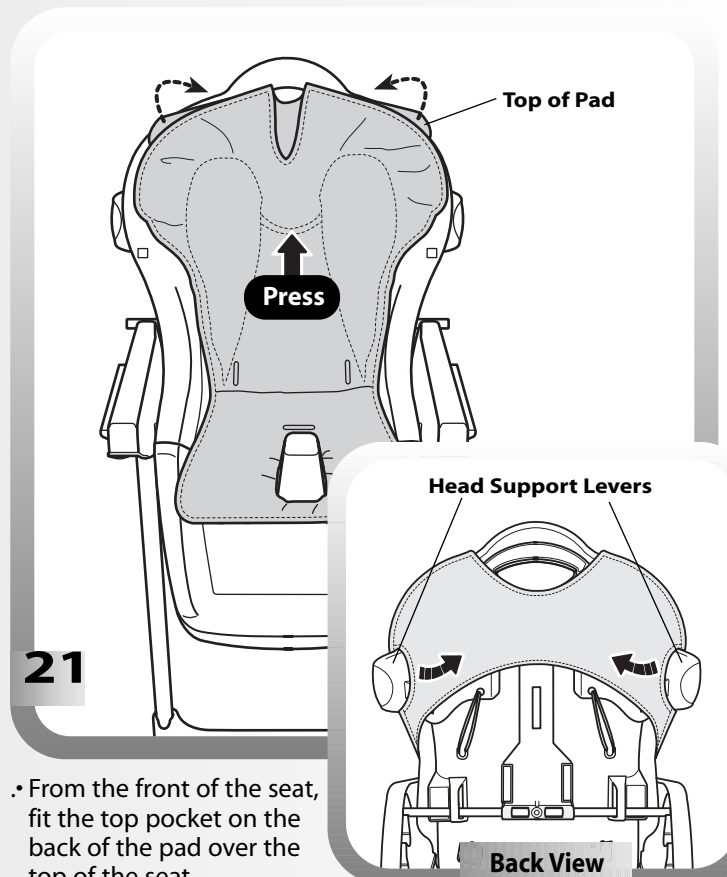


- From the front of the seat, fit the top pocket on the back of the pad over the top of the seat.
- From the back of the seat, fit the top edges of the pad around the head support levers.
- Press the center of the pad to fasten it to the seat.


# Assembly

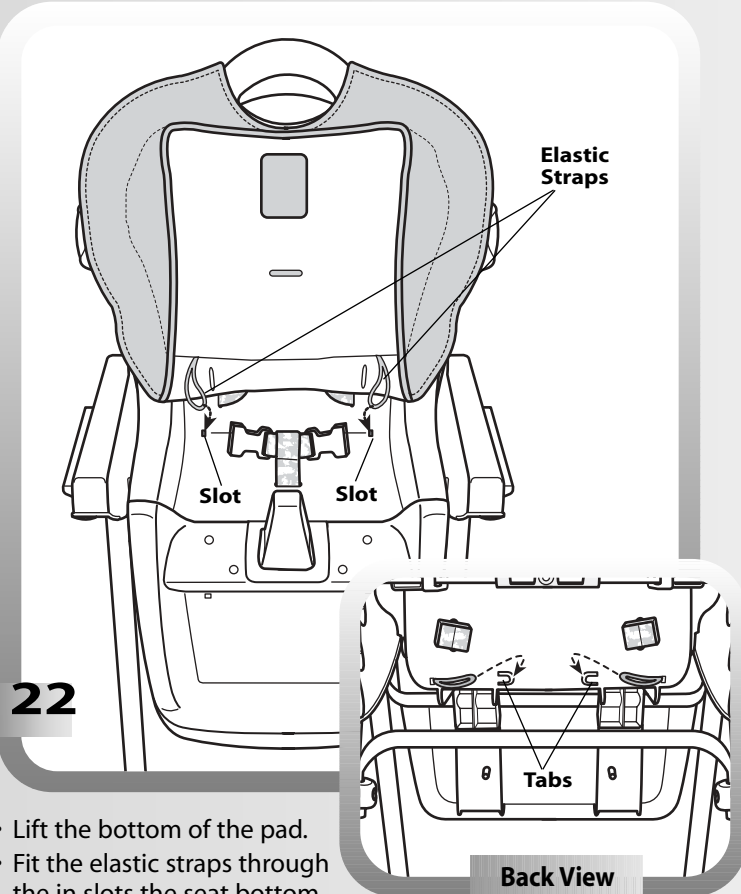


- Lift the bottom of the pad.
- Fit the elastic straps through the in slots the seat bottom.
- From the back of the seat, fit the elastic straps onto the tabs, as shown.

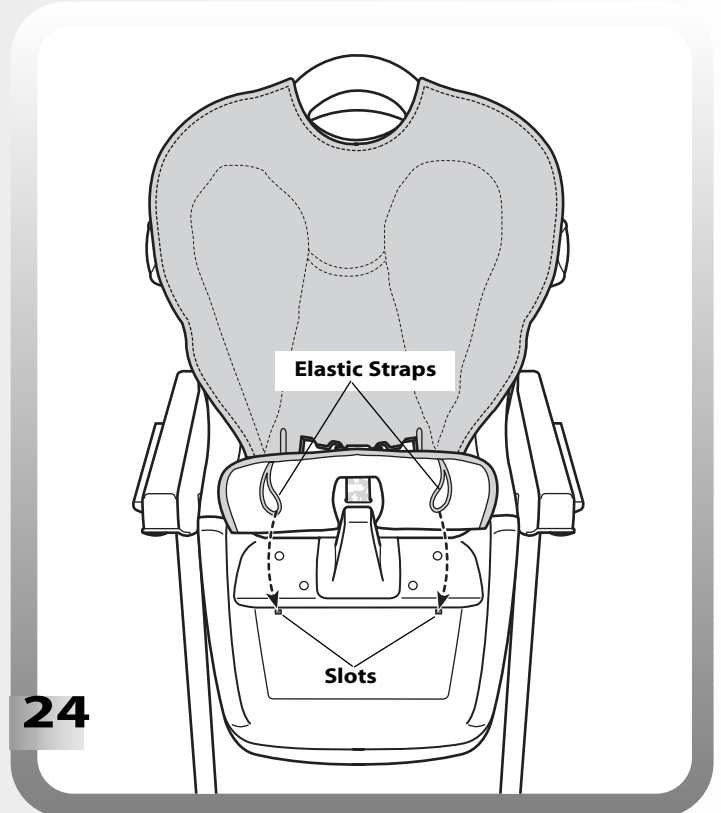

- Fit the elastic straps on the edge of the pad through the slots in the footrest.

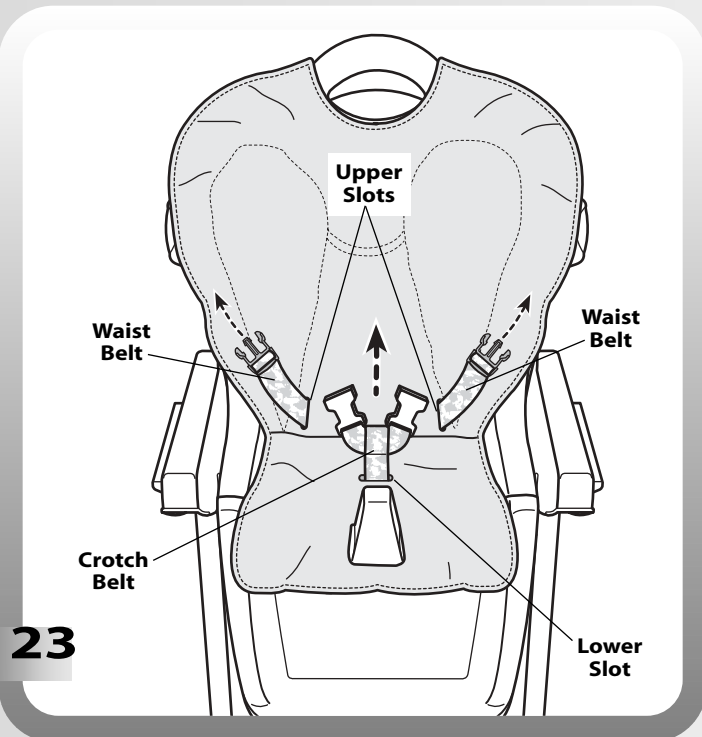

- Fit the waist belts through the two upper slots in the pad.
- Fit the crotch belt through the lower slot in the pad.

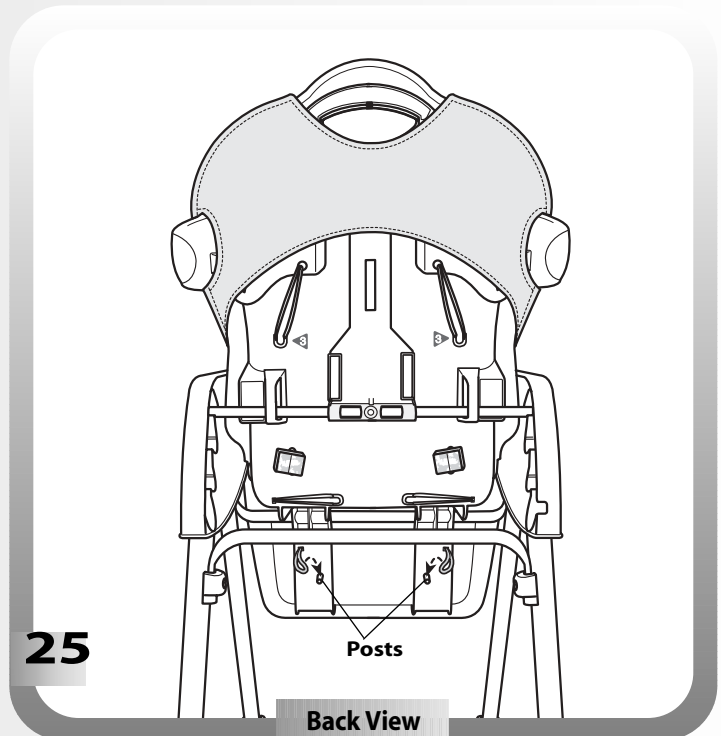

- From behind the seat, hook the elastic straps onto the posts, as shown.

# Securing Your Child


**IMPORTANT!** Before each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.




## WARNING

### Prevent serious injury or death from falls or sliding out.

The child should be secured in the high chair at all times by the restraining system. The restraint belts must be adjusted to fit your child snugly. The tray is not designed to hold the child in the chair.

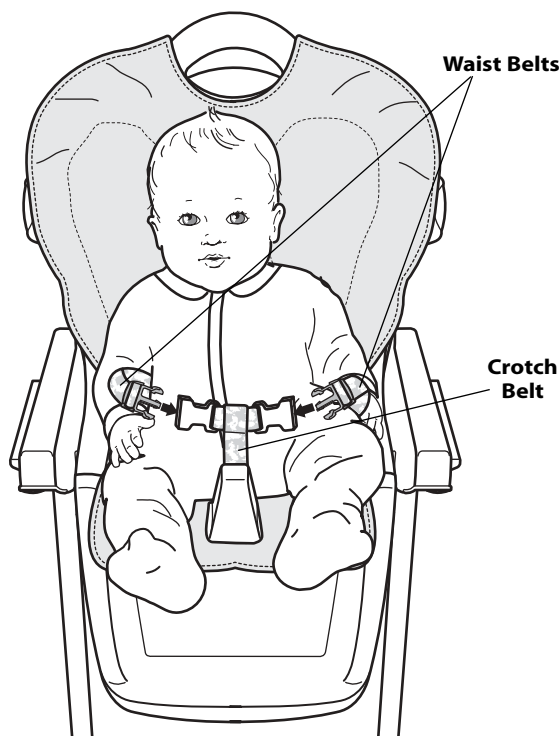


- Place your child in the seat. Position the crotch belt between your child's legs.
- Fasten both waist belts to each side of the crotch belt. Make sure you hear a **"click"** on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

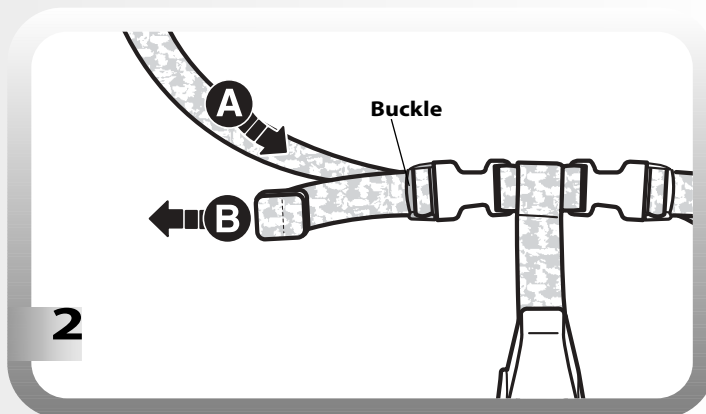

#### To tighten the waist belts:

- Feed the anchored end of the waist belt up through the buckle to form a loop **A**.
- Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.

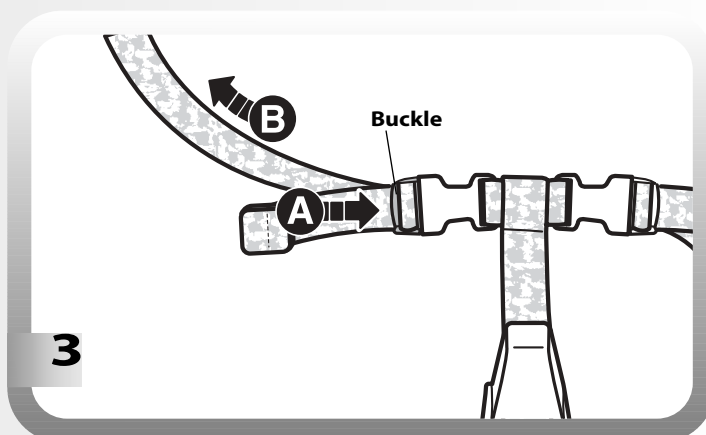

#### To loosen the waist belts:

- Feed the free end of the waist belt up through the buckle to form a loop **A**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.


# Using the Tray



## WARNING

**Prevent serious injury or death from falls or sliding out.**

The child should be secured in the high chair at all times by the restraining system. The restraint belts must be adjusted to fit your child snugly. The tray is not designed to hold the child in the chair.

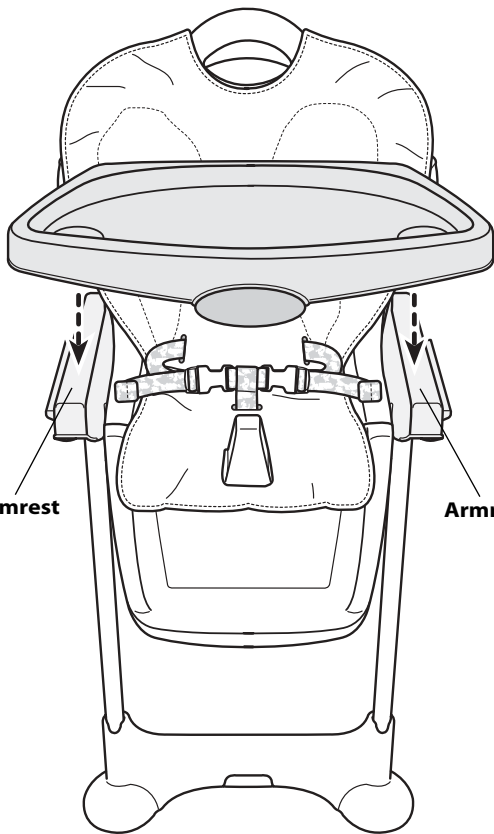


Armrest

Armrest

1

- Fit the tray onto the armrests, as shown. Push down until the tray “snaps” into place.
- Test to be sure the tray is secure on the armrests. Push the tray back and forth. It should not move.

**Hint:** Before use, thoroughly wash the tray.

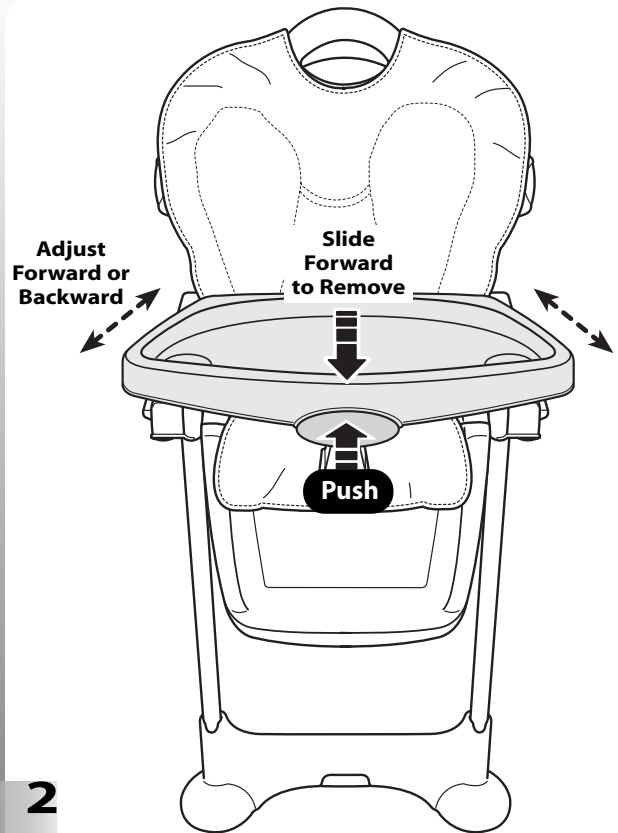

2

- While pushing the button on the front of the tray, adjust the tray forward or backward. Make sure it locks into position.
- To remove the tray, push the button on the front of the tray and slide it forward and off the armrests.

## Adjusting the Seat Height




### WARNING

**Prevent serious injury or death from falls or sliding out.**

It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.

**Hint:** Adjust the seat height to any of three positions 1, 2 or 3.

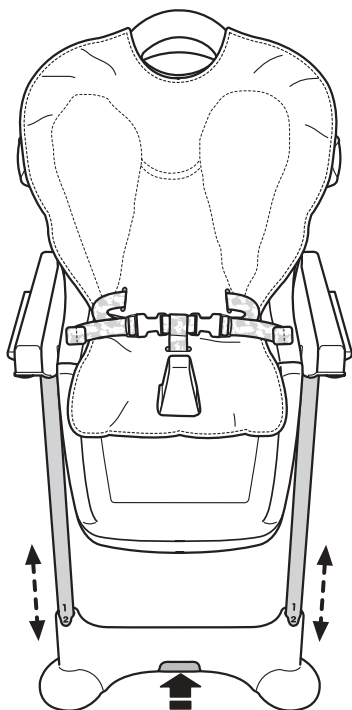

**Push  
Height Lever**

Notch

Height  
Position  
Number

1  
2


#### To adjust the seat height:

- Press the height lever on the front base and lift or lower the seat to the desired height.
- Make sure **both front legs** are adjusted to the same height.
- Press the height lever on the rear base and lift or lower the seat to the same height as the front legs.
- Make sure **both rear legs** are adjusted to the same height.
- Push the seat bottom to be sure all four legs are locked in place.

**IMPORTANT!** Make sure the number that shows in each notch in the front and back bases are the **same for all four legs**.

## Adjusting the Seat Angle

**Hint:** Adjust the seat angle in any of four positions: Upright, Semi-Upright, Semi-Recline or Recline.

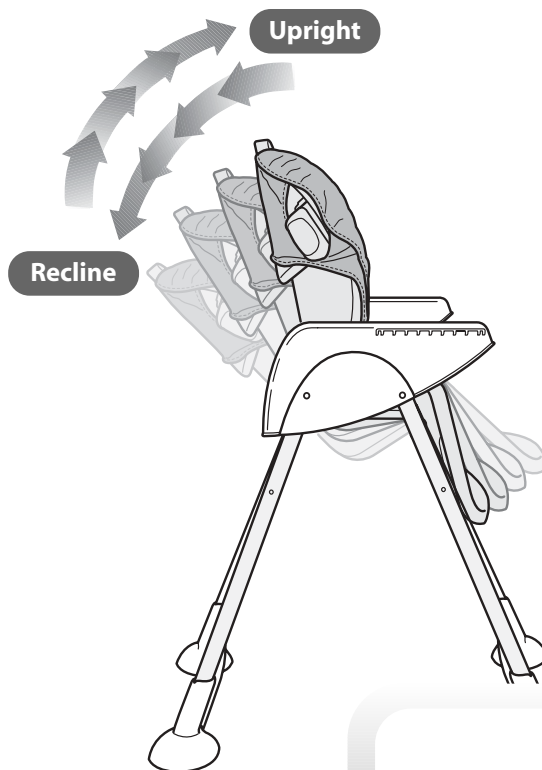

**Recline**

**Upright**

Seat  
Recline


**Squeeze**

#### To adjust the seat angle:


- Squeeze the seat recline and push the seat back forward or pull it backwards to the desired position.
- Push the seat back to be sure it is latched in position.

**IMPORTANT!** When the seat is in the recline positions, be sure the tray is secure on the armrests. Push the tray back and forth. It should not move.

## Using the Head Supports

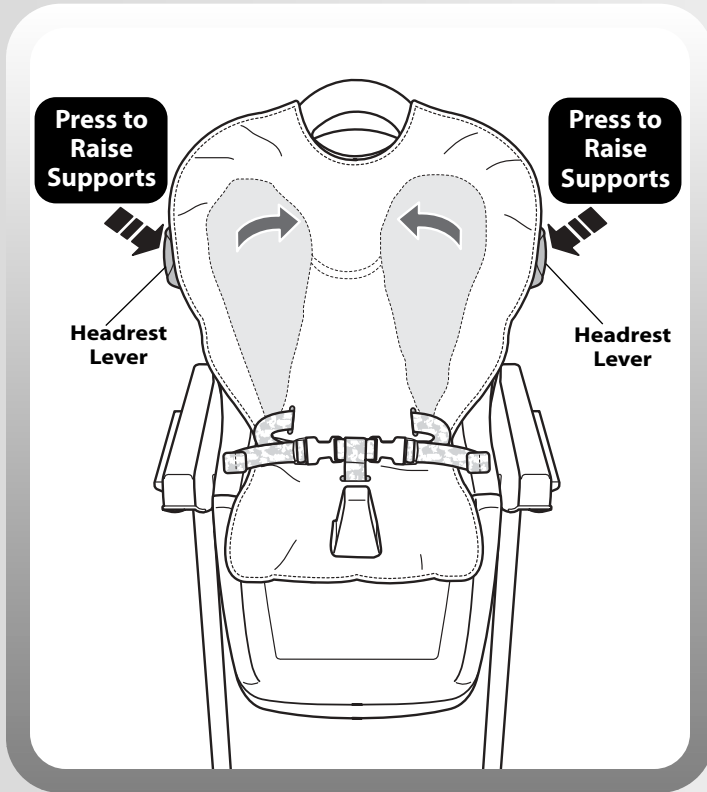

- Press the head support levers to raise supports.

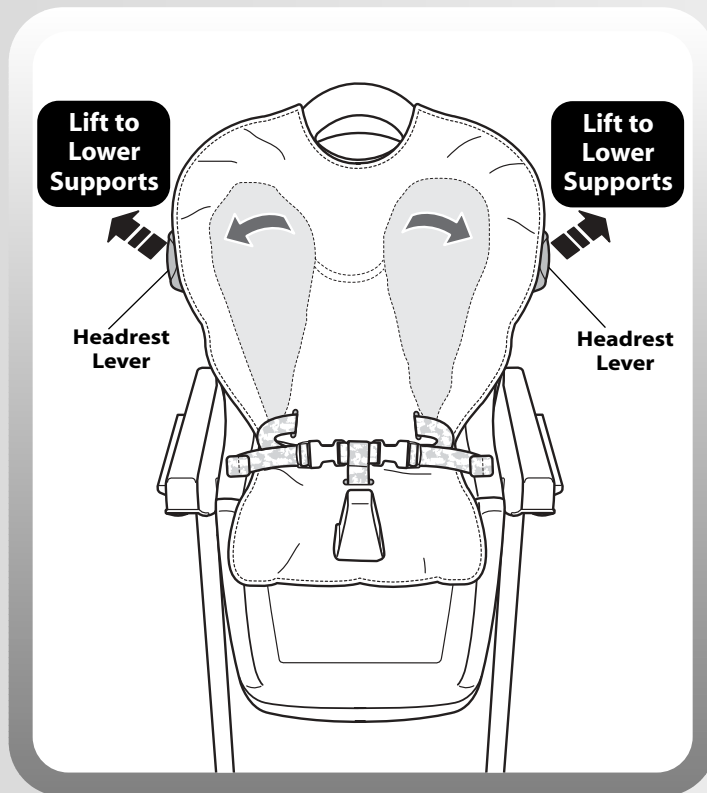

- Lift the head support levers to lower supports.

## Care

- The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The frame and tray may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the tray.

### To remove the pad:

- Remove the six elastic loops from the pegs on the back of the seat and underside of the footrest.
- Remove the pad upper pocket from the seat back.
- Feed the waist straps through the slots in the pad and the seat.
- Feed the waist straps through the slot in the pad and the seat.
- Remove the pad from the seat.

To replace the pad, refer to Assembly steps 18-25.

**IMPORTANT!** Never use this product without the restraint system.