



Magical Friends!™ Singing Dora

INSTRUCTION SHEET

 
 
Please keep these instructions for future reference as they contain important information.

BEFORE YOU BEGIN

- Please remove and discard the "Try Me" pull-tab from the bottom of the toy and the star cover from Dora's right hand.

TO BEGIN PLAY

- Be sure the ON/OFF switch is in the ON position.
- The ON/OFF switch is located on the bottom of the toy.


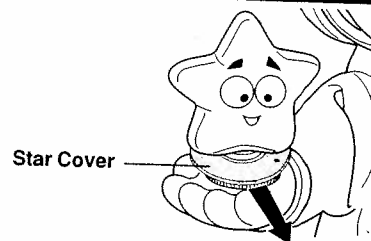
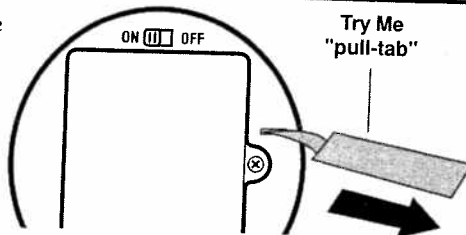


HOW TO PLAY

- Squeeze Dora's left hand to begin play.
- Dora will ask you to find a specific friend and place it in her hand.
- Place the friend in Dora's right hand as shown.
- When the friend is placed in Dora's right hand she will recognize whom it is that she is holding. She will say phrases in English and Spanish, and sing her "Happy Song."
- If you place the incorrect friend in Dora's hand she will correct you and repeat the question.



Each friend has its own motion:

   - Star twirls around and lights up.
- Baby Bird rocks from side to side.
- Butterfly spins around
- Frog jumps up and down

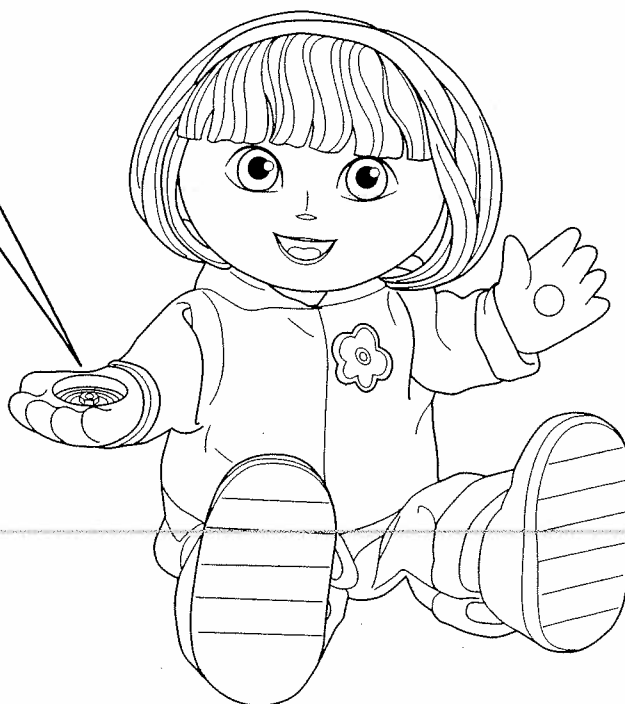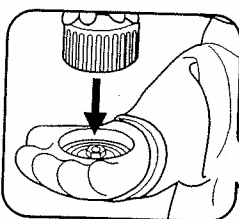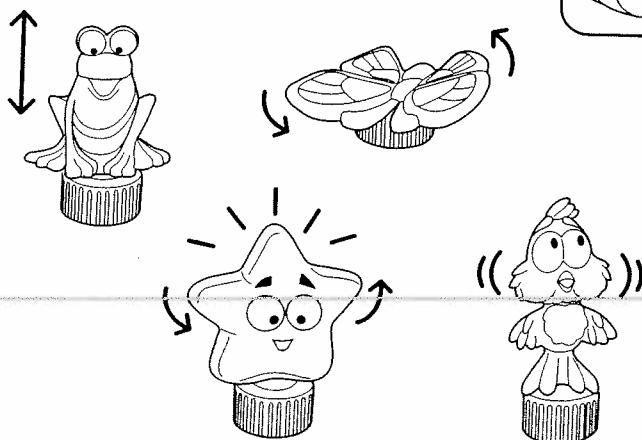

BATTERY INSTALLATION

  Unscrew and lift cover away from back of product.
Replace batteries as shown.

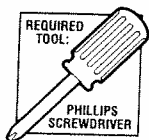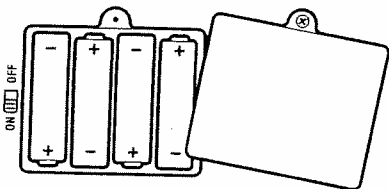

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Requires 4 "AA" (LR6) batteries.

©2002 Viacom International Inc.
All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.
PRINTED IN CHINA.
Manufactured for Fisher-Price. ©2002 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packaging and address should be retained for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.
Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Dimport & Diedarkan Oleh: Mattel SEA Ptd Ltd (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.



ITEM NO. 88513

88513-0920 G1