



**INFRA-RED REMOTE**  
**POWER EXPRESS**  
**TRAIN SET™** PLAYSET

**WARNING:**  
 CHOKING HAZARD - Small parts.  
 Not for children under 3 years.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

**ADULT ASSEMBLY REQUIRED**

**TO ENJOY ALL FEATURES AVAILABLE IN THE TRAIN SET, FOLLOW THESE GUIDELINES CLOSELY:**

- Connect the train as shown, Locomotive - Passenger Car - Vehicle Carrier.
- Set the train in the direction shown in the TRACK LAYOUTS section, following the rules carefully and you will enjoy all featured functions of this train set.
- Train requires 3 x 1.5V "C" size (LR 14) or equivalent alkaline batteries (not included).
- Remote Control requires 2 x 1.5V "AA" size (LR 6) or equivalent alkaline batteries (not included).

**NOTE:**

- Use alkaline batteries for longest life and best performance. Remember to take out all batteries from train and remote if it will not be used for a long period of time.
- Tool needed for battery installation : Phillips head screwdriver (not included).
- Not for use with some Hot Wheels® Vehicles. Includes one Hot Wheels® vehicle.


**HELPFUL HINTS:**

- Apply labels before assembly


**PLAYING TIPS:**

- Train cars have best performance on supplied tracks.
- Do not play train cars on carpet since carpet does not provide suitable traction and lint from carpet may damage cars.
- This product is not recommended for use on loose dirt or wet surfaces.
- Do not immerse in water.
- When the product does not respond, slow down, or loose range, replace the batteries.
- Works best out of direct sunlight.
- Direct the controller emitting LED at the Locomotive receiver for best performance.

**Adult note:** Turn off the power button when toy is not in use. This will prevent the batteries from draining.

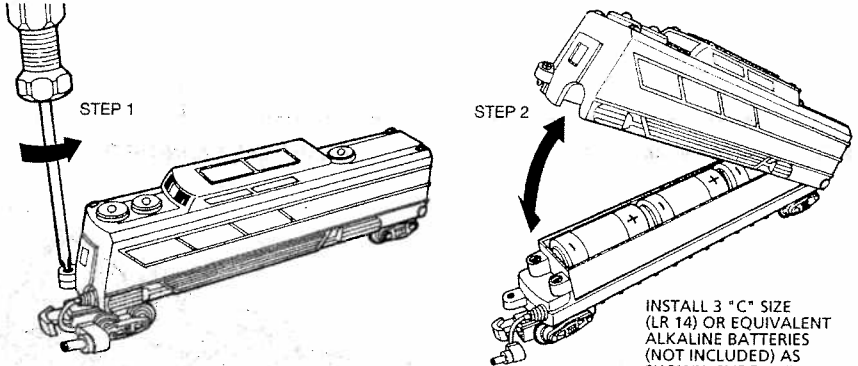



INSTALL 3 "C" SIZE (LR 14) OR EQUIVALENT ALKALINE BATTERIES (NOT INCLUDED) AS SHOWN. SLIDE IN THE NEGATIVE END OF BATTERY. DO NOT PRESS DOWN FROM TOP.

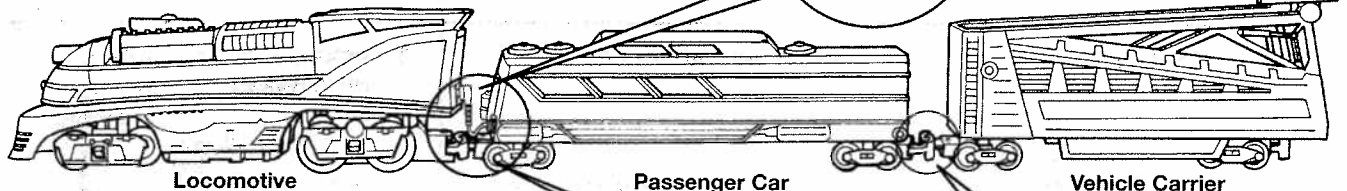

Locomotive


Passenger Car

Vehicle Carrier

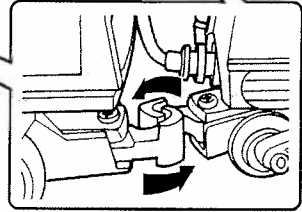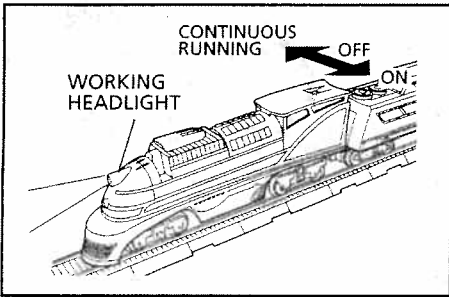


**BATTERY SAFETY INFORMATION**

1. Non-rechargeable batteries are not to be recharged.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Do not mix old and new batteries.
4. Only batteries of the same or equivalent type as recommended are to be used.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the toy.
7. The supply terminals are not to be short-circuited.
8. Dispose of batteries safely.
9. Rechargeable batteries are to be removed from the toy before being charged.
10. Rechargeable batteries are only to be charged under adult supervision.

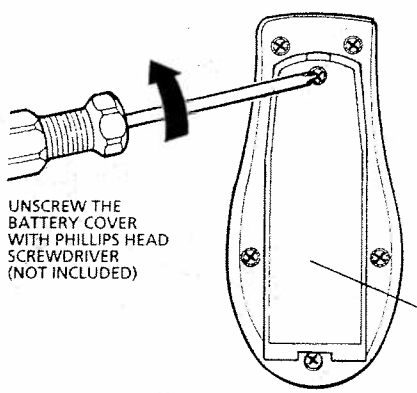

UNSCREW THE BATTERY COVER WITH PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED)

INSTALL 2 "AA" SIZE (LR 6) OR EQUIVALENT ALKALINE BATTERIES (NOT INCLUDED) AS SHOWN. SLIDE IN THE NEGATIVE END OF BATTERY. DO NOT PRESS DOWN FROM TOP.

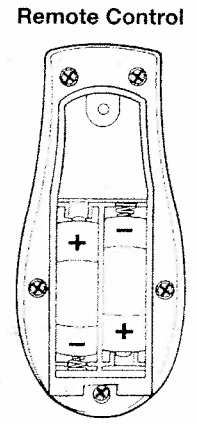

BATTERY COVER






Remote Control



# TRACK LAYOUTS

The track layouts provided below are two elementary track layouts. They are for easy assembly and quick enjoyment of this train set.



For the elementary track layouts, assemble the CRASH CURVE™ as shown in diagram 1, the GATED CROSS JUNCTION ASSEMBLY as shown in diagram 2, the LOADING STATION as shown in diagram 3 and the UNLOADING STATION as shown in diagram 4. Connect the tracks and parts as indicated in the layouts below. Enjoy!

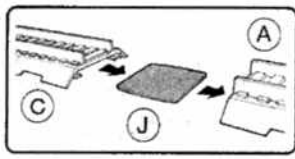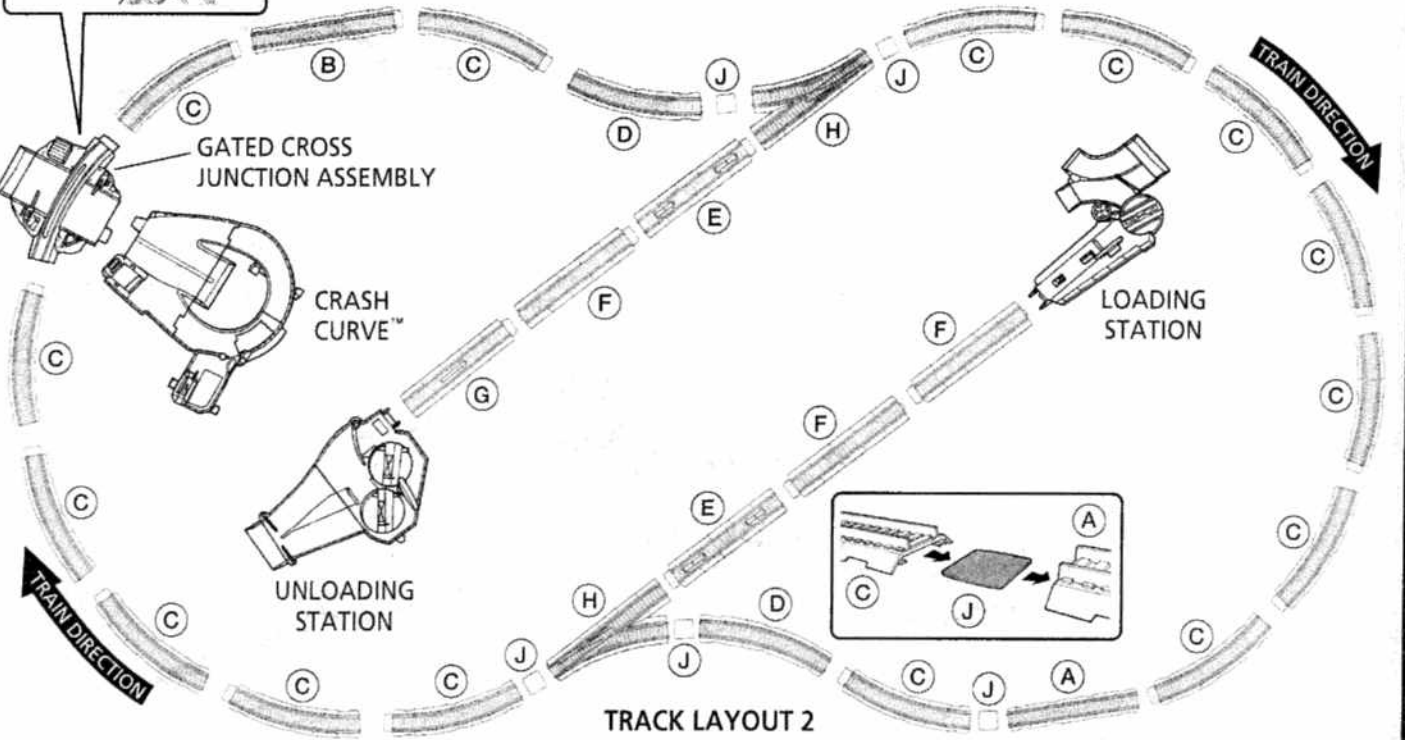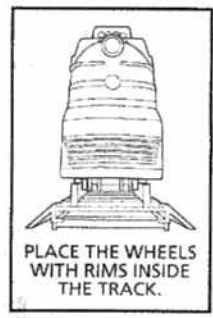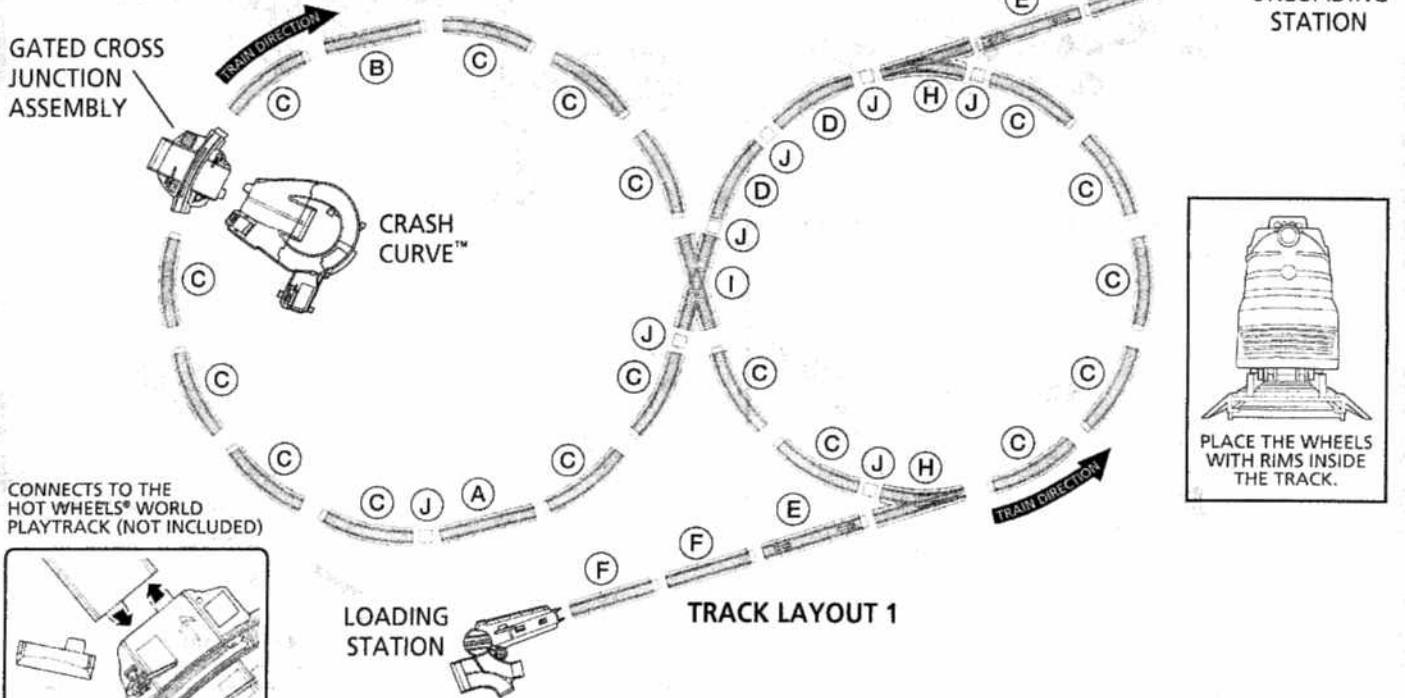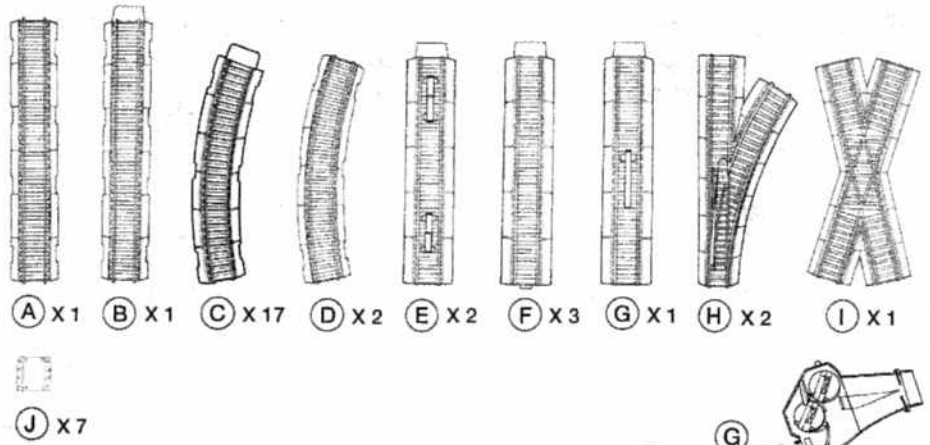


# TO ASSEMBLE

## 1 CRASH CURVE™ AND LABEL PLACEMENT


Helpful Hints:  
Apply labels  
before assembly.

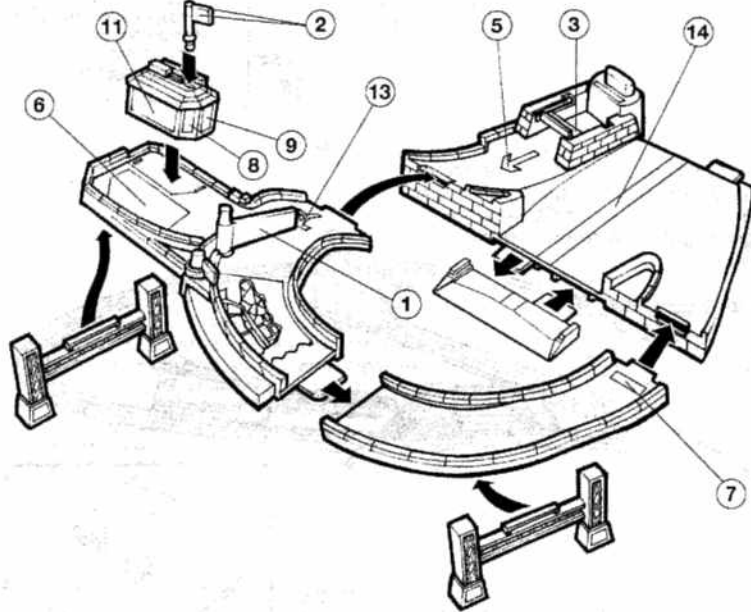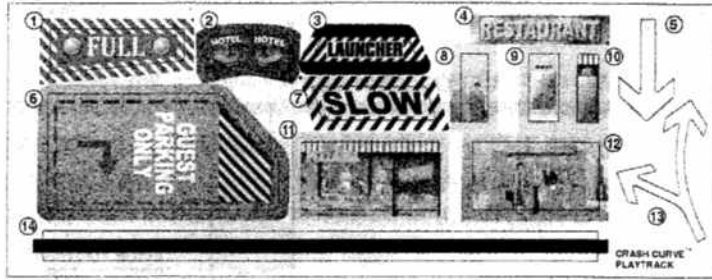



## 2 GATED CROSS JUNCTION ASSEMBLY AND LABEL PLACEMENT

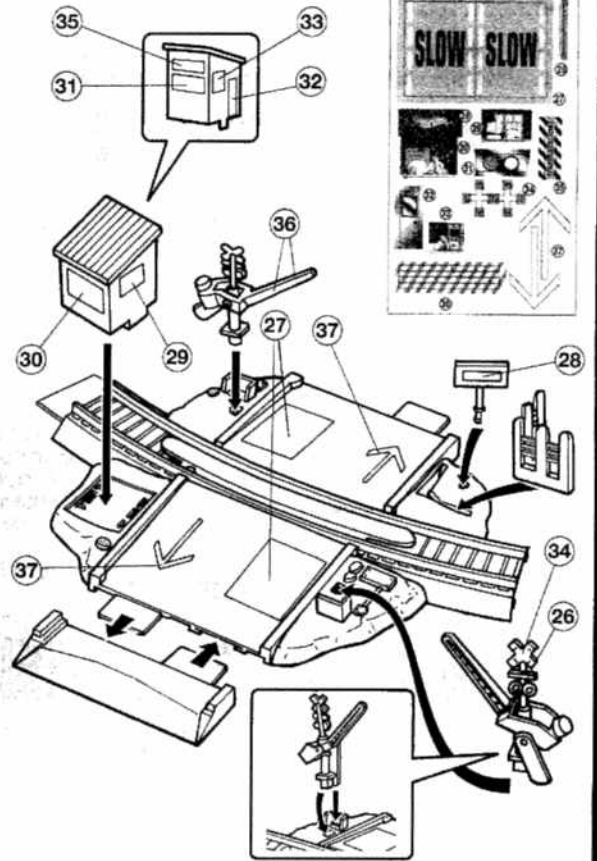

## 3 LOADING STATION AND LABEL PLACEMENT

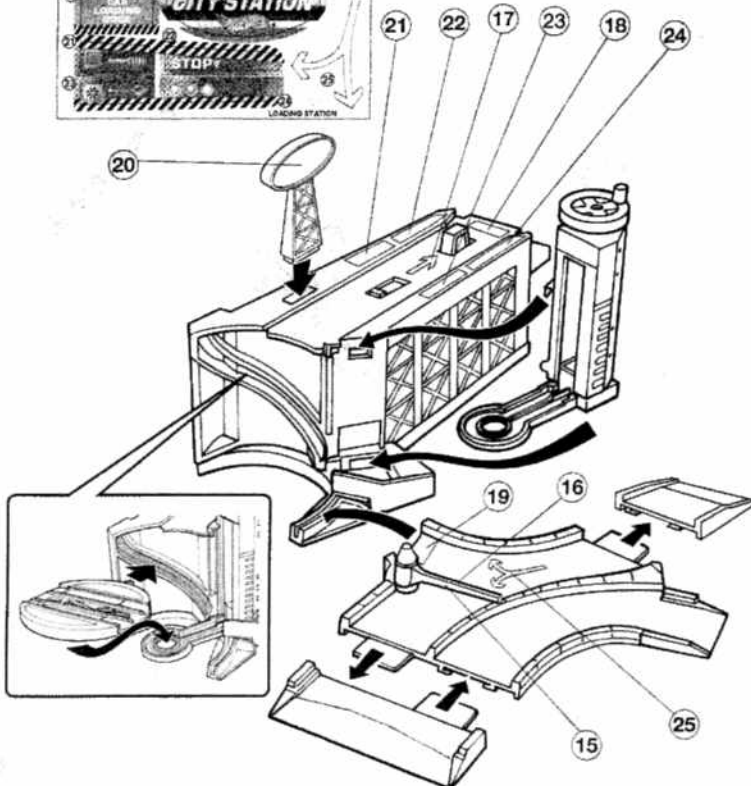



## 4 UNLOADING STATION AND LABEL PLACEMENT

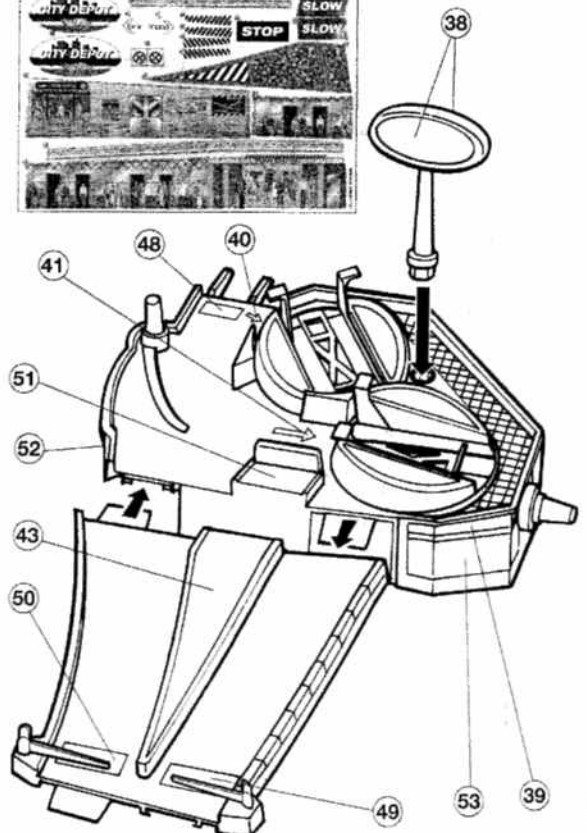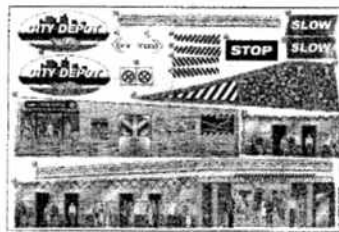


**START TO PLAY**

**TO ENJOY ALL FEATURES AVAILABLE IN THE TRAIN SET,  
FOLLOW GUIDELINES AS SHOWN BELOW:**




**1 CONTINUOUS MODE AND INFRA RED FEATURES**

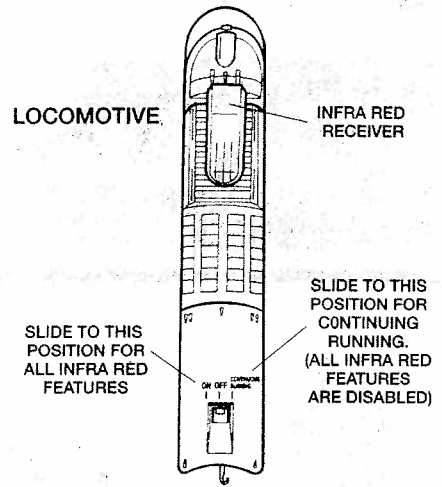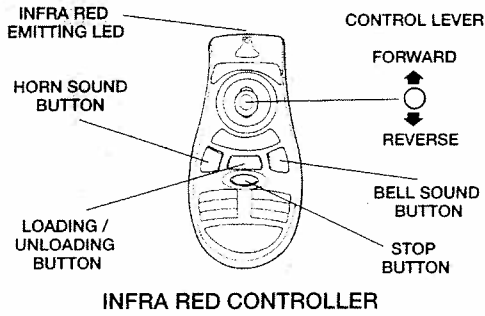

FOR INFRA RED CONTROL PLAY MODE (ON MODE), MAKE SURE THE CONTROLLER POINTED TOWARD THE LOCOMOTIVE INFRA RED RECEIVER WHEN TRANSMIT SIGNAL. CONTROL RANGE APPROX. 10 FT MAXIMUM.

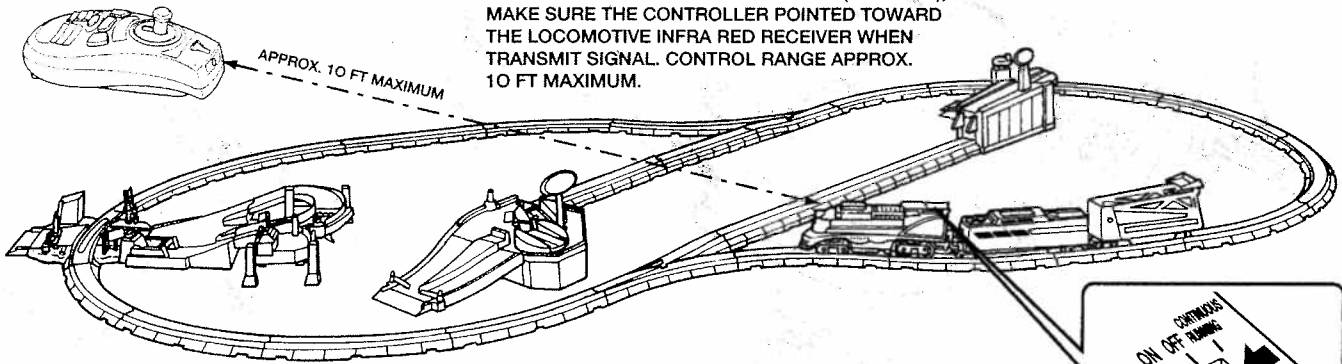


FOR CONTINUOUS RUNNING MODE, THE TRAIN GOES AROUND THE OVAL LAYOUT OF TRACK ONLY. ALL INFRA RED FEATURES ARE DISABLED.

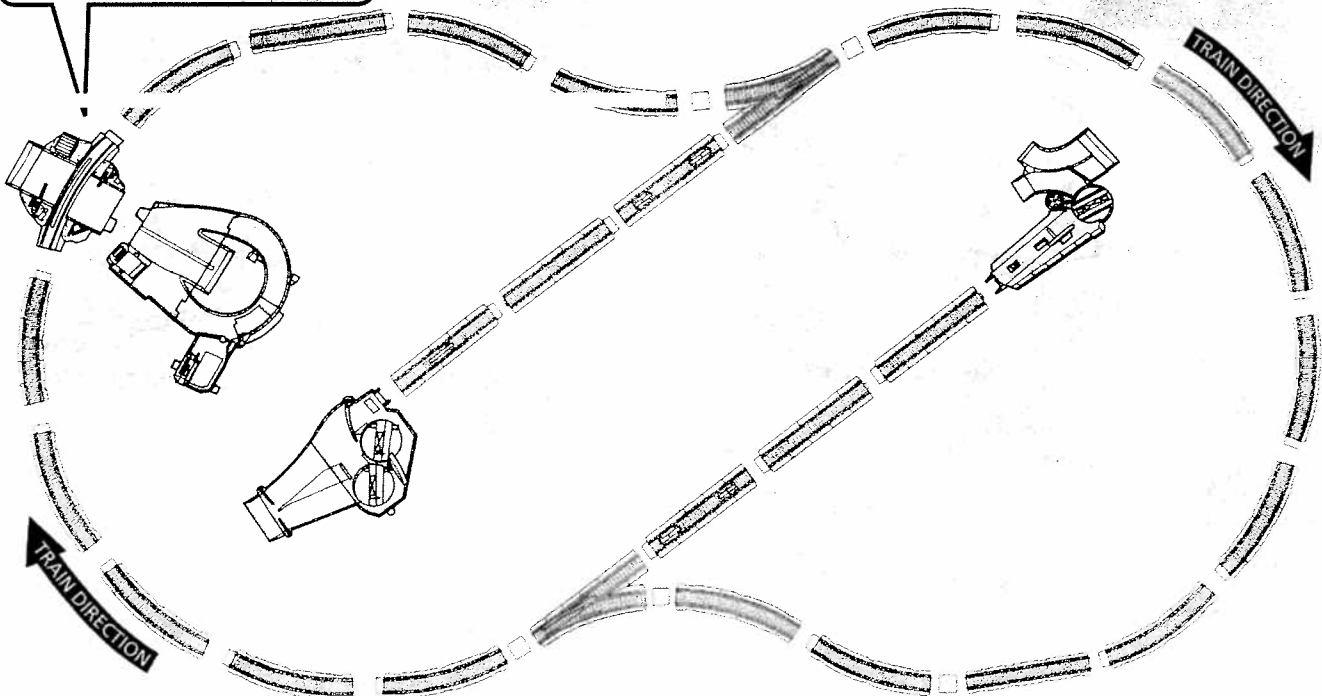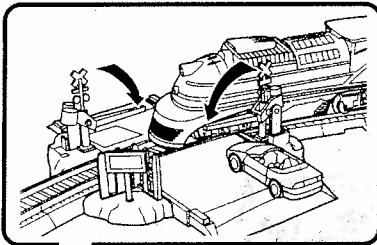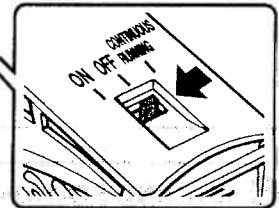


## 2 LOADING VEHICLE

**A** DRIVE YOUR HOT WHEELS® VEHICLE ONTO THE CAR LIFT OF THE CAR LOADING STATION.

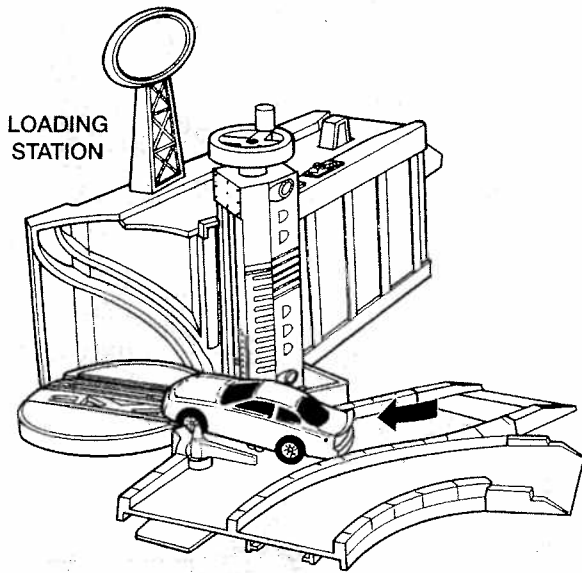

 **B** TURN THE CRANK TO RAISE UP THE CAR LIFT.

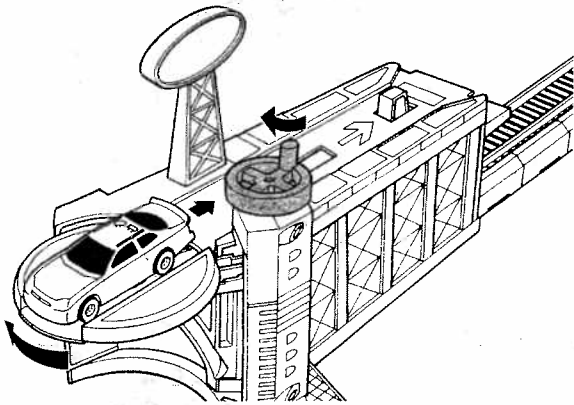



## C THE CAR SLIDES TO THE LOADING AREA.

**STEP 1** ↓  
REVERSE THE TRAIN TO THE LOADING STATION.

**STEP 2**  
STOP THE TRAIN WHEN TRAIN PARKED.

**STEP 4** ↑  
PUSH UP THE LEVER TO ALLOW TRAIN TRAVELS FORWARD.

  **STEP 3**  
RELEASE THE CAR FROM THE STATION TO THE CAR CARRIER.

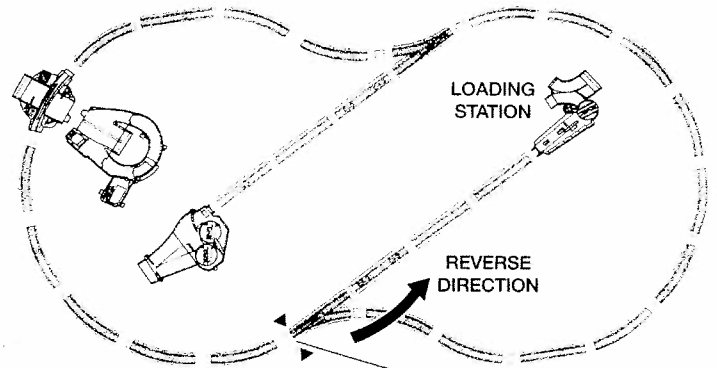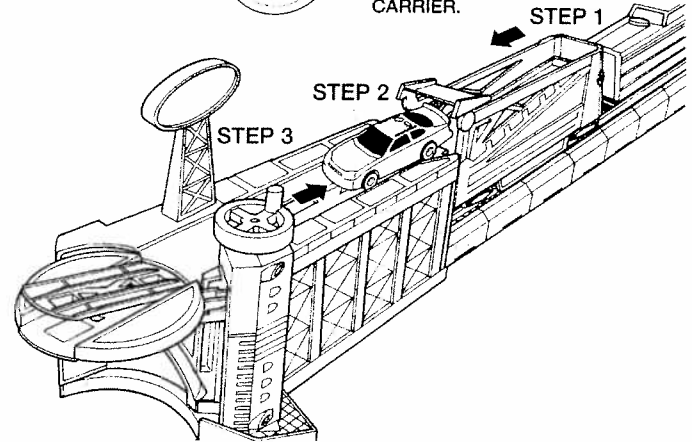

END OF TRAIN MUST BE PASSED THIS POINT BEFORE REVERSING.



## 3 UNLOADING VEHICLE

  **STEP 1** ↓  
REVERSE THE TRAIN TO THE UNLOADING STATION.


**STEP 2**  
STOP THE TRAIN WHEN TRAIN PARKED.

**STEP 4** ↑  
PUSH UP THE LEVER TO ALLOW TRAIN TRAVELS FORWARD.


**STEP 3**  
PRESS THE LOADING/UNLOADING BUTTON TO RELEASE THE CARS ONTO THE UNLOADING STATION.

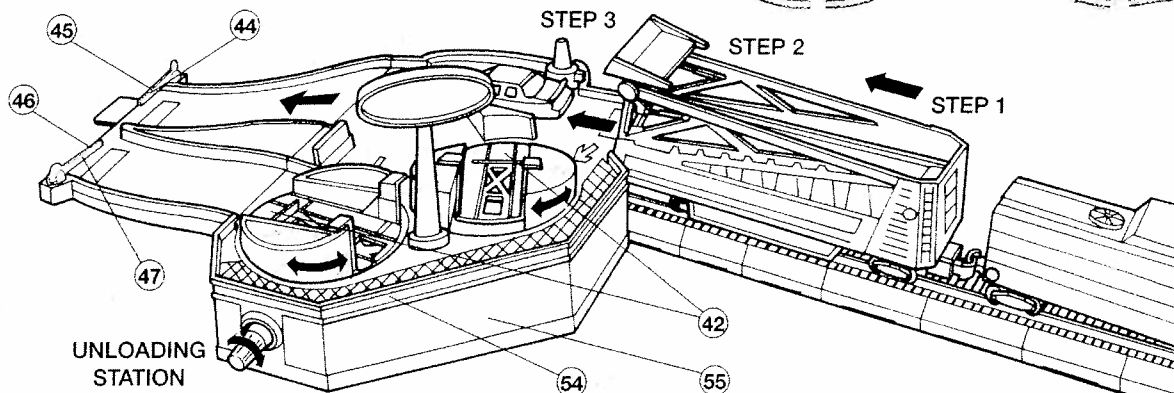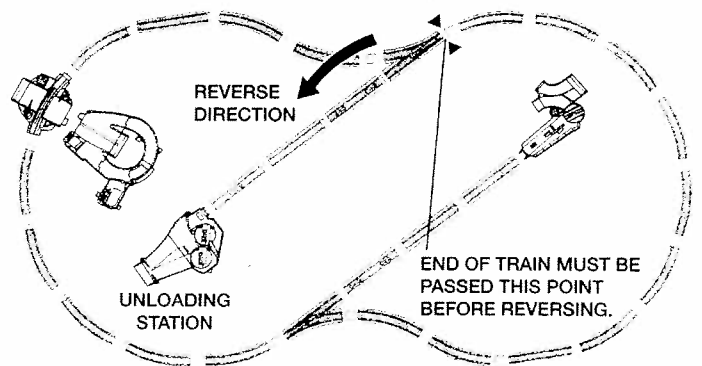

OR THE CAR CAN GO ONTO THE TURNING DISK

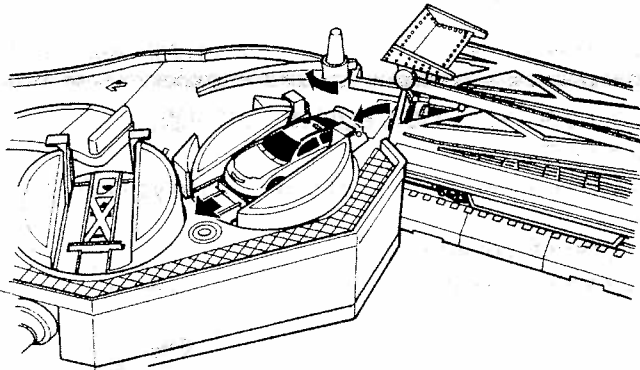 


 LIFT UP THE TURNING DISK TO RELEASE THE CAR TO THE RAMP

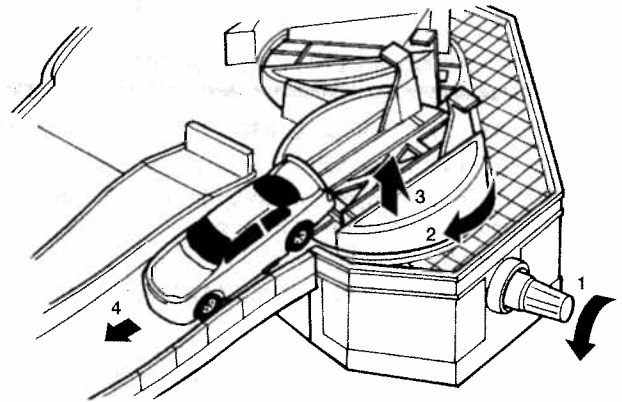


**4 TO RESTAURANT**

 
1.

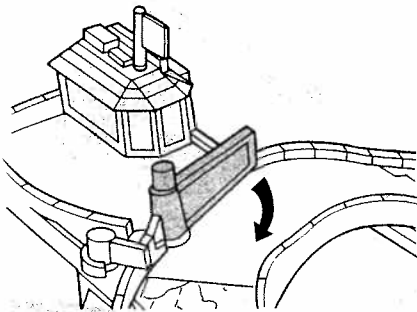

 2. RESET THE LAUNCHER

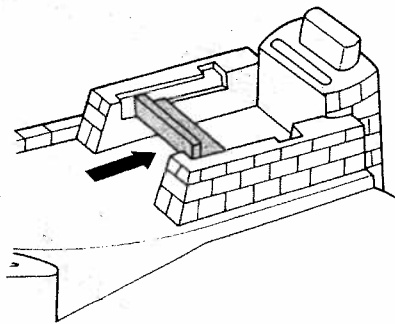


 3. PRESS BUTTON TO LAUNCH THE VEHICLE

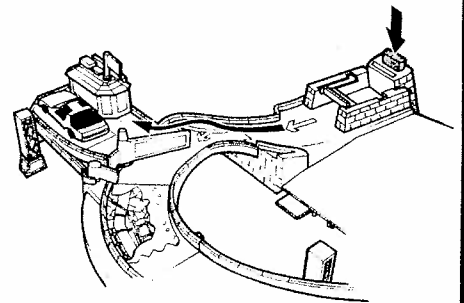


**TO CRASH CURVE**

 
1.

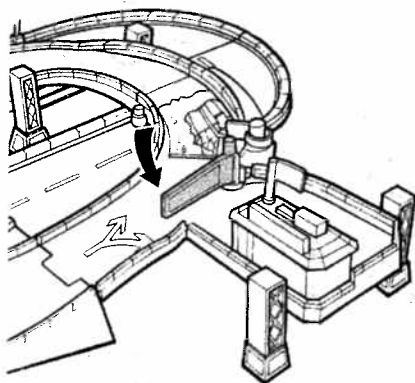

 
2. RESET THE LAUNCHER

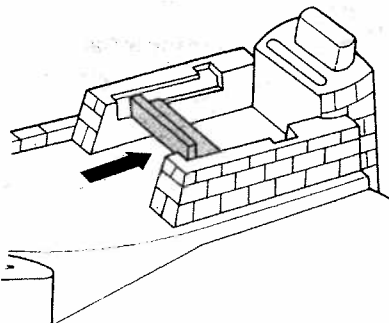

 
3. PRESS BUTTON TO LAUNCH THE VEHICLE !

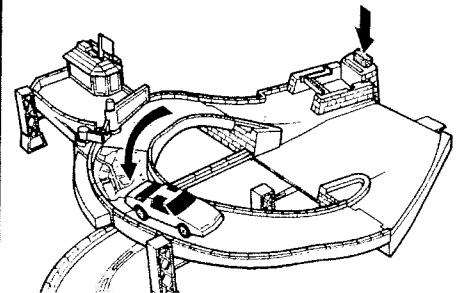

 4.

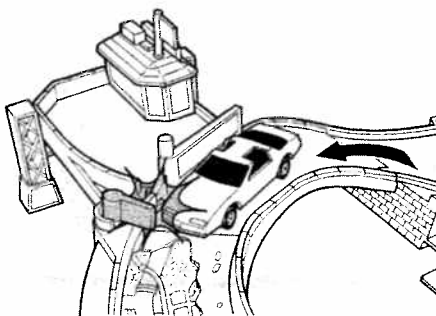

 5. VEHICLE CRASHES IF SIGN IS HIT!

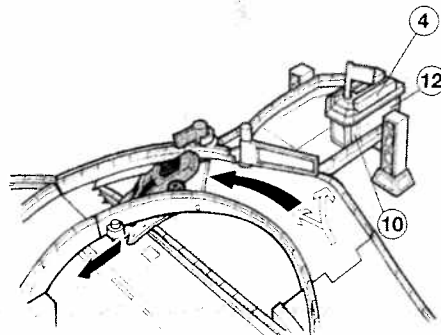

**2 - YEAR LIMITED WARRANTY** Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with the proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential or contingent damages (except in those states that do not allow this exclusion or limitation). **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.