 
 
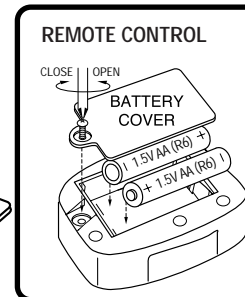 


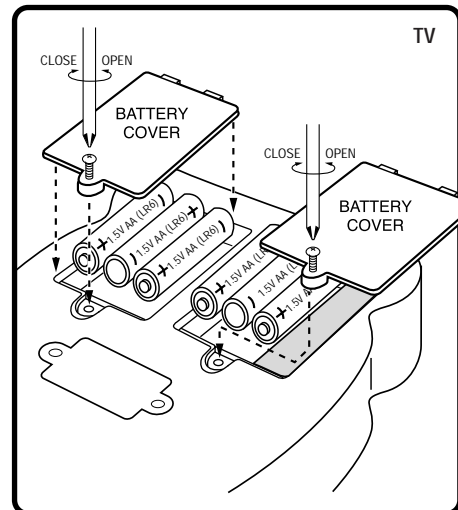

# Tune-in TV

## INSTRUCTION SHEET

**Keep these instructions for future reference as they contain important information.**

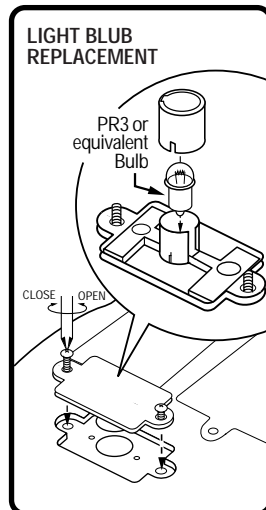

### BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.

TV:  
Requires 6 "AA" (LR6)  
alkaline batteries,  
not included.

Remote Control:  
Requires 2 "AA" (R6) batteries,  
not included.  
Dispose of batteries safely.

©2001 Sesame Workshop. "Sesame Street," "Sesame Workshop" and their logos are trademarks of Sesame Workshop. All rights reserved.

Watch Sesame Street on PBS and 123 Sesame on Noggin.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.

Manufactured for Fisher-Price. ©2001 Mattel, Inc. All Rights Reserved.  
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packing and address should be kept for future reference.



Questions or Comments?

1-800-432-5437

**Fisher-Price**

ITEM NO. 90206