

Gear-Go-Round™


INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information.

The Gear-Go-Round™ is a fun ferris wheel-like toy that comes with 7 gear blocks (5 large gears and 2 small gears) and 6 gear rings


HOW TO BEGIN PLAY

Slide the gears onto the five slots on the Gear-Go-Round™ as shown:

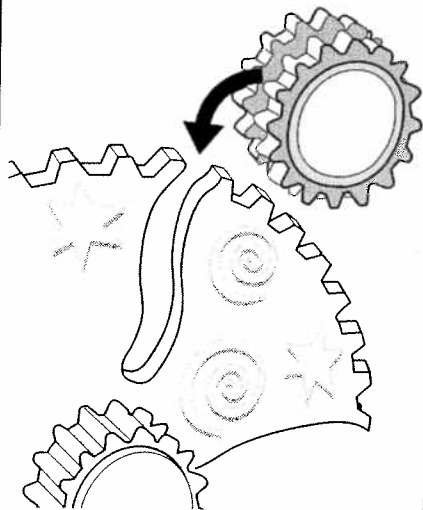


Turn the crank to turn the wheel - the gears will slide and spin as the wheel turns.

Press the release lever to spill the gear blocks off of the Gear-Go-Round™.

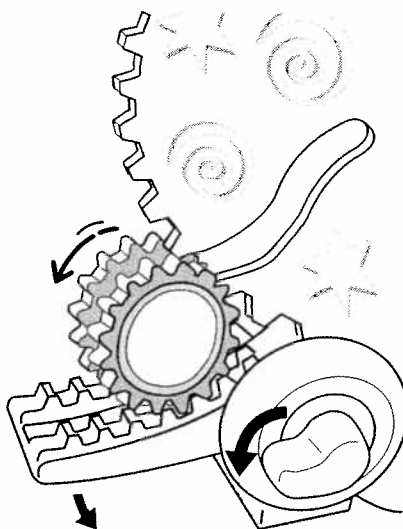

The 6 gear rings can slide onto the 2 small gear blocks as well as the small gears mounted to the front of the Gear-Go-Round for more gear fun!

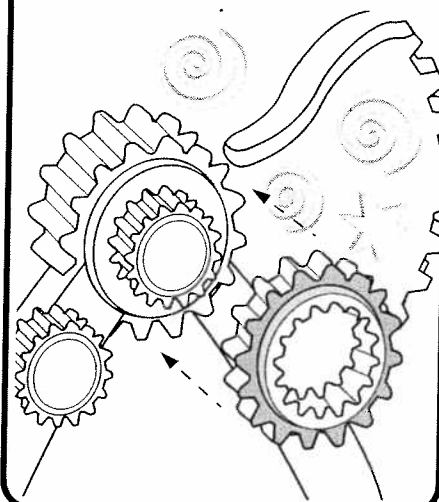

90443 - 0920

Gear-Go-Round™ play pieces also work with these other great GEAR CREATIONS™ toys:

- 90444 Gear Activity Easel™
- 90496 Stack & Spin Racer™
- 90655 Starter Kit
- 90662 Crank & Spin™

Collect them all !!!

©2001 Sesame Workshop.

"Sesame Street," "Sesame Workshop" and their logos are trademarks of Sesame Workshop. All rights reserved.

Watch Sesame Street on PBS and 123 Sesame on Noggin.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.

Manufactured for Fisher-Price. ©2001 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packing and address should be kept for future reference.



Questions or Comments?

1-888-892-6123

Fisher-Price

ITEM NO. 90443