


Ernie's Musical Bubble Horn

INSTRUCTION SHEET

Keep these instructions for future reference as they contain important information.


BATTERY INSTALLATION

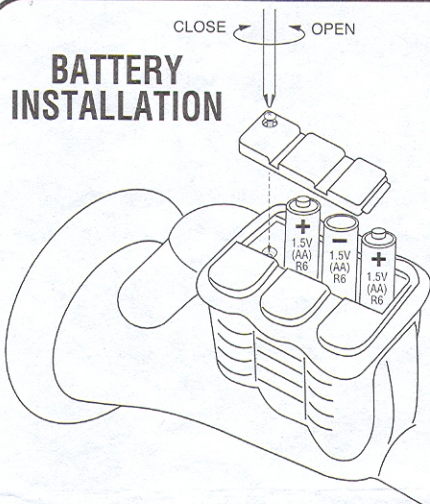

BATTERY SAFETY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.

FILL HORN WITH BUBBLE SOLUTION

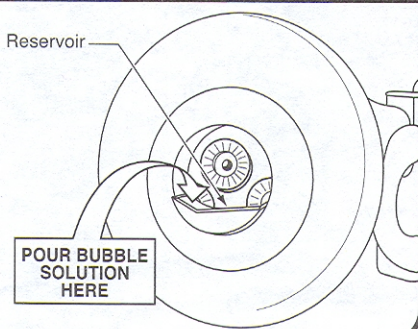

IMPORTANT TROUBLE SHOOTING TIPS

- Drain, rinse, clean and dry the item thoroughly before storing. Do not immerse in water or rinse with a hose. Carefully pour a small amount of water into the reservoir (do not overfill), shake from side to side a couple of times and pour into a sink. Repeat until reservoir is thoroughly clean.
- Don't overfill solution. Do not pour into the blower hole as damage might occur.
- Install batteries prior to filling bubble solution.
- After playing for the day it will be necessary to drain any residual solution still remaining in the reservoir.
- Use in area where water can be easily wiped up without leaving stains. Not recommended for use around carpets. Protect play area before use.

©2000 Sesame Workshop.

"Sesame Street," "Sesame Workshop" and its logos are trademarks of Sesame Workshop.

All rights reserved.

Watch Sesame Street on PBS and 123 Sesame on Noggin.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.

Manufactured for Fisher-Price. ©2000, 2001 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packing and address should be kept for future reference.



Questions or Comments?

1-888-892-6123

Fisher-Price

ITEM NO.90585