



Me So HUNGRY Cookie Monster Puppet


INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information.

HOW TO PLAY

BEFORE YOU BEGIN:


- Please remove and discard the "Try Me" pull-tab from the back of the toy.

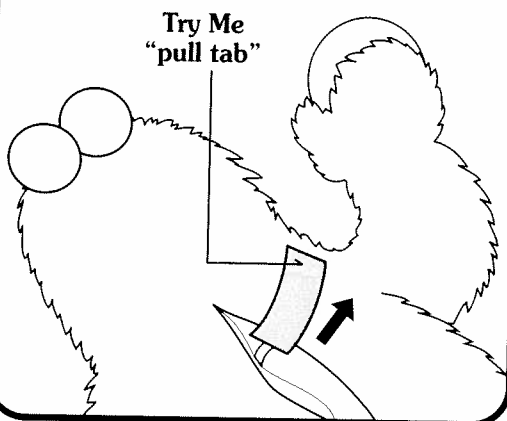

Me So HUNGRY Cookie Monster Puppet works just like a regular hand puppet with these added special features:

- Move his mouth and Cookie Monster says several fun phrases.
- Press COOKIE MONSTER's left hand to hear the "C is for Cookie" song.
- Put the cookie to his mouth to hear chomping sounds and fun phrases.
- Put any other object in his mouth to hear chomping sounds and another fun phrase.
- Press his belly to hear even more fun phrases.

BATTERY INSTALLATION

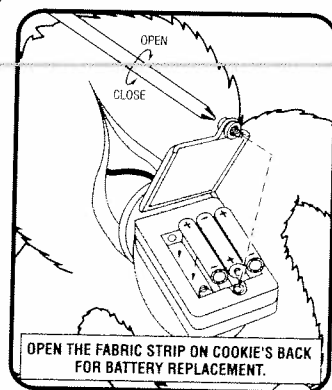

BATTERY SAFETY INFORMATION:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.

BATTERY REPLACEMENT:

- Batteries included are for demonstration purposes only.
- If sounds play slowly or distort, replace 3 "AA" (LR6) batteries as shown.
- For longest life and best performance use only alkaline batteries.
- The battery compartment is located on the back of the unit.
- Open the fabric strip for battery replacement.
- Unscrew and lift the battery compartment cover away from back of the unit as shown.

©2001 Sesame Workshop.
"Sesame Street," "Sesame Workshop"
and their logos are trademarks of Sesame Workshop.
All rights reserved.

Watch Sesame Street on PBS and 123 Sesame on Noggin.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.
Manufactured for Fisher-Price. ©2001 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packaging and address should be retained for future reference.



Questions or Comments?

1-888-892-6123

Fisher-Price

ITEM NO. 90667