

Guess What...? Elmo

INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information.

GUESS WHAT...? ELMO brings the spirit of Elmo's World to life!


Every single day of the week Elmo talks about a **BRAND NEW** popular topic right from the show (7 topics in all) !!! His mouth moves when he speaks and he also sings the ever-popular Elmo's World Theme Song!

HOW TO PLAY

BEFORE YOU BEGIN:


- Please remove and discard the "Try Me" pull-tab from the back of the toy.

Try Me
"pull tab"

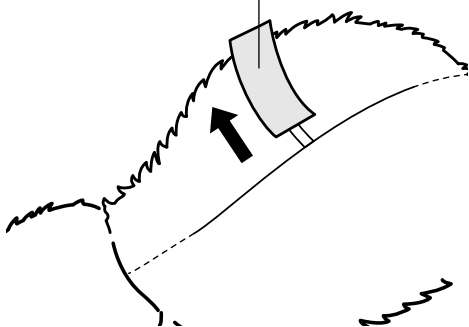

- Squeeze Elmo's right hand.
- Each day Elmo will start a new topic by saying, "Elmo's so happy to see you! Guess what Elmo is thinking about today?!?"
- Elmo will then announce one of the following seven topics that he is thinking about for that day:
 - hats
 - balls
 - shoes
 - fish
 - birthday cakes
 - bananas
 - bugs
- Squeeze his right hand for phrases and questions about the topic of the day.
- Squeeze his right hand again for answers to the questions or more fun phrases.
- Elmo is programmed with a special **MAGICAL TIME CLOCK** that changes the topic **EVERY DAY!** (Every 24 hours) Every single day Elmo will randomly choose one of 7 topics to talk about!
- Squeeze Elmo's left hand (any time, any day) and he will sing the Elmo's World Theme Song.
- If the toy is not played with for more than 20 seconds it will automatically shut-off to preserve battery life.
- Press Elmo's right or left hand to resume play.

BATTERY INSTALLATION

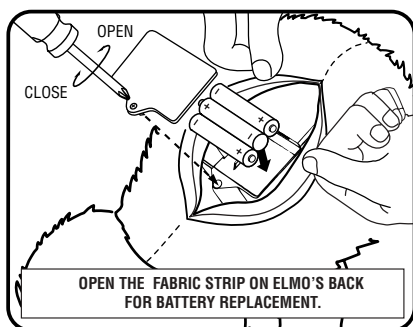

BATTERY SAFETY INFORMATION:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.

- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.

BATTERY REPLACEMENT:

Requires 3 "AA" (LR6) batteries.
If sounds play slowly or distort, replace with fresh batteries.

©2001 Sesame Workshop.

"Sesame Street," "Elmo's World," "Sesame Workshop"

and their logos are copyrights of Sesame Workshop. All rights reserved.

Watch Sesame Street on PBS and 123 Sesame on Noggin.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.

Manufactured for Fisher-Price. ©2001 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packaging and address should be retained for future reference

ELMO'S SONG by: Tony Geiss

©1990 Ephemeral Music / Sesame Street, Inc.

All rights on behalf of Sesame Street, Inc. administered by Sony/ATV Music Publishing,
8 Music Square West, Nashville, TN 37203



Questions or Comments?

1-888-892-6123

Fisher-Price

ITEM NO. 90677