# Jump & Learn<sup>™</sup>Elmo


### INSTRUCTION SHEET


## Plays 4 different ways!

To play: • Squeeze Elmo's left hand one to four times to scroll through the choices.

- · Elmo says a greeting phrase for each mode with each squeeze.
- · When you hear the mode you want... start bouncing!
- Please note: Elmo will stay in "Jumping" mode only unless you squeeze his hand and choose another mode.



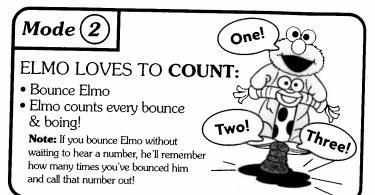

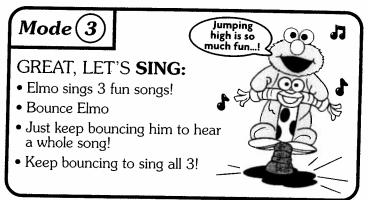

Mode 4

LET'S DO
THE ABC's:

Bounce Elmo


Elmo calls out a letter after every bounce and boing!

Keep bouncing to do the whole alphabet!

Elmo keeps playing as long as you keep bouncing him.

If you stop bouncing him, Elmo will automatically shut off until
you're ready to play with him later.

#### **Battery Installation**

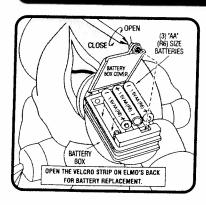

#### CAUTION:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before they are charged.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- · Do not mix old batteries and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- · Dispose of batteries safely.

Should this product cause local electrical interference we recommend moving it away from other equipment.

©2000 Sesame Workshop. Sesame Street Muppets ©2000 The Jim Henson Company. All rights reserved. Sesame Street, Sesame Workshop and

Manufactured for Fisher-Price. ©2000 Mattel, Inc. All Rights Reserved. Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

CONFORMS TO ENTLAND ACTA FORD

Questions or Comments? 1.888.892.6123