


See'n Say® Kids Around the World™

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

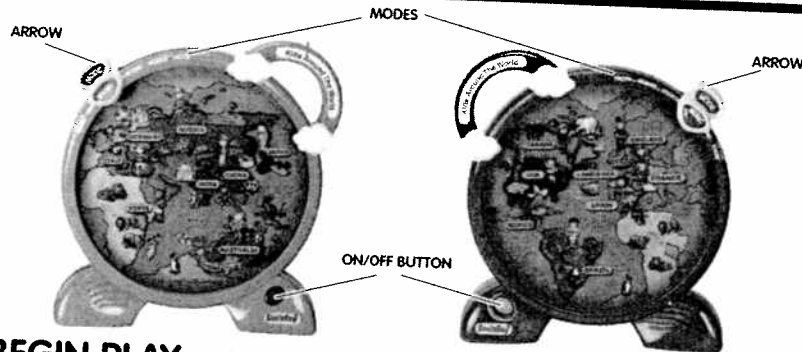

TO BEGIN PLAY

1. Press the ON/OFF button on the foot of the toy to see the countries light up one by one and hear a greeting in a language from that country.

NOTE: There is an ON/OFF button on each side. Only one side will function at a time. It is not necessary to turn off one side to play with the other. Simply pressing the ON/OFF button on the alternate side will activate it.

2. Slide the arrow to select one of the six learning modes.
You will be prompted to press or find a country.

NOTE: The arrow should be clicked into place, directly above the mode of choice for proper functioning of the toy. Toy can be reset by pressing the ON/OFF button.

3. To turn off, press the ON/OFF button and see each country light up and hear a good-bye in a language from each country.

MODES OF PLAY

1. In the Facts Mode, press a country and it will light up as you hear one of several facts about that country. To hear other facts, press the Land & Sea button.
2. In the Words Mode, press a country to see it light up and hear a greeting, good-bye or thank you in a language from that country.
3. In the Counting Mode, press a country to hear how to count from one to five in a language from that country as the light blinks along.
4. In the Music Mode, press a country to hear a melody reminiscent of that country as the light blinks in time.
5. In the Find Me Mode, Kids Around The World will ask you to find a specific country. The country will light up when you press the correct one.
6. In Do You Know? Find a specific country based on information learned in the Facts Mode. The country will light up when you press the correct one.

Should this product cause local electrical interference we recommend moving it away from other equipment.

94078

Fisher-Price

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
New York, New York 10010 U.S.A.
Manufactured for Fisher-Price.
© 2000 Mattel, Inc. All Rights Reserved.
Fisher-Price, the Fisher-Price logo are
U.S. trademarks of Mattel, Inc.

Retain this address for future reference:
Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Mattel Australia Pty., Ltd., Richmond, Victoria 3121.
Consumer Advisory Service 1800 800 812 (Valid only in Australia).
Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.