


Please keep these instructions for future reference as they contain important information.

A to Z Pooh introduces children to the alphabet through several modes of play. Children can press the letters for different responses, enter a quiz mode, listen to 2 different melodies, or hear Pooh sing a special ABC song.

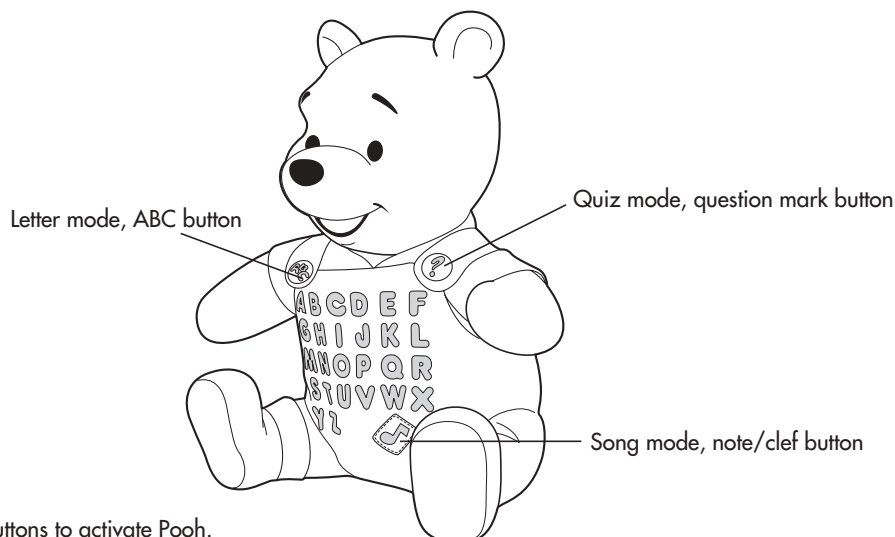

HOW TO PLAY

- Press any of the buttons to activate Pooh.
- Press any letter and Pooh will say the letter.
- Press the same letter again and Pooh will say words that start with that letter.

QUIZ MODE

- Press the question mark button (?) to enter QUIZ MODE.
- Press any letter.
- Pooh will think of a word that starts with that letter, and then ask the child to find a different letter that starts another word.
- Press the correct letter.
- If the child presses the incorrect letter, Pooh will help them find the correct letter.
- Once the correct letter is pressed, you can begin the game again by pressing another letter.

SONG MODE


- Press the MUSIC button to enter SONG MODE.
- Pooh will sing his special ABC song.
- Press the MUSIC button again to hear 2 more melodies.

TOY SLEEP MODE

- If the toy is not played with for a while it will automatically shut-off.
- To turn Pooh back ON, press any of the buttons.

BATTERY INSTALLATION

- If sounds play slowly or distort, replace 3 "AA" batteries as shown:

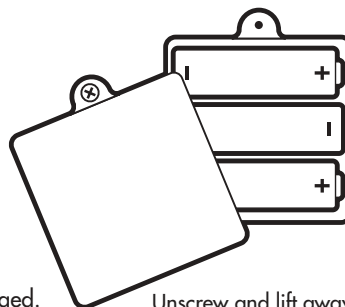

Unscrew and lift away cover from back of product.

In case of electrostatic discharge, the toy may malfunction and may need to be reset. Reset toy by taking out batteries and reinstalling as shown.

BATTERY SAFETY INFORMATION

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of battery(ies) safely. Do not dispose of in a fire as batteries may explode or leak.