



# Ariel Flyer™

*Pilot & Veterinarian*



**Model Number: B0331**

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires two "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement:

Phillips screwdriver (not included).

 
**Fisher-Price®**

[www.rescueheroes.com](http://www.rescueheroes.com)


# TAKING RESCUE POWER TO THE MAX!

## ⚠ CAUTION

To prevent entanglement, keep hair away from wheels.

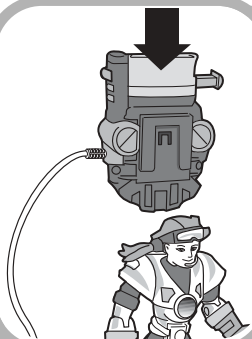


 - Slide the backpack onto the connector on back of the figure as shown.

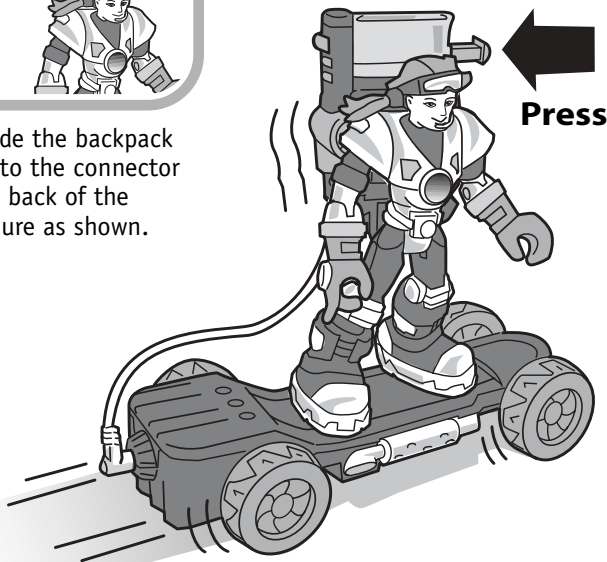

- Place Ariel Flyer™ on the all-terrain skateboard.
- Press, the button on the backpack in completely to see her speed to the rescue!

# BATTERY REPLACEMENT

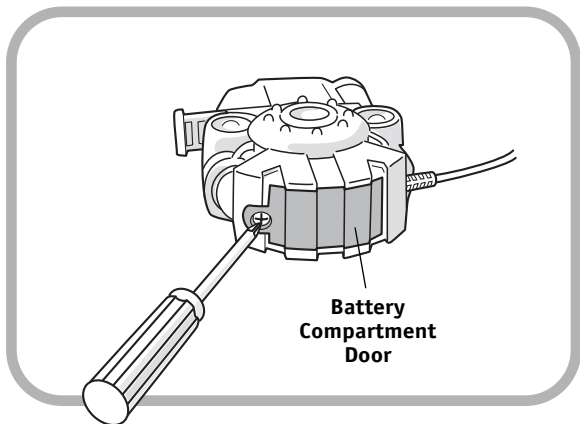 


- Locate the battery compartment door on the bottom of the backpack.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two new "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When motion on this toy becomes slow or stops, it's time for an adult to change the batteries!

# BATTERY TIPS

 **For best results, use only alkaline batteries.**



**SHOWN ACTUAL SIZE**

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.  
©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

# GET THE REST OF TEAM POWERMAX™

Each sold separately and subject to availability.



**PowerMax™**  
**Billy Blazes™**

Firefighter  
78369



**PowerMax™**  
**Jack Hammer™**

Construction Expert  
78370



**PowerMax™**  
**Rocky Canyon™**

Mountain Hero  
78371



**PowerMax™**  
**Jake Justice™**

Police Officer  
78439



**PowerMax™**  
**Matt Medic™**

Physician  
78500



**Ultimate**  
**Robotic Vehicle™**

"URV"  
78362

# CARE

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

## CONSUMER INFORMATION

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:  
Fisher-Price® Consumer Relations,  
636 Girard Avenue,  
East Aurora, New York 14052.

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to:

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.