

Fisher-Price **Kasey**
the
Kinderbot[™]
LEARNING SYSTEM

**Focus on
Phonics**[™]

"Let's
learn letter
sounds!"

Discover what's possible... www.fisher-price.com

Getting Started

Please keep this manual for future reference, as it contains important information.

Before inserting the software cartridge, turn power off by pressing the On/Off button on the top of Kasey's foot. Insert the software cartridge into the software port and Kasey automatically turns back on!



What do you want to do?

Choose an activity from the Main Menu: **Fish for Consonants**, **Spin the Vowel**, **Blend up Phonics** and **Rhyme Around™**. Press a colored selection button to make your choice.

Note: Each activity has a teach mode and a quiz mode. Sometimes, Kasey may skip teach mode and go right to quiz mode.

Fish for Consonants

 
Press the red selection button.

Learn about different consonant sounds.

Spin the Vowel

Press the blue selection button.

Learn about different vowel sounds and how they're used in words.

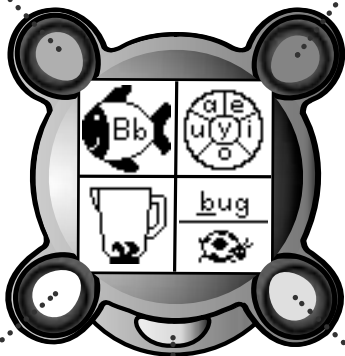

Blend up Phonics

Press the yellow selection button.

Learn about phonic blends – an important part of reading!

Rhyme Around™

Press the green selection button.

 
 
Let's play a rhyming game. Match up the words that sound the same.

Home Button

Press the Home Button to return to the Main Menu at any time.




Fish for Consonants

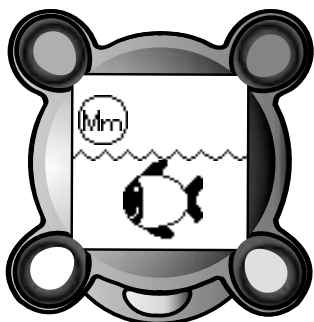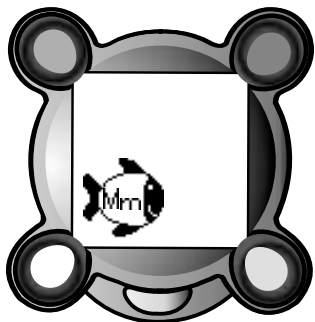

- Press a colored selection button to “catch” the fish!

 
 
- Kasey says the sound of the consonant printed inside the fish.



Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.




Fish for Consonants

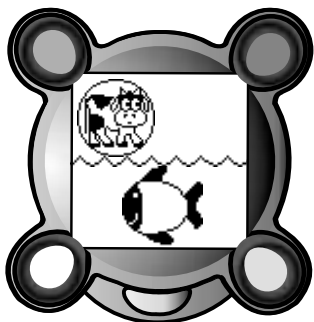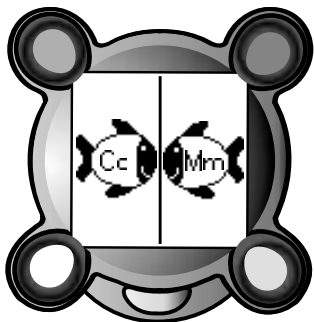


- Let's play. Listen to Kasey say a consonant sound and a word that uses that consonant sound. Now, press the colored selection button next to the letter that makes that sound.

 - If you choose correctly, great job!
- If you choose incorrectly, Kasey tells you which letter makes the sound.

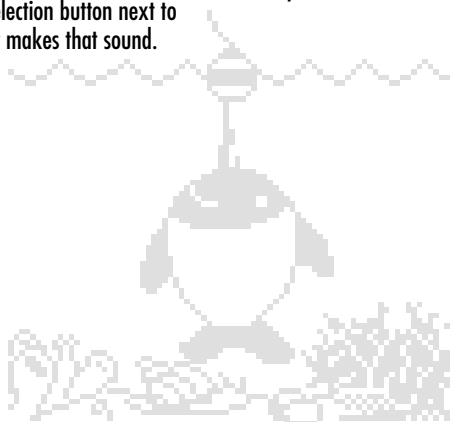




Fish for Consonants

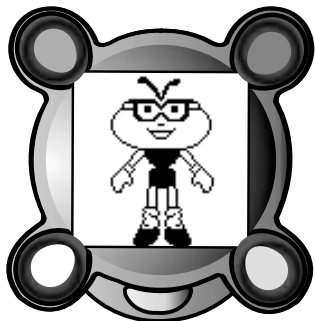 


- Let's "Letter-cize!"

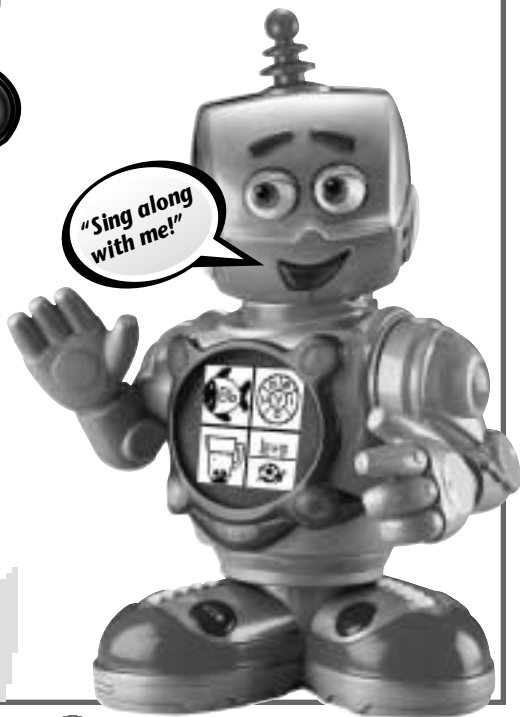 



Spin the Vowel

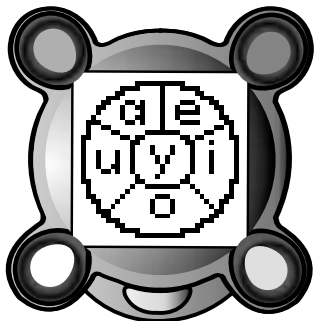 


- Press one of the colored selection buttons to “spin” the vowel wheel.



 
- Listen as Kasey sings a vowel song!




Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



Spin the Vowel

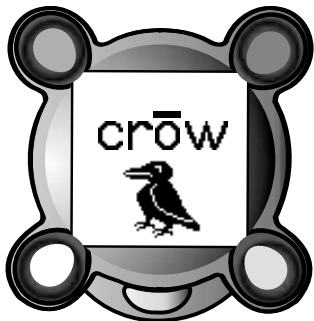

 
- Listen to the sound a vowel makes and a word with that vowel sound.

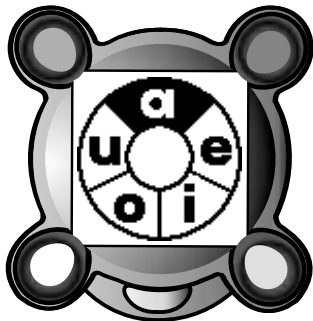

- Press one of the colored selection buttons to spin the vowel wheel.

 


Hint: When you see this  on Kasey's screen, press the green selection button to hear the vowel sound and a word with that vowel sound again.



Spin the Vowel

Yellow
Selection
Button

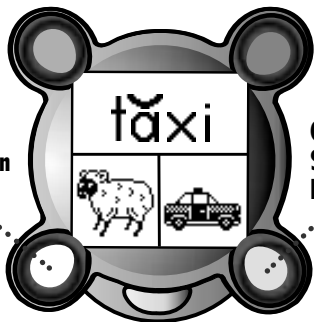


Green
Selection
Button



- Find the picture with the correct vowel sound. Press the yellow or green selection button.

 
- If you choose correctly, great job!
- If you choose incorrectly, Kasey tells you the correct answer. Try another one!

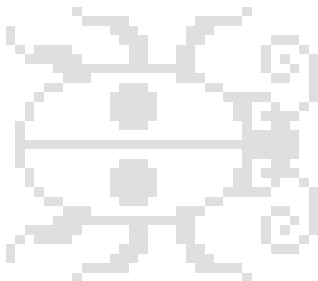


Hint: When you see this  on Kasey's screen, press the green selection button to repeat the question.



 Blend up Phonics

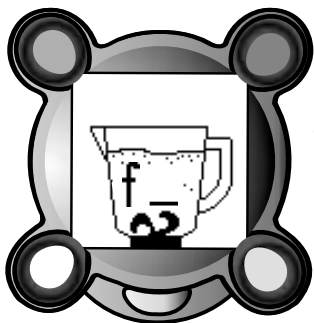


Red
Selection
Button

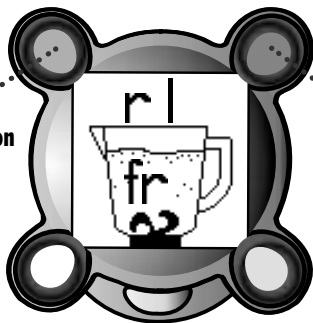 

Blue
Selection
Button

 
 
- Listen as Kasey picks the first letter to make a phonic blend.
- Now, press the red or blue selection button to pick the second letter to make a phonic blend.



Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



Blend up Phonics

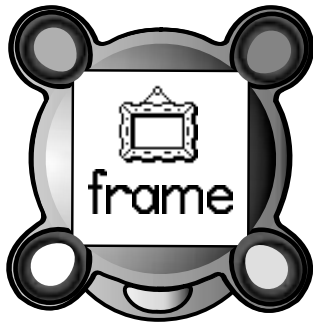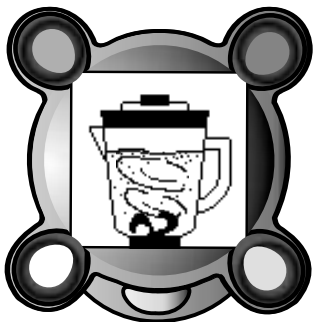



- Now, press any colored selection button to “blend” the letters you chose together.
- Listen as Kasey says a word that uses both letters blended together.



Hint: When you see this  on Kasey's screen, press the green selection button to hear the phonic sound again.



  Blend up Phonics

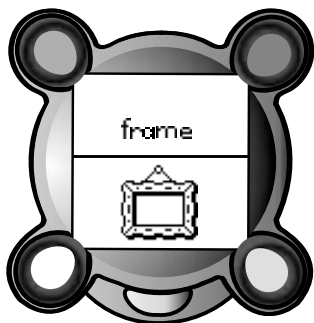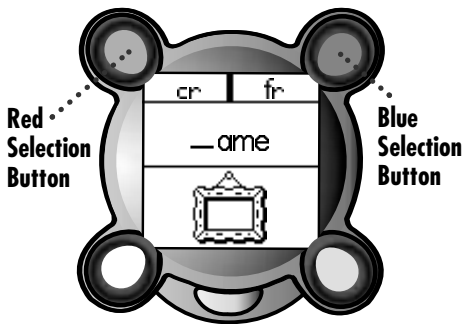


- Now, it's your turn. There is a picture and a word with missing letters on the screen. And, there are two phonic blends on the top of the screen.
- Press the red or blue selection button to choose the phonic blend that completes the word and matches the picture!

- If you choose correctly, great job!
- If you choose incorrectly, Kasey tells you the correct answer. Try another one!



Hint: When you see this  on Kasey's screen, press the green selection button to hear the phonic sound again.



 Blend up Phonics

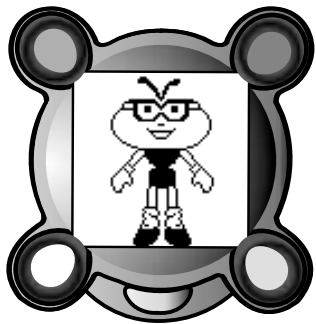

  - Sing and exercise along with Kasey to a fun letter song.

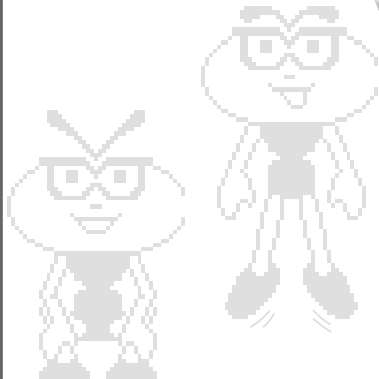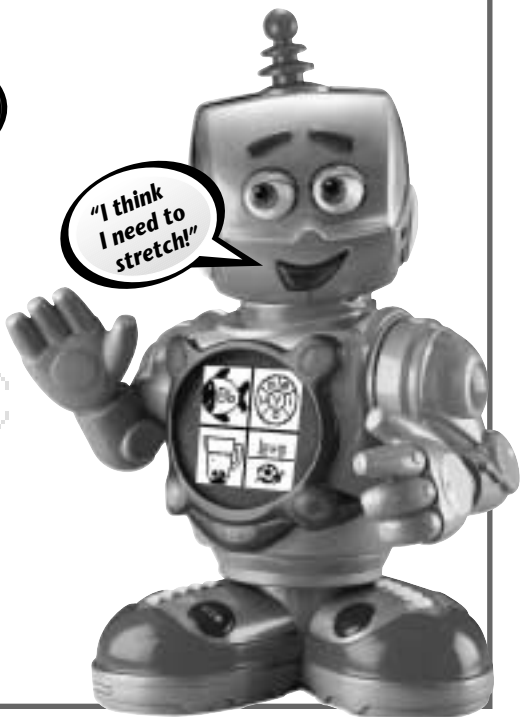




Rhyme Around™



 Yellow
Selection
Button

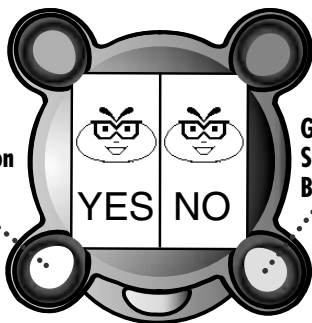


Green
Selection
Button

- Rap and dance along with Kasey to a fun rhyming song!

 
- When the music finishes, you can play it again (press the yellow selection button for yes) or you can continue in this activity (press the green selection button for no).




Hint: When you see this  on Kasey's screen, press the red selection button to go directly to Quiz mode.



Rhyme Around™

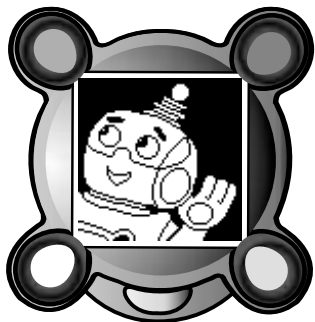


 
- Listen as Kasey says two rhyming words.

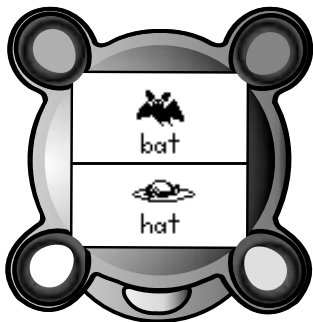

- Look at the screen and the two rhyming words. Say them along with Kasey.



  Rhyme Around™

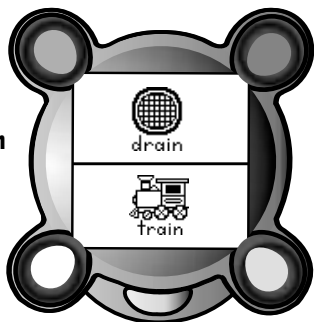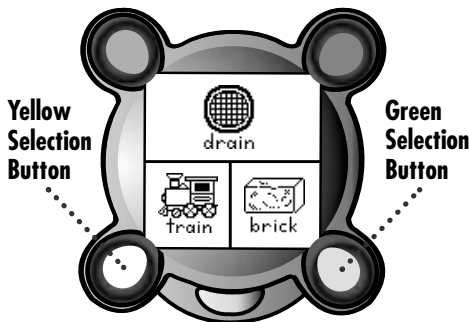

- Now, it's your turn. There is a picture and a word on the top of the screen. On the bottom of the screen, there are two pictures with words.
- Press either the yellow or green selection button to choose a word that rhymes with the word on top.
- If you choose correctly, great job!
- If you choose incorrectly, Kasey tells you the rhyming word. Try another one!

Hint: When you see this  on Kasey's screen, press the green selection button to hear the word again.

Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants to the original purchaser that Kasey the Kinderbot™ Focus on Phonics™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. **This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

 
For other countries, outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

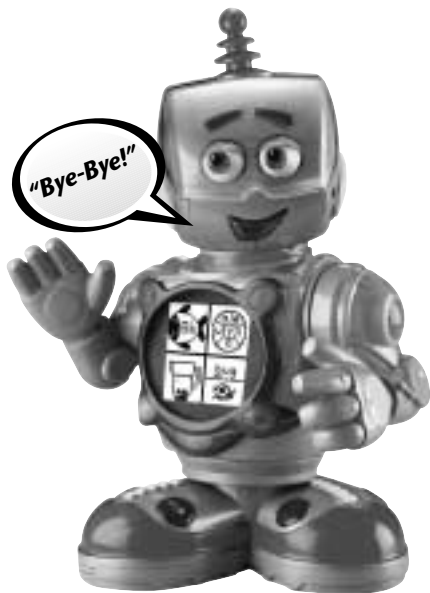

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.