



©2002 Origin Products Ltd. All Rights Reserved. Mattel, Inc., El Segundo, CA 90245 U.S.A. <u>Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline</u> 01628500303. Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1800 800 812 (valid only in Australia). Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.





## **Replace Batteries**



Unscrew battery door with Phillips screwdriver (not included). Remove door and insert 3 button cell batteries as shown. Replace door.

## **BATTERY SAFETY INFORMATION:**

- 1. Non-rechargeable batteries are not to be recharged.
- 2. Rechargeable batteries are to be removed from the product before they are
- charged.3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickelcadmium) batteries.
- 5. Do not mix old batteries and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
- Exhausted batteries are to be removed from the product.
- 9. The supply terminals are not to be short-circuited.
- 10.Dispose of batteries safely. Do not dispose of in a fire as the batteries may explode or leak.
- 11.Products with nonreplaceable batteries are not to be disposed of in a fire as the batteries inside may explode or leak.







