



# Rescue Chopper

Product Number: B1569



Please keep this instruction sheet for future reference,  
as it contains important information.


Adult assembly is required.

Tool needed for assembly: Phillips screwdriver (not included).

**Fisher-Price®**

[www.rescueheroes.com](http://www.rescueheroes.com)


## One-Time Assembly

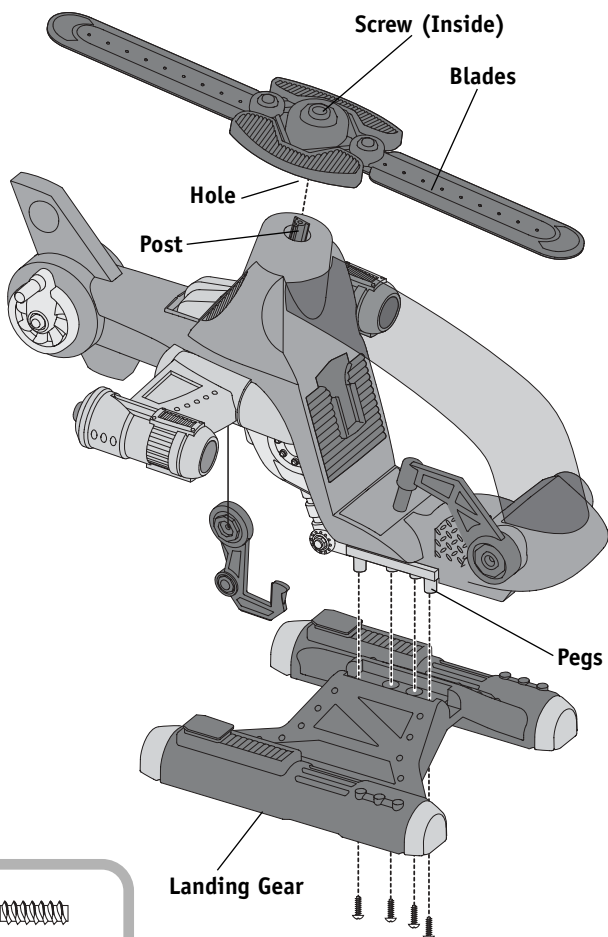

**#4 x  $\frac{3}{8}$ " Screw – 4**  
**Shown Actual Size**

- Fit the pegs on the bottom of the helicopter through the holes in the landing gear as shown.
- Insert the four screws through the holes on the bottom of the landing gear. Tighten the screws with a Phillips screwdriver. Do not over-tighten.
- Fit the blades onto the post on the top of the helicopter.
- Insert a Phillips screwdriver into the hole in the top side of the blades and tighten the screw. Do not over-tighten.

# Label Decoration

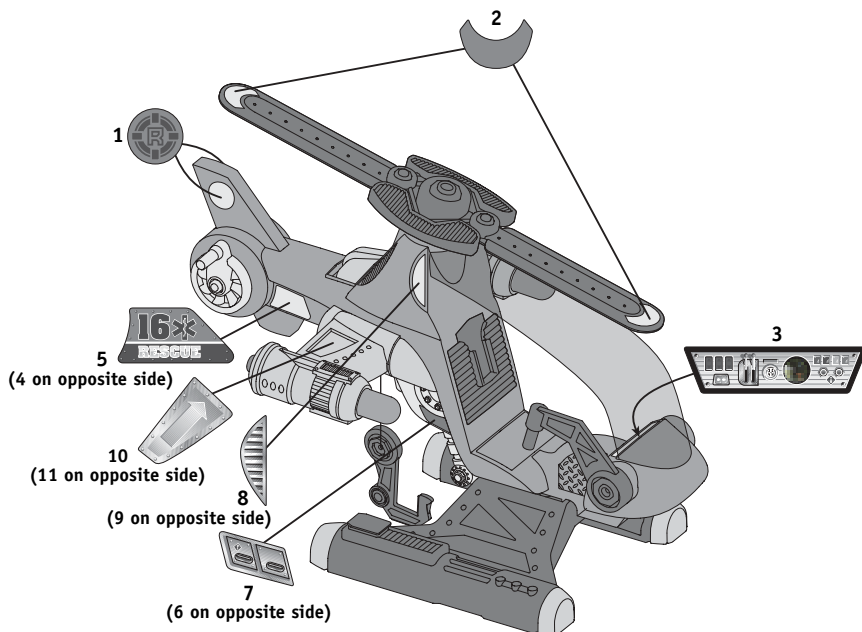

**Proper label application will help keep labels looking their best!**  
**When applying labels, keep the following guidelines in mind:**

- Wash hands before applying labels.
- Before applying labels, wipe the surface of the toy with a clean, dry cloth to remove dust or oils.
- Apply the labels as shown in the illustration.
- For best results, avoid repositioning a label once it has been applied.

**One-time assembly is now complete.**

# To the Rescue!

Squeeze this button to pop up the water blasters

Squeeze this button to rotate the helicopter blades

Turn the crank to reel in the rescue hook.

Slide any Rescue Heroes™ figure onto the connector in the cockpit

Store back packs here

PUSH

Figure sold separately.

## Water Blaster

- Push the water missiles into the water blasters until they “click” in place.
- Push the button at the back of the water blaster to launch a missile.

## Rescue Hook

- Slide the rescue hook onto the connector on any Rescue Heroes™ figure (sold separately), as shown.



## CAUTION

- Do not aim at eyes or face.
- Only use projectile supplied with this toy.
- Do not launch at people or animals.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

# Collect these other Rescue Heroes™ Figures!

Each sold separately and subject to availability.



**PowerMax™  
Billy Blazes™**  
Firefighter  
78369



**PowerMax™  
Rocky Canyon™**  
Mountain Hero  
78371



**Hydro Team™  
Billy Blazes™**  
Firefighter  
78374



**Hydro Team™  
Wendy Waters™**  
Firefighter  
78375



**Hydro Team™  
Bob Buoy™**  
Coast Guard  
78376



**Hydro Team™  
Gil Gripper™**  
Scuba Diver  
78378



**Flight Team™  
Rocky Canyon™**  
Mountain Ranger  
78379



**Flight Team™  
Ariel Flyer™**  
Pilot & Veterinarian  
78380



**Flight Team™  
Perry Chute™**  
Rescue Pilot  
78382

## Care

- Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse this toy.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.