



Sandy Beach™


Wind Surfer



- Fit the sail into the socket in the surfboard as shown.
- Insert the screw into the hole in the bottom of the surfboard. Tighten the screw with a Phillips screwdriver. Do not over-tighten.



#4 x 1/2" Screw

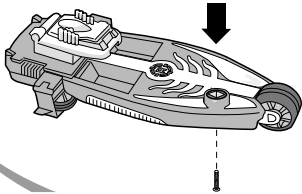

- Please keep this instruction sheet for future reference, as it contains important information.
- Adult assembly is required.
- Tool required for assembly: Phillips screwdriver (not included).

Fisher-Price

www.rescueheroes.com

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**,
8 AM-6 PM EST Monday through Friday. Hearing-impaired consumers
using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations, 636 Girard Avenue,
East Aurora, New York 14052.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

© 2003 Mattel, Inc. All Rights Reserved. ® and ™

designate U.S. trademarks of Mattel, Inc.