



# Sam Sparks™

*Firefighter*



**Model Number: B2505**

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires two "AA" batteries (included).

Adult assembly is required for battery replacement.

 
Tool needed for battery replacement:

Phillips screwdriver (not included).

**Fisher-Price®**

[www.rescueheroes.com](http://www.rescueheroes.com)

# ATTACHING THE BACKPACK AND THE TOOL ARM

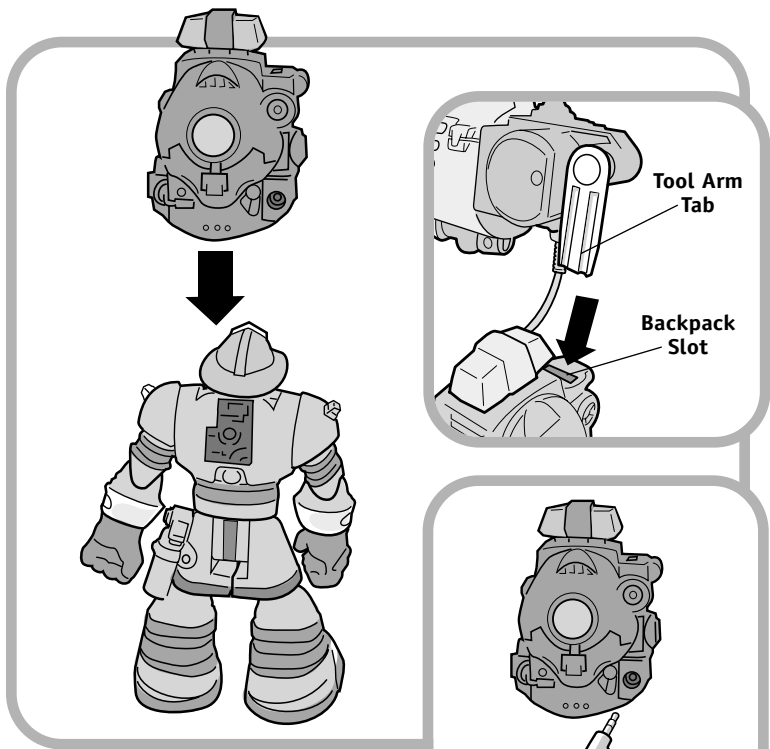


- Slide the backpack onto the connector on back of the figure as shown.
- Slide the tab on the tool arm into the slot on top of the backpack.
- Insert the plug from the tool arm into the socket in the backpack.

# TAKING RESCUE POWER TO THE MAX!



 PRESS

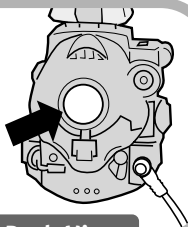


Back View

- Press the button on the backpack to activate the multi-stream blaze blaster!

# BATTERY REPLACEMENT

 For best performance, we recommend replacing the batteries that came with this toy with two, new alkaline "AA" (LR6) batteries.

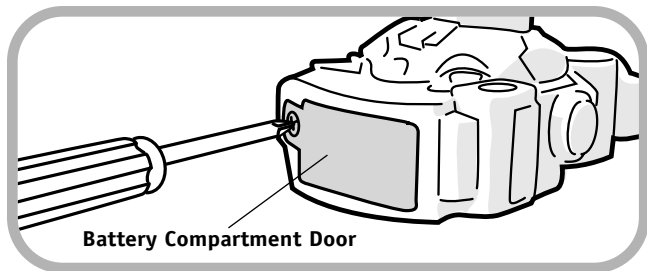

- Locate the battery compartment door on the bottom of the backpack.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert two new "AA" **alkaline** batteries, as indicated inside the battery compartment.

***Hint:** We recommend using **alkaline** batteries for longer battery life.*

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When actions on this toy become slow or stop, it's time for an adult to change the batteries!


## CARE

 - Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.  
©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

# BATTERY SAFETY INFORMATION

**For best results, use only alkaline batteries.**



**SHOWN ACTUAL SIZE**

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the backpack.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

# GET THE REST OF TEAM POWERMAX™!

Each sold separately and subject to availability.



**PowerMax™**  
**Billy Blazes™**  
Firefighter  
78369



**PowerMax™**  
**Jack Hammer™**  
Construction Expert  
78370



**PowerMax™**  
**Rocky Canyon™**  
Mountain Hero  
78371



**PowerMax™**  
**Jake Justice™**  
Police Officer  
78439



**PowerMax™**  
**Matt Medic™**  
Physician  
78500



**U.R.V.**  
**Ultimate**  
**Robotic Vehicle™ (U.R.V.)**  
78362



**PowerMax™**  
**Rock Miner™**  
Spelunker  
B4248

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**,  
8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using  
TTY/TDD equipment, please call 1-800-382-7470. Or, write to:  
Fisher-Price® Consumer Relations, 636 Girard Avenue,  
East Aurora, New York 14052.

For countries outside the United States: **Canada:** call **1-800-567-7724**, or write to:  
Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,  
Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.