



# Police Cruiser



Figures sold separately and subject to availability.

**Model Number: B3056**

Please keep this instruction sheet for future reference,  
as it contains important information.

Adult assembly is required.

Tool required for battery installation:

Phillips screwdriver (not included).

Requires three "AA" (LR6) **alkaline** batteries (not included).

 
**Fisher-Price**

[www.rescueheroes.com](http://www.rescueheroes.com)

## ASSEMBLY

**When applying labels, keep the following guidelines in mind:**

- 
- Light Bar**

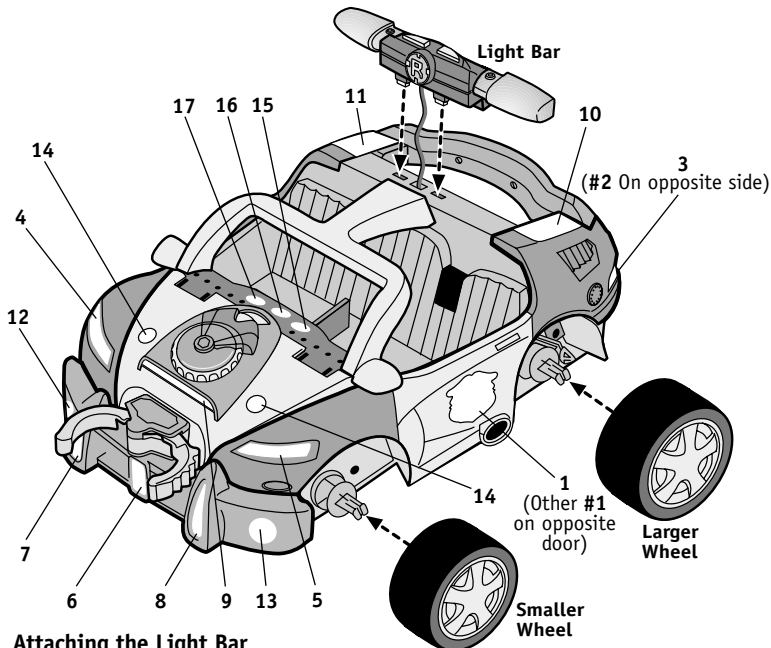

- Carefully feed the wire


- ### Attaching the Wheels
- Insert and “snap” the two larger wheels onto the back axles.

- Insert and “snap” the

- One-time assembly is now complete.**

100

# BATTERY INSTALLATION

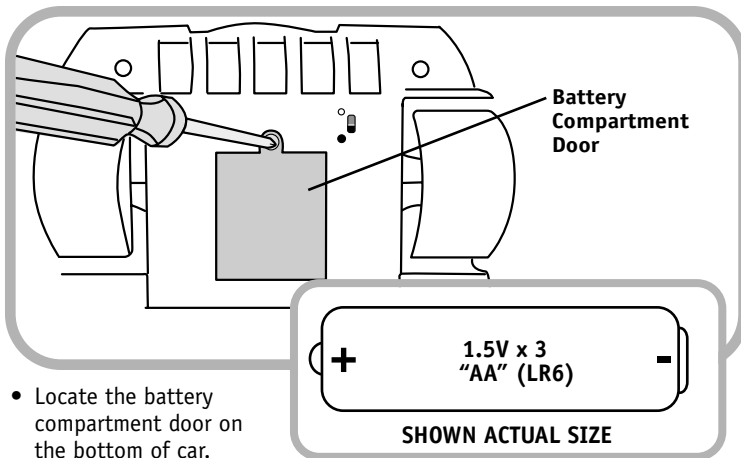 

- Locate the battery compartment door on the bottom of car.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three, "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

**Hint:** We recommend using **alkaline** batteries for longer battery life.


## Battery Safety Information

 Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the backpack.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.


- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## POWER SWITCH

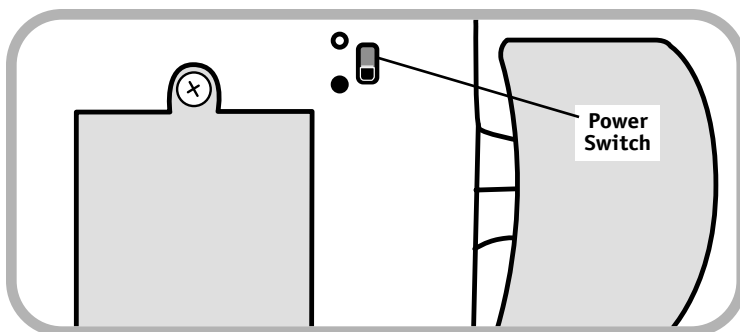

- Locate the power switch on the bottom of the toy.
- Slide the switch to the ● position to turn the toy on.  
When you're finished, slide the switch to the off ○ position.

## LET'S MOVE!

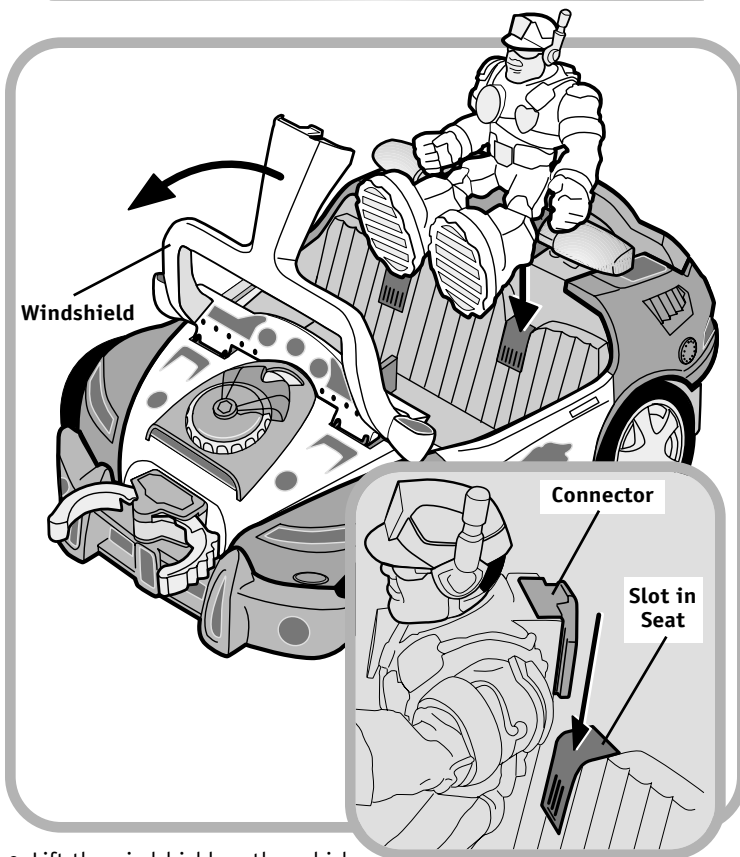 


- Lift the windshield on the vehicle.
- Slide the connector on the back of any Mission Select™ Rescue Heroes™ figure into the slot on the back of the seat.
- Return the windshield to its normal position.

**Hints** - For proper function, make sure the connector is completely inserted.

- Mission Select™ voice features work fully only with Mission Select™ Rescue Heroes™ figures.

# LET'S MOVE!

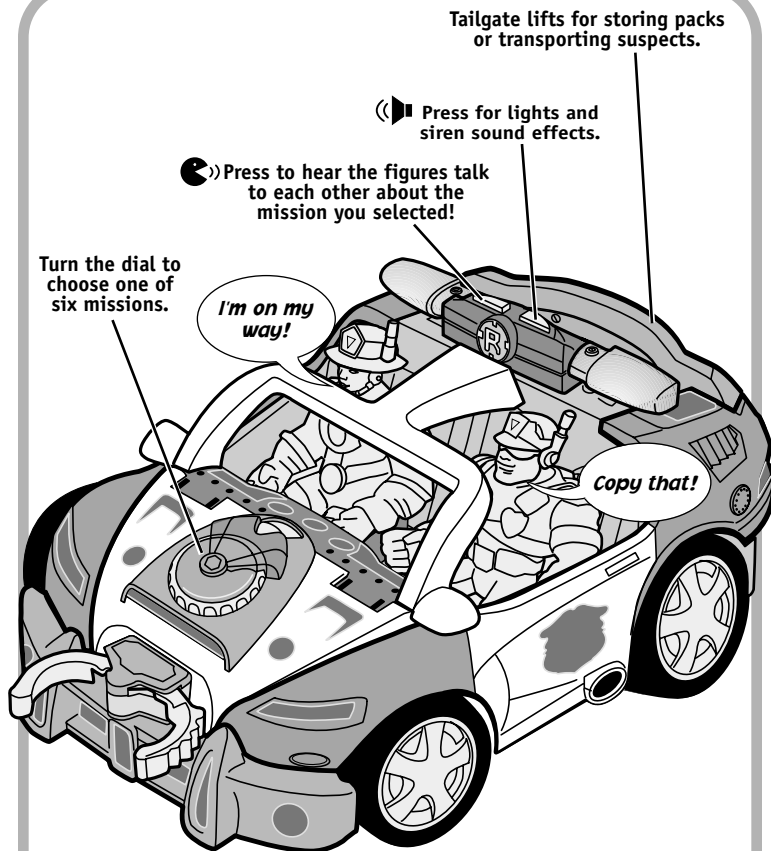 


# LAUNCH THE CUFFS!

## CAUTION

- Do not launch the cuffs at close range.
- Only use the projectile (cuffs) supplied with this toy.
- Do not fire at people or animals.
 
### Cuff Launcher

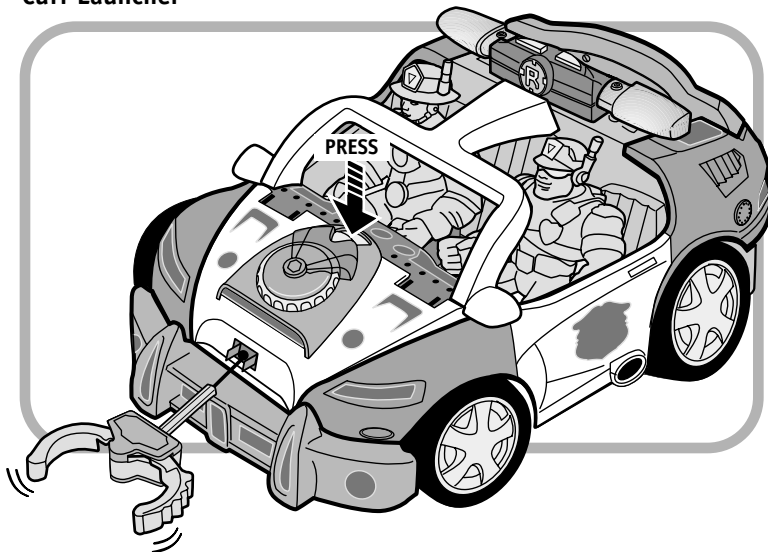

- To load the cuffs, grasp the key on the end of the cord near the back bumper and pull the cord back through the launcher until the cuffs lock in place.
- Press the release button on the hood to launch the giant handcuff.

# CARE

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at 1-800-432-5437, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

### For countries outside the United States:

**CANADA** Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

**AUSTRALIA** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

B3056pr-0920