

Extra
COLOR
DINOSAURS
DINO DRAW

Fisher-Price

 
Owner's Manual



Model Number: B8004



Let's Go!

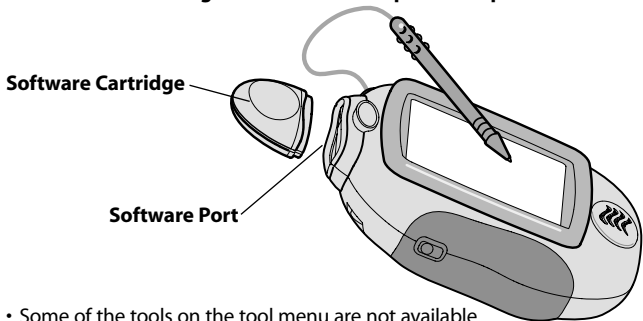Before inserting a software cartridge, turn power off! Insert the software cartridge into the software port. Turn power back on.



- Some of the tools on the tool menu are not available for use during some activities or games. If a tool is not available for use, you will hear a tone. The Home  and the Save It! (and Contrast Control)  tools are always available for use.
- Please keep this manual for future reference, as it contains important information.

IMPORTANT! If the tip of the stylus and the image on screen do not align, it's time to calibrate them! Please refer to page 32, Calibrating the Stylus.



Dinosaurs Dino Draw

Choose an activity or game from the Home Screen: **Dinosaur Mix-Up**, **Dinosaur Scene Starters**, **Dino Dig** or **What's for Dinner Dino?** Touch the activity or game on the screen with the stylus.



Dinosaur
Mix-Up



Dinosaur
Scene
Starters



 
Dino Dig




What's for
Dinner Dino?



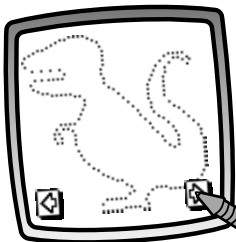

Dinosaur Mix-Up

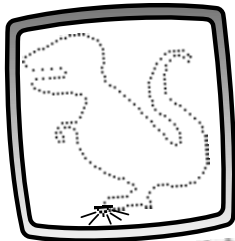 

- Touch the arrows on the bottom of the screen with the stylus to scroll through different dinosaur outlines.
- When you find one that you like, touch the screen with the stylus.



- The blinking arrow on the bottom of the screen encourages you to use the Stamp It! tool  on the tool menu. Touch the Stamp It! tool  with the stylus.

Hint: You can also connect the dots and make your own drawing using any of the other tools on the tool menu if you'd like!




**Heads, Eyes
and Mouths**

Bellies and Skins

Arms, Legs and Tails

Funny Accessories

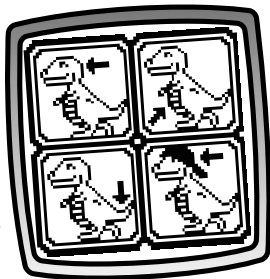

Choose from: heads, eyes and mouths; bellies and skins; arms, legs and tails; or funny accessories.

Hint: Try to find the body part that matches the dinosaur outline or choose a different one!



Heads, Eyes and Mouths




- Touch the arrows on the bottom of the screen with the stylus to scroll through different choices.
- When you find one that you like, touch the screen with the stylus.




- You're back to the dinosaur outline. Touch the screen with the stylus to place your stamper choice.



Bellies and Skins

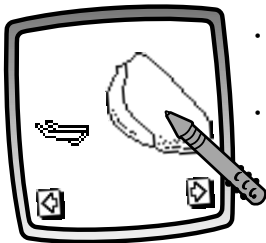

 
- Touch the arrows on the bottom of the screen with the stylus to scroll through different choices.
- When you find one that you like, touch the screen with the stylus.

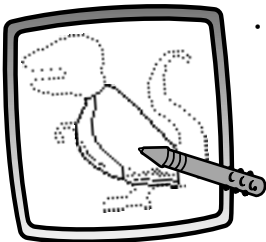


- You're back to the dinosaur outline. Touch the screen with the stylus to place your stamper choice.



 Arms, Legs and Tails

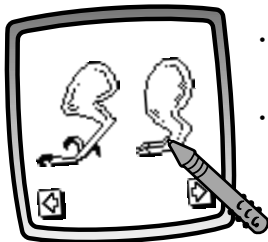

 
- Touch the arrows on the bottom of the screen with the stylus to scroll through different choices.
- When you find one that you like, touch the screen with the stylus.

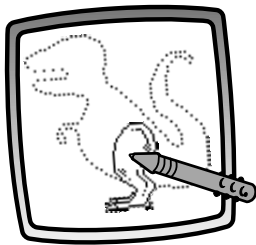


- You're back to the dinosaur outline. Touch the screen with the stylus to place your stamper choice.





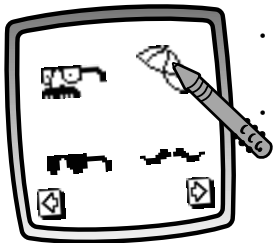

Funny Accessories

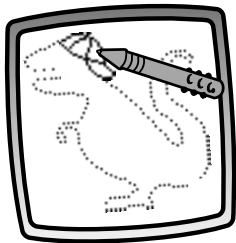 

- Touch the arrows on the bottom of the screen with the stylus to scroll through different choices.
- When you find one that you like, touch the screen with the stylus.

 


- You're back to the dinosaur outline. Touch the screen with the stylus to place your stamper choice.

Hint: When you finish a drawing, you can use Magic Wand Eraser , Full Screen Erase , Save It!  or touch Home  on the tool menu to return to the Home Screen.





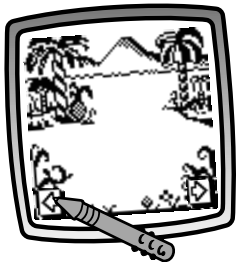





Dinosaur Scene Starters



- Touch the arrows on the bottom of the screen with the stylus to view different prehistoric backgrounds.
- When you find one that you like, touch the screen with the stylus.



- Use any of the tools on the tool menu: “Pencil” Tool ; Straight Line ; Shape Maker ; Stamp It! ; Magic Wand Eraser ; or Special Effects Selector  to make your drawing come to life!

 
Hint: Touch Home  on the tool menu with the stylus to return to the Home Screen at any time or Save It! (and Contrast)  to save/retrieve a drawing or adjust the contrast.

恐龙世界




Dinosaur Dig

Object of the game: Find all of the bones at the digging site to complete the skeleton of a dinosaur and bring it to life!

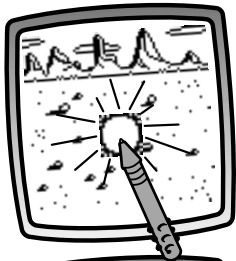

- You are at the digging site. Now, touch the flashing scope on the screen with the stylus.

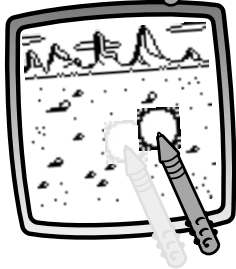

- Drag the scope with the stylus on the screen to search for fossils.


Hint: If the scope touches any edge of the screen, you will scroll to a different site.



- Keep dragging the scope until you find a fossil. Look! You found a fossil!
- Remove the stylus from the screen.




- Now it's time to complete the skeleton puzzle by placing your fossil in the correct place.

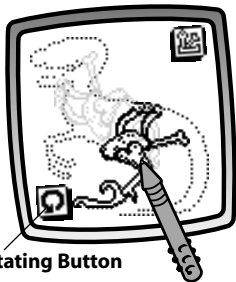

- Touch the rotating button with the stylus to turn the fossil piece. Now, drag it into place.

Rotating Button

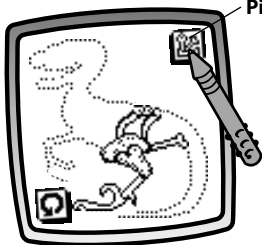


Pile of Bones Button

- Go back to the digging site. Touch the pile of bones button with the stylus.



 - You're back at the digging site to find more fossils to complete the skeleton puzzle.

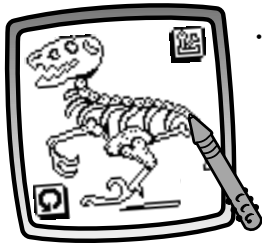

- After you've found the last fossil, it's time to complete the skeleton puzzle. Put the last piece in place!




- Look, the dinosaur's come to life!

Hint: When the dinosaur stops moving, you can add your own markings to make a drawing. You can use any or all the tools on the tool menu!



 
- Touch the screen with the stylus.
- Now, touch the pile of bones button with the stylus. You're back to the digging site to search for a new dinosaur skeleton (there are six different dinosaur skeletons).

Hint: Touch Home  on the tool menu with the stylus to return to the Home Screen at any time.

恐龙骨架拼装玩具



What's for Dinner Dino?

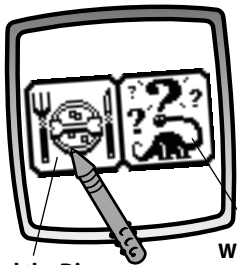

- Touch the screen with the stylus to select: *Feed the Dino* to learn about what each dinosaur eats; or *Which Dino?* to answer questions about what each dinosaur eats or the dinosaur's name.

Feed the Dino

Which Dino?



Feed the Dino



- Look at the name of the dinosaur and its picture. What do you think it eats?

Meat Eater




Plant Eater



- Touch either the meat eater button or the plant eater button with the stylus to answer the question.



- Watch as the dino keeper offers the food to the dinosaur.
 - If you chose correctly, the dino keeper shouts for joy!
 - If you choose incorrectly the dinosaur shakes its head and the dino keeper ducks; or the dinosaur shakes its head and the dino keeper scratches his head.

Hint: Learn what all 10 dinosaurs eat and each dinosaur's name. To go to the Which Dino?, touch Home  on the tool menu; touch the activity What's for Dinner Dino?  and then touch Which Dino? .




Which Dino?



- Watch, as three names of dinosaurs appear on the screen along with a picture of a dinosaur or a picture of what the dinosaur eats. Which name matches the dinosaur or the food it eats?



- Touch one of the names to match it to the picture of the dinosaur or what it eats.
 - If you choose correctly, you'll see a fun animation!
 - If you choose incorrectly, you'll hear a sound effect. Try again!

Hint: Touch Home  on the tool menu with the stylus to return to the Home Screen at any time.



 
 
Tool Menu


 
 
 



"Pencil" Tool



Touch for freestyle drawing or writing.

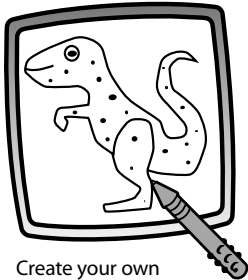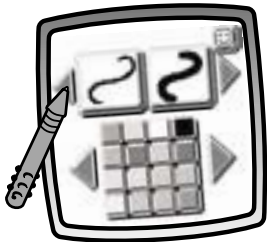

- Touch the arrows to choose the type of marking. Choose  or  or  or .
- Touch the arrows to choose a color palette. Now, choose a color for your "pencil" tool.
- Touch  to save your choices.

 
Create your own drawing or write a message with the stylus.






Straight Line

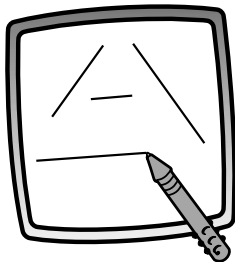

Touch to make straight lines.



- Touch the upper arrows to choose the type of line. Choose  or .
- Touch the lower arrows to choose a color palette. Choose a color for the line.
- Touch  to save your choices.

Touch the screen with the stylus. Now, drag the stylus on the screen and stop. Look – a straight line!

 
Hint: Make your own shapes or create your own connect-the-dots.

 
 



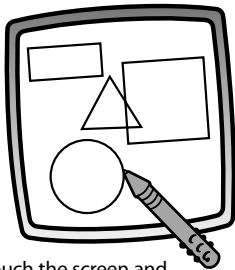 
Shape Maker



Touch to make shapes.

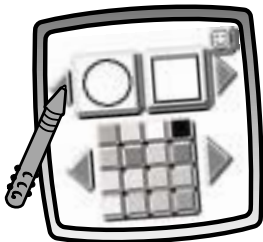

- Touch the upper arrows to choose a shape. Choose  or .
- Touch the lower arrows to choose a color palette. Choose a color for your shape.
- Touch  to save your choices.



Touch the screen and drag the stylus to make small or large shapes.

Hint: To make a triangle, touch the screen and drag the stylus to make the base of the triangle. Then, touch the base line with the stylus and drag it to complete the triangle.



Stamp It!



Touch for stamper art.




Touch the arrows on the bottom of the screen with the stylus to scroll through stamper designs.



Touch the screen with the stylus to choose a stamper.



Touch the screen as many times as you like with the stylus for lots of stamper fun!

Hint: To choose more than one stamper, simply touch the Stamp It!  tool; touch the arrows to scroll through the different stampers; and touch the screen with the stylus to choose a stamper. Look – you're back to your activity.







 
Magic Wand Eraser




Touch to make your stylus an eraser or go to special effects!




- Choose eraser  , magic effects  or undo .
- Touch  to save your choice.

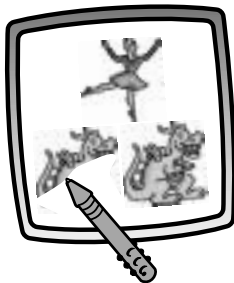


If you chose eraser  , use your stylus to erase any part of what's on the screen.



If you chose magic effects , you'll need to select a background layer. Touch the arrows on the bottom of the screen with the stylus to scroll through background choices. After you choose a background layer, use your stylus to "scratch" through your creation to reveal the hidden image.



 
If you chose undo , whatever you have done to your picture is gone!



Full Screen Erase



Touch to choose an animated full screen erase with cool sound effects.

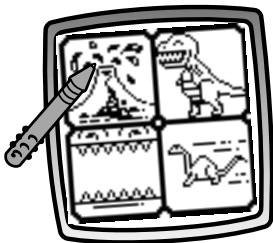

Touch the screen with the stylus to choose the effect.



Watch and listen as your drawing disappears.

 
Hint: After using the full screen erase, you're still in the same activity using the same tool.




Special Effects Selector



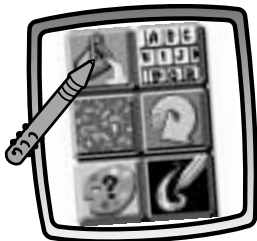


Touch to choose a special effect.



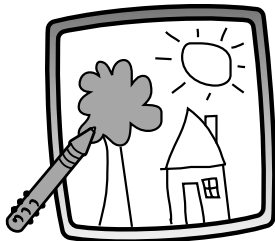 

  
Choose an effect: Paint Bucket, Typist, Confetti, Rotator, Color Surprise and Scratchboard.

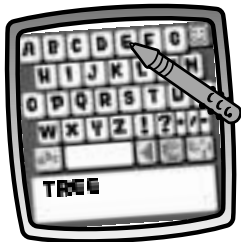


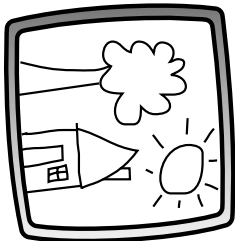 
Touch  with the stylus. Choose an effect and the color. Touch  to save your choices. To fill in a selected drawing area, select the area.




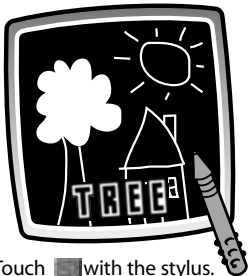 
Touch  with the stylus. To create your own caption, touch each letter of each word with the stylus. Touch  to save your caption. Touch the bottom of the screen with the stylus to see your caption.

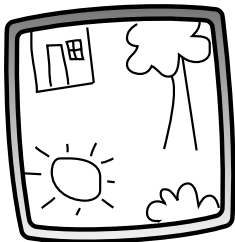


Touch . Your picture is all mixed-up! Choose the confetti tool again to mix-up your picture in smaller pieces.




Touch  with the stylus.
Look, your picture “turned”!



Touch  with the stylus.
Surprise!



Touch  with the stylus.
Use the stylus to remove the
“black” coating on the screen.






Save It! (and Adjust Contrast)



Touch to save or retrieve your drawing;
or adjust the contrast (at any time).



Touch **IN** file  to save; touch **OUT** file  to retrieve;
touch contrast  to increase or decrease lightness
or darkness of the image on the screen.

Hints:

 
- You can save one picture at a time! Each time you save a picture, it replaces the one already there.
- After you save a picture, it will appear on your screen again. To make a new drawing, choose another activity/tool.



Home



Touch to go back to the Home Screen.

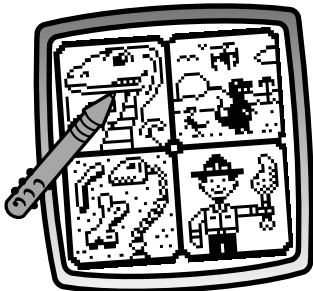


Choose an activity: Dinosaur Mix-Up, Dinosaur Scene Starters, Dino Dig or What's for Dinner Dino?






 
Calibrating the Stylus

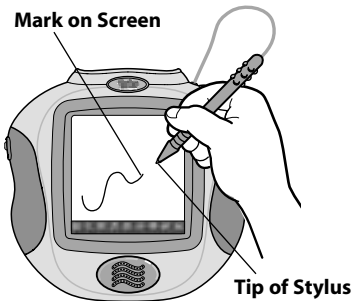
Mark on Screen

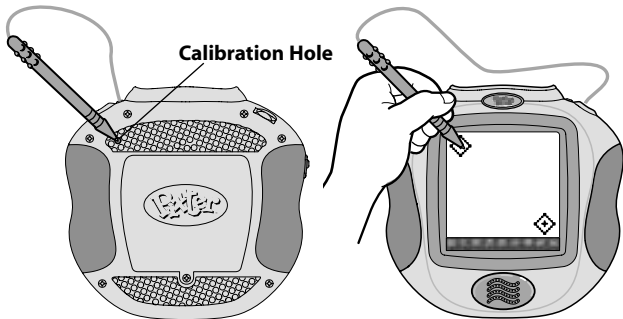 

IMPORTANT! The mark made on your screen from the stylus and the location of the tip of the stylus may not align. When this happens, you need to calibrate the stylus.



- Turn Pixter® power on. Wait until you see the Home Screen.
- Turn Pixter over and locate the calibration hole.
- Insert, push and hold the stylus in the calibration hole. Turn Pixter over so that you can see the screen.
- When you see two , remove the stylus from the calibration hole.
- First touch the  in the upper left corner with the tip of the stylus.
- Then, touch the  in the lower right corner with the tip of the stylus.

Hint: After calibrating your screen, the contrast resets to the mid-level. To change the contrast on the screen, touch the Save It!  tool.



Care

- Keep water, sand and dirt off of this cartridge.
- Keep this cartridge away from direct sunlight and excessive heat.
- Do not immerse the cartridge. Simply wipe the outside of the cartridge with a cloth to clean.
- This cartridge has no consumer serviceable parts. Please do not take this cartridge apart.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Pixter® Color Dinosaurs Dino Draw is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.



Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For countries outside the United States:

CANADA

Questions? **1-800-567-7724**, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



www.fisher-price.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2003 Mattel, Inc. All Right Reserved. ® and ™ designate
U.S. trademarks of Mattel, Inc.

Printed in China.

B8004pr-0920